

JD 1790 & 1795 FRONT FOLD PLANTER

Model No.'s to Order for each planter configuration

		16 Row 30"	31 Row 15" 32 Row 15"
Unit Mounted	2959-003 (2" offset fert. injection)	16	31 or 32
Liquid Fertilizer Coulters	w/ 2967-180A (Residue Manager for 2959-003) Optional	16	N/A 15"
	or 2962-003A and 2962-004A RUMDDFO w/ 2962-005 (Residue Manager for 2962-003/-004) Optional Note: Long parallel arm option required with 2967-180,2962-005 or 2968-020A-R-LB/-L-LB Row Unit mount fits 1700, 7200 & 7300 & 2968-132 10" wheel or 2968-133 11" wheel assembly	16	31 or 32
2960 UNIT MOUNTED CONSERVATION COULTERS ONLY	2960-034 Coulters w/ U.N.T. bracket** or 2960-127 (coulters only)** Choice of blade	16	31 or 32
CLEAN UP CREW ONLY	2940-001 Pneumatic assembly or 2967-029A Short U.N.T. or 2967-081 (R.M. attachment for JD tool hanger) or 2967-052 Screw Adjust^ or 2967-057 Screw adjust residue manager^	16	See page 26
	2940-002 Pneumatic assembly narrow row or 2967-054 Narrow Row Screw Adjust^ or 2967-056 Narrow row screw adjust^ or 2967-013A Short Narrow U.N.T. 2967-048 Narrow row unit mounted Residue Manager	16	31 or 32
COMBO ATTACHMENT	2967-007 U.N.T. Residue Manager kit or 2967-042A Titan Residue Manager for JD Coulters or 2967-115 (for use with 2960-015 coulters) Optional 2967-070 (Quick adjust)	16	See page 26
ATTACHMENTS LONGER THAN 22" FROM ROW UNIT FACE PLATE REQUIRE LONG PARALLEL ARM OPTION CODE FROM MANUFACTURER.		REQUIRED	
COULTER/RM COMBO W/ JD LIQ FRM MT FERT. COULTER	2960-127 (coulters only)** or 2960-034 Coulters w/ U.N.T. bracket** Choice of blade	16	31 or 32
	w/ 2967-007 U.N.T. Residue Manager kit or 2967-042A Titan Residue Manager for JD Coulters or 2967-115 (for use with 2960-015 coulters) Optional 2967-070 (Quick adjust)	16	See page 26
IMPORTANT	Long parallel arm option package from planter manufacturer is required		

Some planter frame and row unit combinations result in the fertilizer opener offset from 4" - 6" of the center line of the true V-opener.

**Blade Choices refer to price book.

^ Quantity to order varies depending on which parallel arm "ordering code" the planter is equipped.