

# JD 1790 & 1795 DOUBLE CROP SOYBEAN SEEDING SYSTEM

Recommendations made here are NOT to be used in No-till cornstalk residue.

Use of Residue Managers in 15" Rows for planting soybeans directly into harvested wheat stubble.

Coulter/Residue Manager Combination - 1790 planter must be equipped with ordering code 5415. Included in code 5415 are long parallel arms, long drive cables, vacuum hoses, seed delivery hoses and down force spacers.

<b>Model No's to Order for each planter configuration</b>		Quantity to order for each planter	
		<b>23/24R (15")</b>	<b>31/32R (15")</b>
<b>2960 UNIT MOUNTED CONSERVATION COULTERS ONLY</b>	2960-034 Coulter w/ U.N.T. bracket ** or 2960-127 (coulter only)**	<b>23/24</b>	<b>31/32</b>
	<b>CLEAN UP CREW ONLY</b> 2940-001 Pneumatic assembly or 2940-002 Pneumatic assembly narrow row or 2967-013A Short Narrow U.N.T. or 2967-028 Universal unit mounted residue manager or 2967-029A Short U.N.T. or 2967-048 Narrow row unit mounted Residue Manager or 2967-052 Screw Adjust^ or 2967-054 Narrow Row Screw Adjust^ or 2967-056 Narrow Row Screw Adjust (Long arm)^ or 2967-057 Screw Adjust (Long arm)^ or 2967-081 (R.M. attachment for JD tool hanger)	<b>23/24</b>	<b>31/32</b>
<b>Residue Manager Combinations</b>	2967-007 U.N.T. Residue Manager Kit or 2967-042A Titan Residue Manager for JD Coulter or 2967-115 (for use with 2960-127 coulter) or 2967-070 (Quick adjust) <span style="float: right;">Optional</span>	<b>23/24</b>	<b>31/32</b>

\*\*Blade Choices refer to price book.

^ Quantity to order varies depending on which parallel arm "ordering code" the planter is equipped