



# SCREW ADJUST

RESIDUE MANAGER

OPERATOR'S MANUAL

PARTS IDENTIFICATION

2565-729\_REV\_I • 11/2016

**YETTER MANUFACTURING CO.**

*FOUNDED 1930*

Colchester, IL 62326-0358

Toll free: 800/447-5777

309/776-3222 (Fax)

Website: [www.yetterco.com](http://www.yetterco.com)

E-mail: [info@yetterco.com](mailto:info@yetterco.com)

**YETTER**

## FOREWORD

You've just joined an exclusive but rapidly growing club.

For our part, we want to welcome you to the group and thank you for buying a Yetter product.

We hope your new Yetter products will help you achieve both goals-increase your productivity and increase your efficiency so that you may generate more profit.

This operator's manual has been designed into four major sections: Foreword, Safety Precautions, Installation Instructions and Parts Breakdown.



This **SAFETY ALERT SYMBOL** indicates important safety messages in the manual. When you see this symbol, be alert to the possibility of **PERSONAL INJURY** and carefully read the message that follows.

The word **NOTE** is used to convey information that is out of context with the manual text. It contains special information such as specifications, techniques and reference information of a supplementary nature.

The word **IMPORTANT** is used in the text when immediate damage will occur to the machine due

to improper technique or operation. Important will apply to the same information as specified by note only of an immediate and urgent nature.

It is the responsibility of the user to read the operator's manual and comply with the safe and correct operating procedure and to lubricate and maintain the product according to the maintenance schedule in the operator's manual.

The user is responsible for inspecting his machine and for having parts repaired or replaced when continued use of the product would cause damage or excessive wear to the other parts.

It is the user's responsibility to deliver his machine to the Yetter dealer who sold him the product for service or replacement of defective parts, which are covered by the warranty policy.

If you are unable to understand or follow the instructions provided in this publication, consult your local Yetter dealer or contact:

### **YETTER MANUFACTURING CO.**

309/776-4111

800/447-5777

309/776-3222 (FAX)

Website: [www.yetterco.com](http://www.yetterco.com)

E-mail: [info@yetterco.com](mailto:info@yetterco.com)

## WARRANTY

Yetter Manufacturing warrants all products manufactured and sold by it against defects in material. This warranty being expressly limited to replacement at the factory of such parts or products as shall appear to be defective after inspection. This warranty does not obligate the Company to bear cost of labor in replacement of parts. It is the policy of the Company to make improvements without incurring obligations to add them to any unit already sold. No warranty is made or authorized to be made, other than herein set forth. This warranty is in effect for one year after purchase.

DEALER: \_\_\_\_\_

**Yetter Manufacturing warrants its own products only and cannot be responsible for damages to equipment on which mounted.**

## SAFETY

### A brief description of signal words that may be used in this manual:

**CAUTION:** Used as a general reminder of good safety practices or to direct attention to unsafe practices.

**WARNING:** Denotes a specific potential hazard.

**DANGER:** Denotes the most serious specific potential hazard.

### SAFETY PRECAUTIONS

You can make your farm a safer place to live and work if you observe the safety precautions given. Study these precautions carefully and insist that those working with you and for you follow them.

Finally, remember this: an accident is usually caused by someone's carelessness, neglect or oversight.



#### WARNING

Never clean, lubricate or adjust a machine that is in motion. Always lower or block the implement before performing service.

If the machine must be serviced in the raised position, jack or block it up to prevent it from accidentally falling and injuring someone.

Do not allow riders on the tractor or implement.

Use speeds and caution dictated by the terrain being traversed. Do not operate on any slope steep enough to cause tipping or loss of control.

Be sure all personnel are clear of the immediate area before operating.

Read and understand the operator's manual and require all other persons who will operate the equipment to do the same.

Be familiar with all tractor and implement controls and be prepared to stop engine and implements quickly in an emergency.



#### CAUTION

Consult your implement and tractor operator's manual for correct and safe operating practices.


Beware of towed implement width and allow safe clearance.

**FAILURE TO HEED MAY RESULT IN PERSONAL INJURY OR DEATH.**

# TABLE OF CONTENTS

Forward.....	2
Warranty.....	2
Safety Information.....	3
Table of Contents.....	4
Optional Equipment.....	4
Bolt Torque.....	5
Operation Precautions.....	6
Planter Adjustments.....	7
Installations Instructions.....	8-10
Operation.....	11
Maintenance.....	11-17
Parts Identification.....	18-35

## OPTIONAL EQUIPMENT

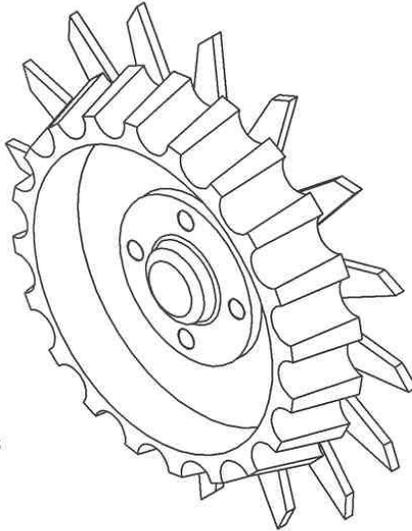

S280-3

2967-186 FLOATER WHEEL  
L.H. ASSEMBLY SHOWN  
(2) REQUIRED PER ROW

# BOLT TORQUE

## Mounting bolts and hardware

Before operating the Residue Manager for the first time, check to be sure that all hardware is tight. Check all hardware again after approximately 50 hours of operation and at the beginning of each planting season.

All hardware used on the Residue Manager is Grade 5 unless otherwise noted. Grade 5 cap screws are marked with three radial lines on the head. If hardware must be replaced, be sure to replace it with hardware of equal size, strength and thread type. Refer to the torque values chart when tightening hardware.





**Important:** Over tightening hardware can cause as much damage as when under tightening. Tightening hardware beyond the recommended range can reduce its shock load capacity.

The chart below is a guide for proper torque. Use it unless a specified torque is called out elsewhere in the manual.

Torque is the force you apply to the wrench handle or the cheater bar, times the length of the handle or bar.

Use a torque wrench whenever possible.

The following table shows torque in ft. lbs. for coarse thread hardware.

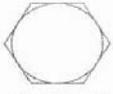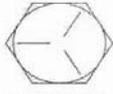BOLT DIA. AND THREADS PER INCH	 GRADE 2	 OR  GRADE 5 A-325	 GRADE 8
1/4	6	10	14
5/16	12	20	30
3/8 - 16	25	35	50
7/16 - 14	35	55	80
1/2 - 13	55	85	125
9/16 - 12	75	125	175
5/8 - 11	105	170	235
3/4 - 10	185	305	425
7/8 - 9	170	445	690
1-8	260	670	1030
1 1/8 - 7	365	900	1460
1 1/4 - 7	515	1275	2060
1 3/8 - 6	675	1675	2700
1 1/2 - 6	900	2150	3500
1 3/4 - 5	1410	3500	5600

Lubricate all bearings and moving parts as assembled and make certain that they work freely.



**WARNING:** Never work around the toolbar/implement while in a raised position without using safety lockups.



**CAUTION:** The Residue Managers are very heavy and sharp. Pay extra attention to lifting techniques while handling and or maneuvering the opener during assembly. Failure to do so may lead to personal injury.

# OPERATION PRECAUTIONS

## STOP

Read this before using the Yetter product.

### - MACHINE OPERATION

**IMPORTANT:** failure to properly set the planter frame height and levelness can result in less than successful operation of the planter and the Yetter product and may result in damaged equipment. All operators should read and thoroughly understand the instructions given prior to using the Yetter product.

NOTE: **DO NOT** use this product if the planter is not adjusted properly!

Leveling the planter:

With the planter lowered to proper operating height (**Usually 20"-22"**).




**Read the planter operator's manual for recommended setting.** Check to be sure the toolbar and row unit parallel arms are level fore and aft. **Re-check** when the planter is in the **field** and has been **fully loaded** with seed, fertilizer, granular chemicals, etc. Also, a field check with a bubble level on the frame should be made of the hitch height to ensure level operation front to back.

It is important for the planter to operate level laterally. Tire pressure must be maintained at pressures specified by the manufacturer.

Field and actual planting conditions change and will dictate planter frame heights. You must ensure that the row unit parallel arms are approximately parallel with the ground.





**IMPORTANT:** For proper operation of the planter attachments and row units, it is imperative that the planter toolbars and row unit parallel arms be level side-to-side and front-to-rear. The toolbar frame should operate at a 20"-22" height from the **planting surface**. Check the manufacturer's operator's manual for instructions on how to adjust the frame height and levelness.

# PLANTER ADJUSTMENT

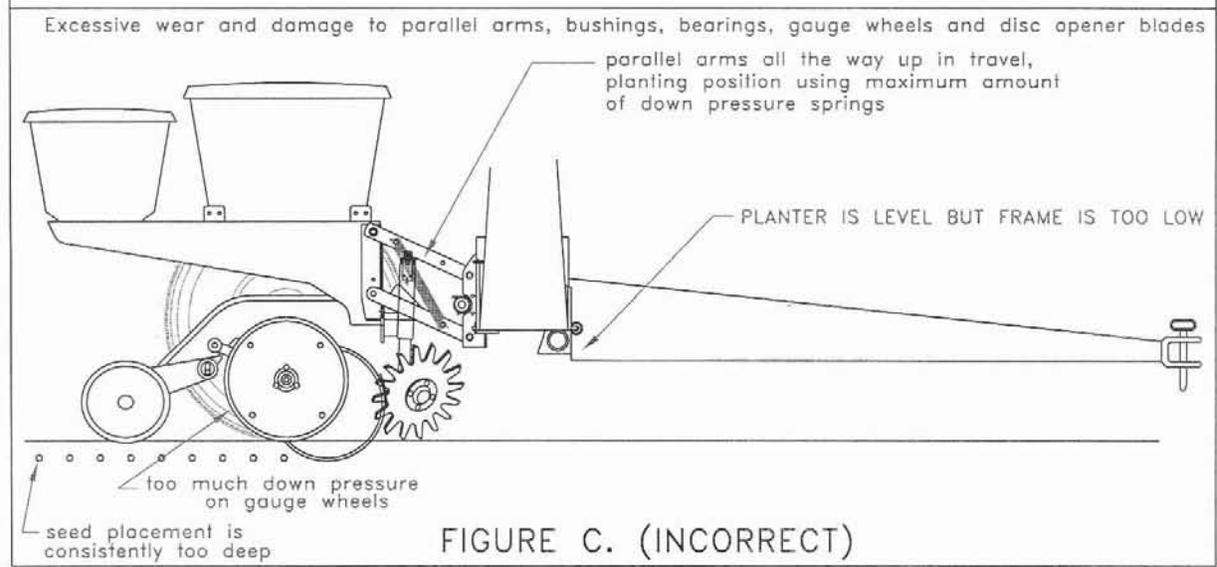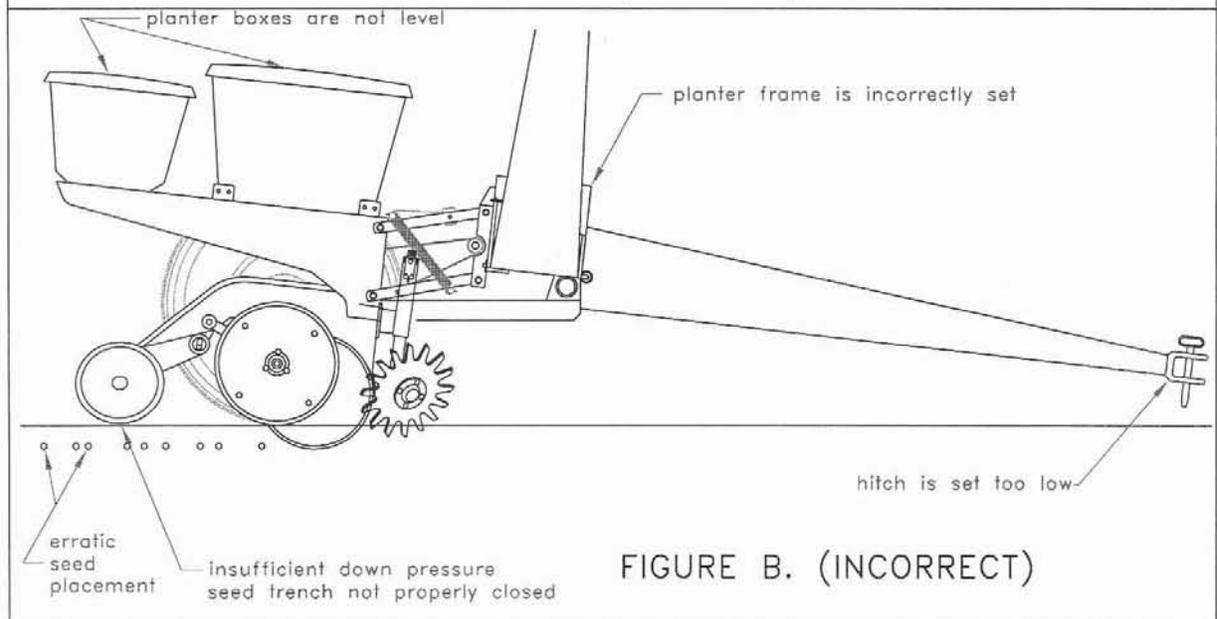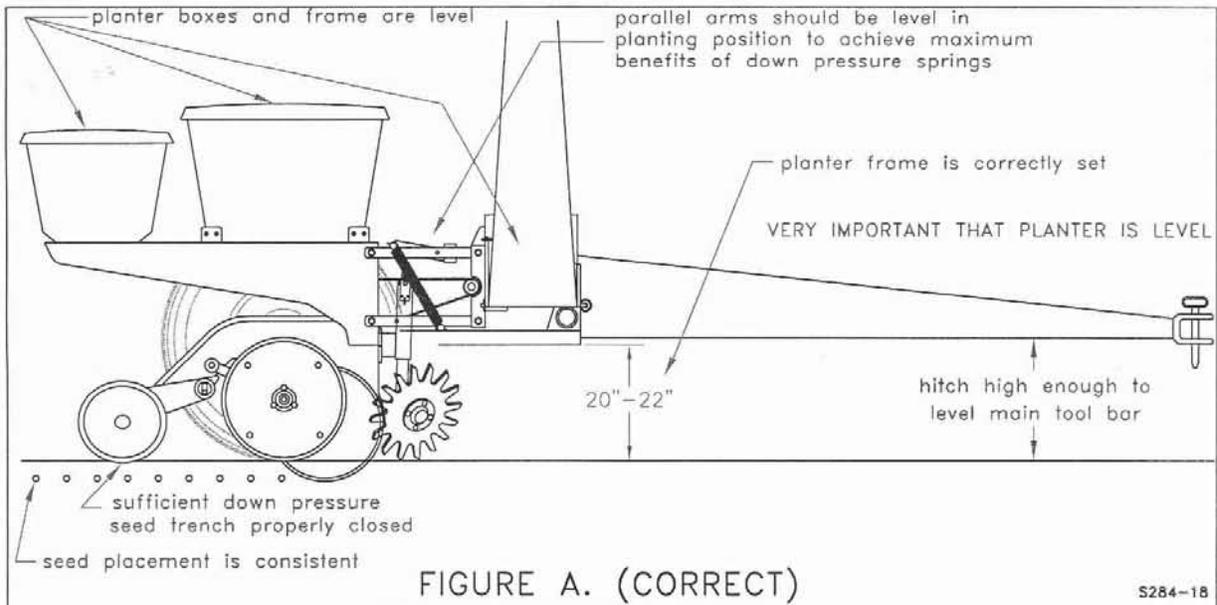

# INSTALLATION INSTRUCTIONS

**STEP 1.** Choose the mounting hole in which to attach the R.M. wheels. Attach the R.M. wheels/hub/shield assemblies to the 2966-206-stem adjustment bracket using 5/8" D-bolts, lock washers and hex nuts. Adjust the bearing shield to top dead center, rotate slightly forward. Torque to 150 ft./lbs.

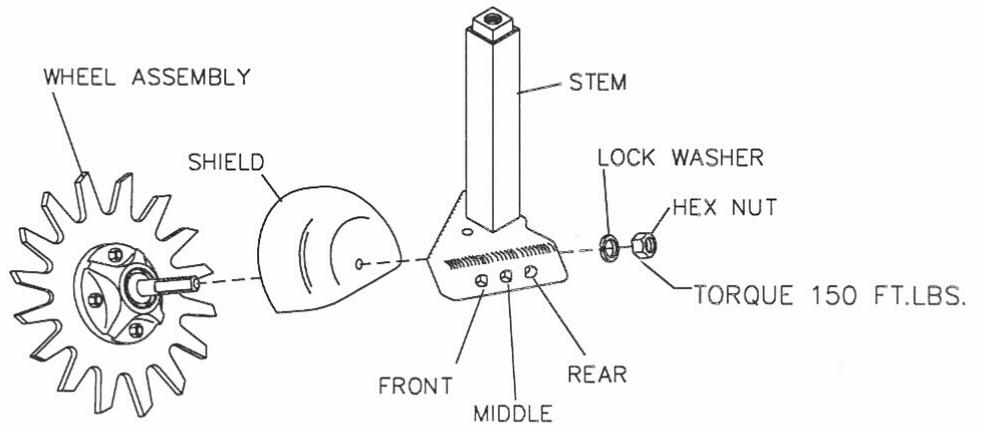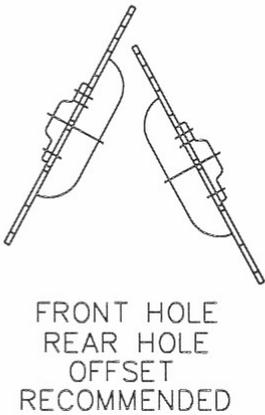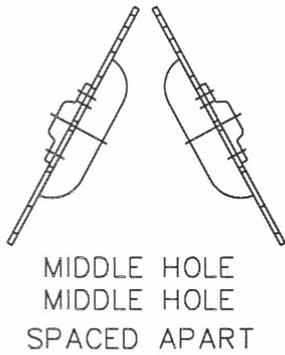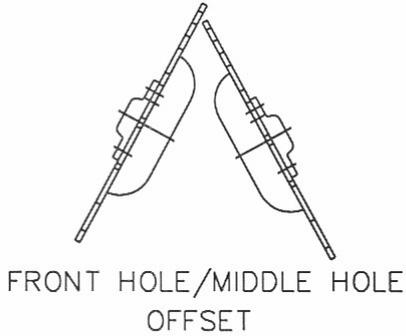


1727-3

UPDATED 03/19/09

# INSTALLATION INSTRUCTIONS

**STEP 2A.** Attach the screw adjust residue manager assembly to the planter row unit using 2) 1/2" x 3-1/2" hex bolts and 1/2" lock nuts.

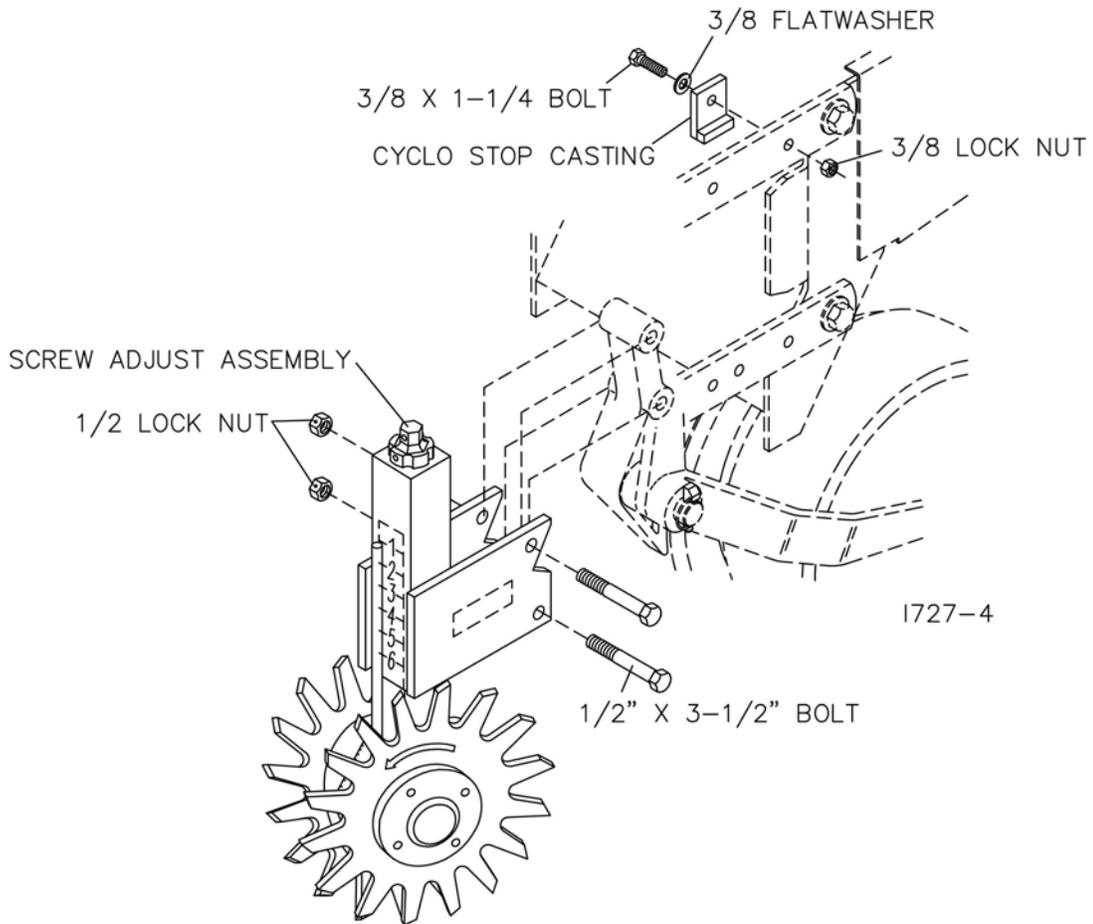


2967-053


# INSTALLATION INSTRUCTIONS

**STEP 2B.** Attach the screw adjust residue manager assembly to the planter row unit using 3) 1/2" x 1-1/2" hex bolts, flat washers and 1/2" lock nuts.

2967-052

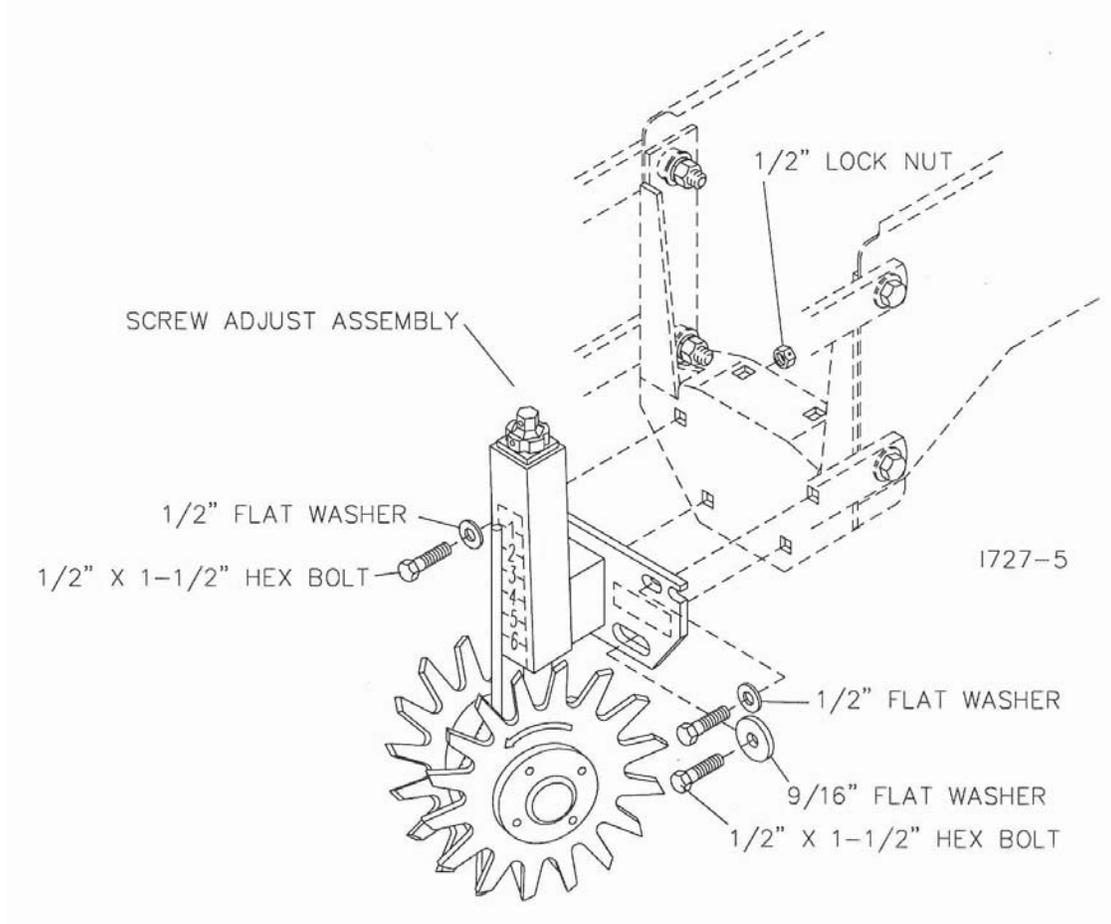

**STEP 3.** Align the residue wheels to the planter opener blades. The residue manager mount bracket has slotted holes in the faceplate to move the residue manager wheels side to side; to be able to center the wheels on the furrow. Fully tighten mounting bolts. Torque to 85 ft. lbs.

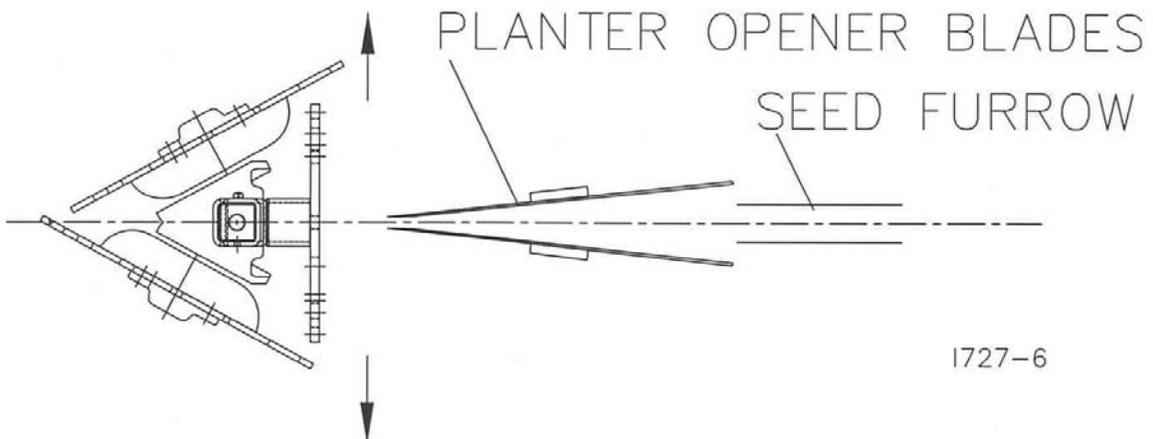

## OPERATION

Be sure planter frame is **LEVEL** and at the height stated in the planter operation manual.

The **Residue Manager** is designed to work in heavy residue situations especially where minimum soil movement is required. Depending on conditions and objectives, the 2967 Residue Manager can be set shallow with the teeth only engaged in the residue so as to clear heavy residue with minimal soil disturbance. Residue Managers are not recommended when surface application pre-plant herbicide is used prior to planting.

### ROW CLEANER DO'S AND DON'TS

1. **DO NOT** move soil, Residue Managers are designed to move crop residue only.
2. **DO NOT** operate planter at slow speeds, ground speed affects how aggressive the spoke wheels are; operate at sufficient speed to maintain good residue flow.
3. **DO NOT** expect 100% of crop residue to be cleared, it is not necessary and would necessitate engaging the soil. The width of path cleared depends on ground conditions, depth setting and ground speed.
4. **DO** expect to see wheels occasionally quit turning, indicates ideal (shallow) setting which is not moving dirt.
5. **DO** expect the potential to bend or break teeth on wheels in excessively rocky conditions.
6. **DO** adjust planter frame height 20"-22" and level drawbar correctly. Very important to ensure planter unit will follow ground contours properly.
7. **DO** adjust planter row unit down pressure kit correctly to prevent excessive depth.
8. **DO** expect finely tilled/soft soils to require adjustment due to lack of resistance, the wheel must turn to move residue.
9. **DO** expect more adjustments to be required in finely tilled or soft soils. In these conditions, the planter may lose flotation requiring adjustment of the residue manager to shallower positions.

### MAINTENANCE

After a few hours use, check all bolts to make sure they are tight.

**STEP 1.** Regularly inspect the residue manager for loose or worn bolts. Repair and replace as needed. Use "BLUE" thread lock (removable) if bolts that secure the detent plate become loose from vibration.

**STEP 2.** Lubricate the screw adjust using #2 multi-purpose polyurea grease every 50 hours.

# MAINTENANCE

## STEP 3. BEARING ASSEMBLY AND LUBRICATION

### Practice Safety

Understand and practice safe service procedures before doing work. Follow ALL the operating, maintenance and safety information in the equipment operator manual. Clear the area of bystanders, especially small children, when performing any maintenance or adjustments. Keep work area clean and dry. Use adequate lighting for the job. Use only tools, jacks and hoists of sufficient capacity for the job.


Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven moving and rotating parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground and stop the engine. Remove the key. Wait for all moving parts to stop before servicing, adjusting, repairing or unplugging.

Securely support any machine elements with blocks or safety stands that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damaged equipment immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.


Make sure all guards are in place and properly secured when maintenance work is completed.

### Assembly

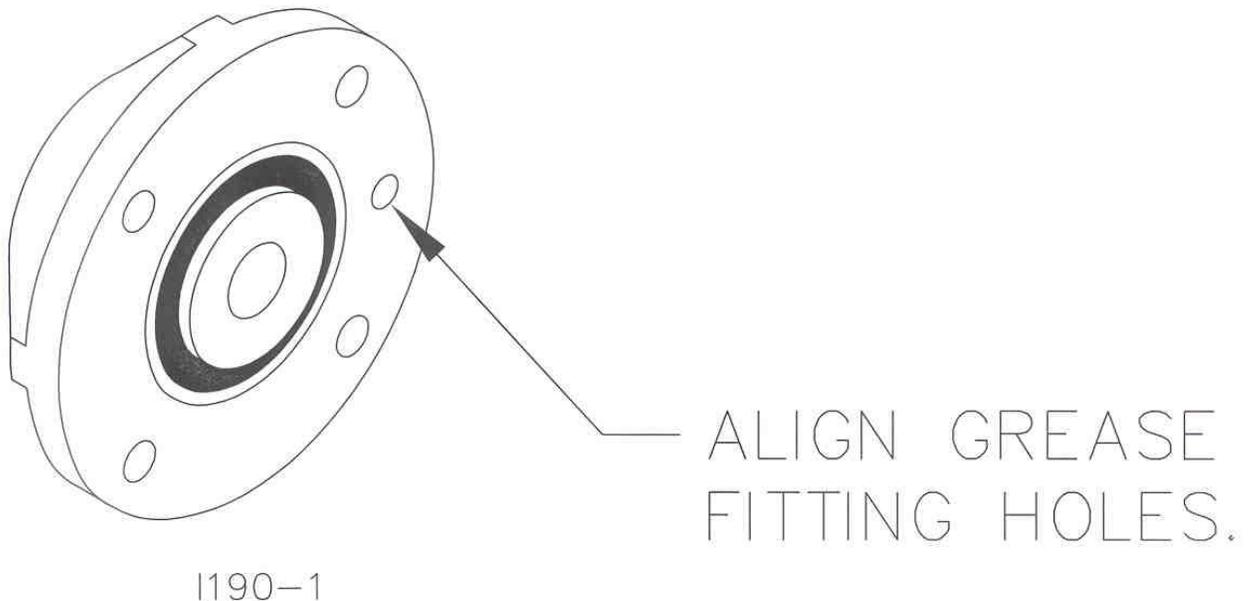


## MAINTENANCE


ALIGN THE HUB CAP GROOVE,  
WITH THE WHEEL SLOT AND  
GREASE FITTING

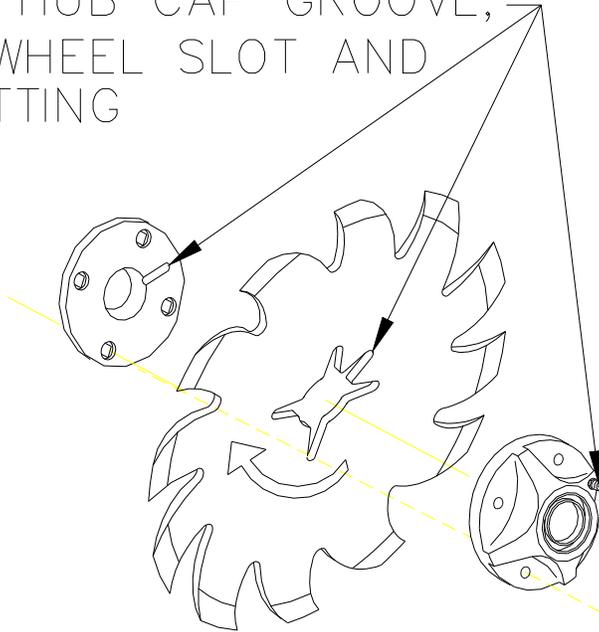

**NOTE:** Be certain to align the grease fitting with the slot in the wheel and the hubcap so that the grease can flow freely.

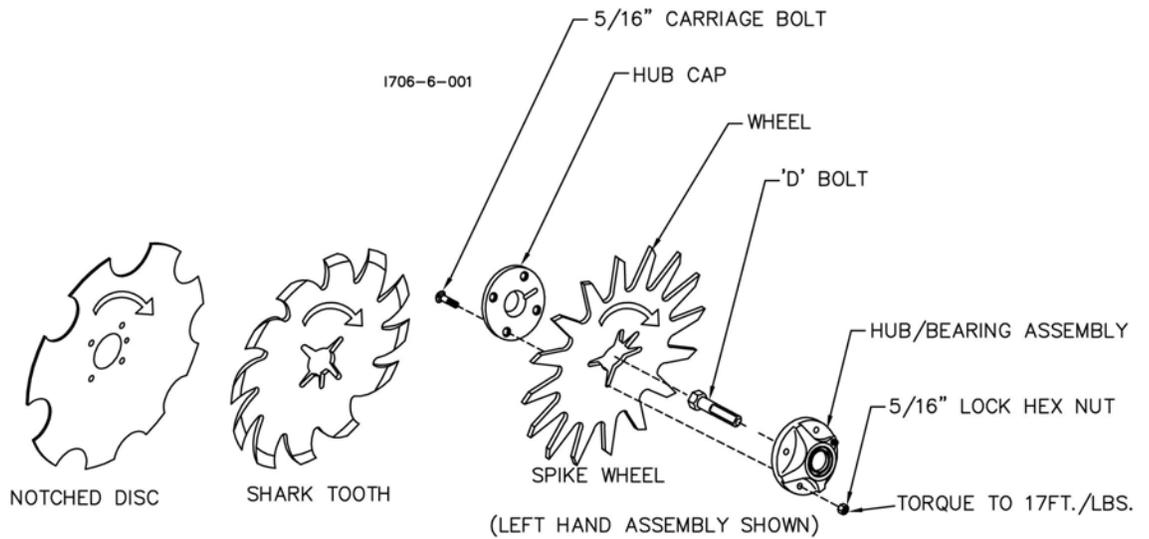

# MAINTENANCE

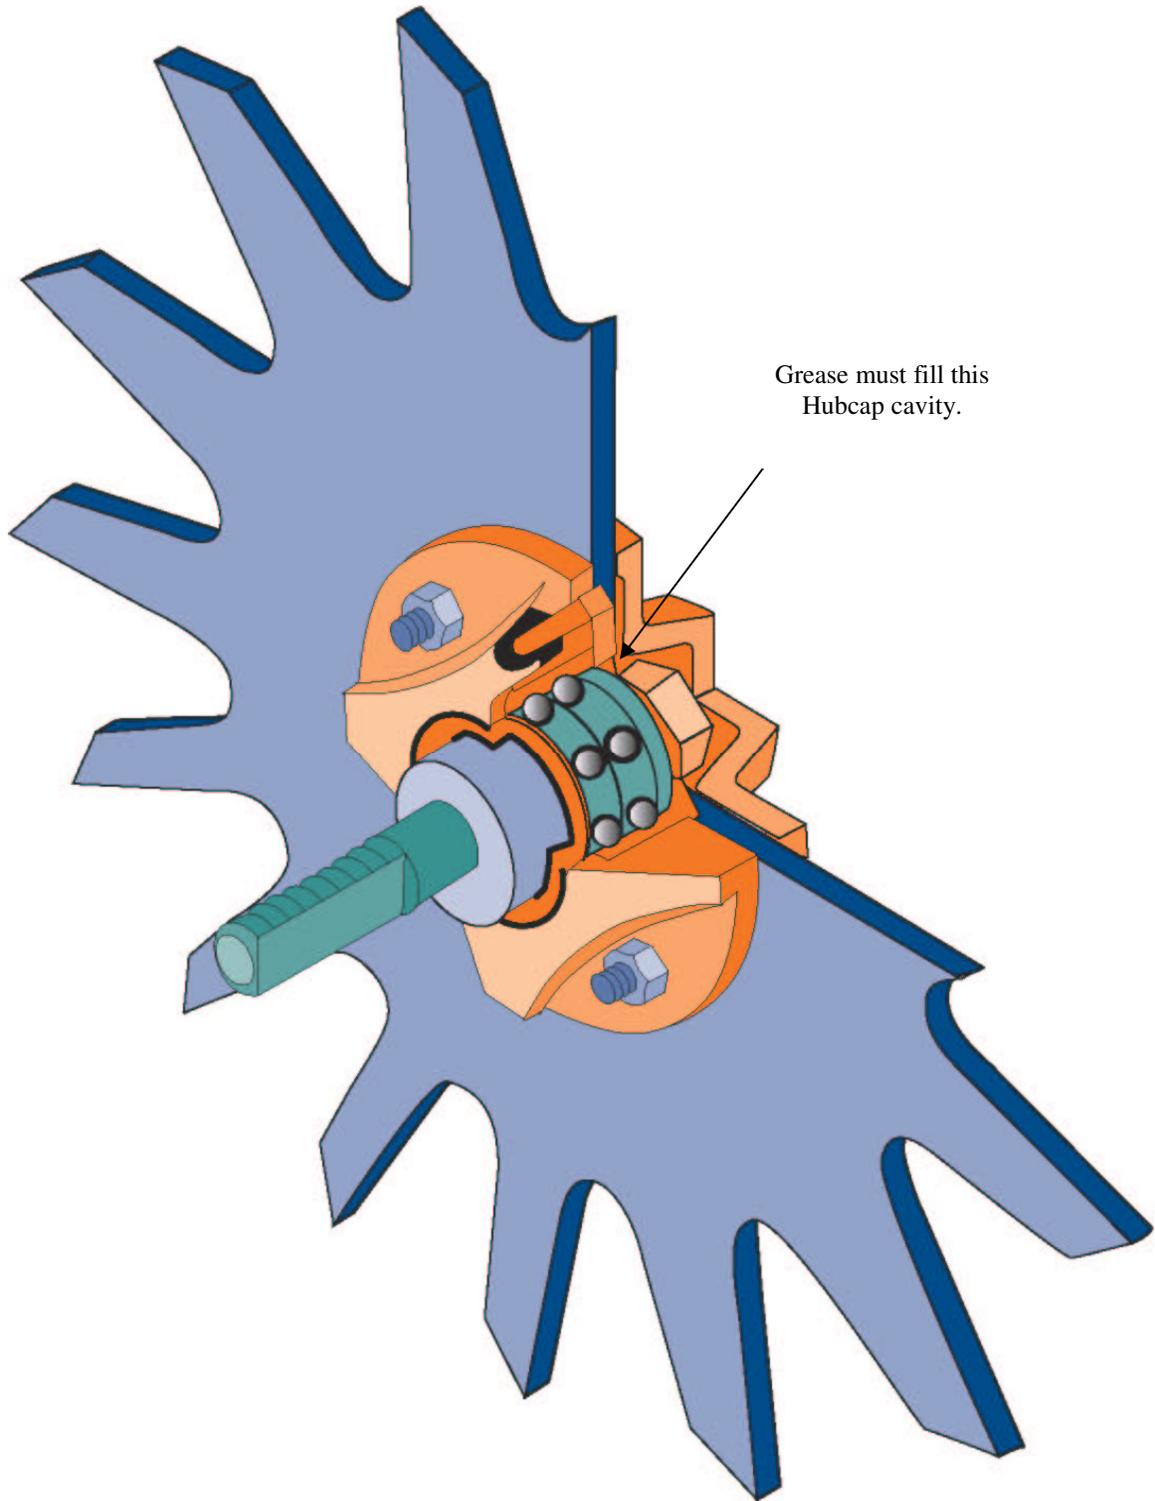

# MAINTENANCE

## Lubrication



**CAUTION:** To help prevent serious injury or death to you or others caused by unexpected movement, service machine on a level surface. Lower machine to ground or sufficiently lock or block raised machine before servicing. If machine is connected to tractor, engage parking brake and place transmission in "PARK", shut off engine and remove key. If machine is detached from tractor, block wheels and use shop stands to prevent movement.



**CAUTION:** Do not clean, lubricate, or adjust machine while in motion.

Use grease based on NLGI consistency numbers and the expected air temperature range during the service interval.

Use a **multi-purpose polyurea, water resistant, moderate speed, and NLGI grade #2** grease.

Other greases may be used if they meet the following **NLGI Performance**

**IMPORTANT:** Some types of grease thickener are not compatible with others. Consult your grease supplier before mixing different types of grease.

## Alternative Lubricants

Conditions in certain geographical areas may require special lubricants and lubrication practices which do not appear in the operator's manual. If there are any questions, consult Yetter Manufacturing Co. to obtain latest information and recommendation.

<b>PART #</b>	<b>DESCRIPTION</b>	<b>OUNCES OF GREASE</b>
2967-404	13" TAPER TOOTH R.M. WHEEL	1.12 OZ
2967-602	13" SHARK TOOTH R.M. WHEEL	1.12 OZ
2967-186	FLOATER WHEEL KIT W/R.M. WHEEL	2.08 OZ
	BEVEL R.M. WHEEL W/ FLOATER WHEEL KIT	2.40 OZ

## Storing Lubricants

Your machine can operate at top efficiency only if clean lubricants are used.

Use clean containers to handle all lubricants.


Store them in an area protected from dust, moisture and other contaminants.

# MAINTENANCE

## Lubrication Symbols

 Lubricate with grease at hourly interval indicated on symbol.

## Lubrication Intervals

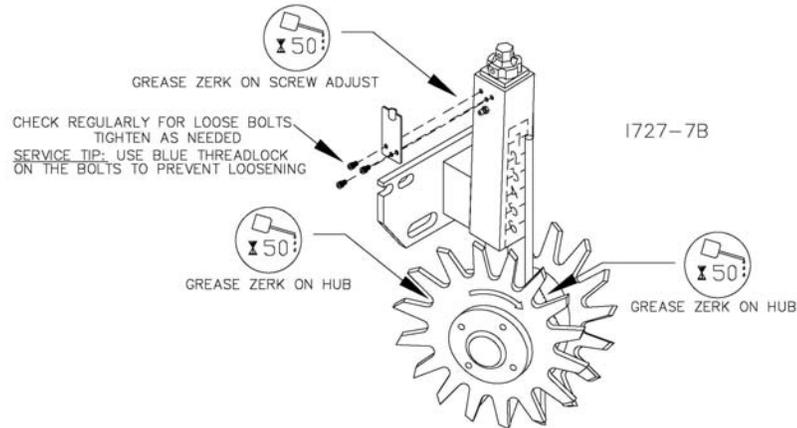

**IMPORTANT: The recommended service intervals are based on normal conditions; severe or unusual conditions may require more frequent lubrication.**

Perform each lubrication and service procedure at the beginning and end of each season.

Clean grease fittings before using grease gun, to avoid injecting dirt and grit into the bearing. Replace any lost or broken fittings immediately. If a fitting fails to take grease, remove and clean thoroughly, replace fitting if necessary. Also check for failure of adjoining parts.

## BEARING REPLACEMENT INSTALLATION

1. When assembling the spoke wheels, bearing assembly and hubcap, be sure to align the grease transfer hole in the spoke wheel with the groove in the hubcap and hole in the hub to allow grease passage.
2. Assemble the wheels, hubs and caps.
3. Grease the wheel/hub/bearing assembly.

# MAINTENANCE

## Storing the Equipment

Store the machine in an area away from human activity

Store machine in RAISED position.

Install service locks on all wheel cylinders.


At the end of the season, the machine should be thoroughly inspected and prepared for storage. Repair or replace any worn or damaged components to prevent down time at the start of the next season. Store machine under cover with all parts in operating condition.

- Clean machine thoroughly to remove all dirt, debris and crop residue, which would hold moisture and cause rusting.
- Inspect machine for worn or broken parts. See your Yetter Farm Equipment dealer during the off-season so that parts or service can be acquired when machine is not needed in the field.
- Lubricate bearings as outlined in the Lubrication section
- Paint all parts which are chipped or worn and require repainting.
- Store machine in a clean, dry place with the planting unit out of the sun.
- If the machine cannot be stored inside, cover with a waterproof tarpaulin and tie securely in place.
- Do not allow children to play on or around the machine

# PARTS IDENTIFICATION

## 2967-011 SCREW ADJUST KINZE AIR BAG


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-258	HOUSING (KINZE A.B.) W.A.
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-753	ACME SCREW (KINZE A.B.)
8	1	2967-750	INDICATOR ROD, KINZE A.B., ZYD
9	1	2966-259	ADJUSTMENT STEM W.A. (KINZE A.B.)
10	2	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	2	2967-336	R.M. SHIELD, PAINTED, W. HOLE
14	2	2967-302	SPACER, 3/4" ZYD
15	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
16	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
17	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
18	2	2570-715	BEARING INSERT, TRASHMASTER
19	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
20	2	2570-742	D-BOLT,FLANGE, 5/8-11 X 4"GR.8 ZYD
21	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
21A	2	2967-596	3/8 TAPER TOOTH SPOKE WHEEL
21B	2	2967-602	13" SHARK TOOTH WHEEL
22	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
23	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
24	3	2520-357	1/2-13 LOCK HEX NUT ZP
25	1	2565-179	YETTER DECAL 1" X 3"
26	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
27	1	2565-815	ADJUSTMENT DECAL
28	3	2510-102	#10-32X.25HSHCPS ZP W/TRDLCK
29	1	2967-652	DETENT PLATE
30	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
31	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

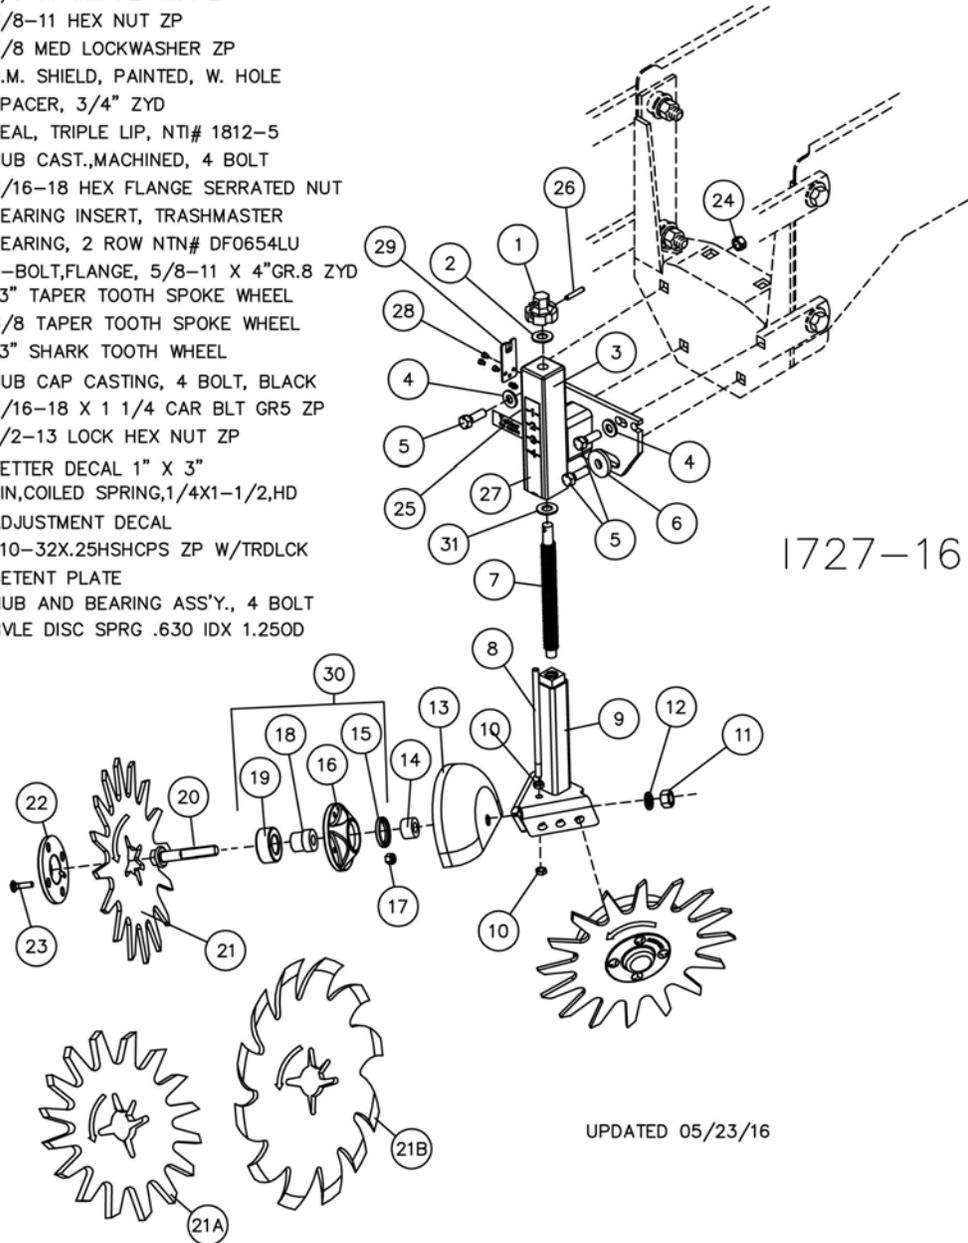

# PARTS IDENTIFICATION

## 2967-012 NARROW SCREW ADJUST-KINZE AIR BAG


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-258	HOUSING (KINZE A.B.) W.A.
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-753	ACME SCREW (KINZE A.B.)
8	1	2967-750	INDICATOR ROD, KINZE A.B., ZYD
9	1	2966-255	NARROW ADJ. STEM W.A.-KINZE A.B.
10	2	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-467	5/8-11 HEX LOCKNUT JAM ZP
12	2	2967-392	R.M. SHIELD, PAINTED, W. HOLE
13	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
14	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
15	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
16	2	2570-715	BEARING INSERT, TRASHMASTER
17	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
18	2	2570-766	D-BOLT,FLANGE,5/8-11 X 2-1/2 G8 ZYD
19	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
19A	2	2967-596	3/8 TAPER TOOTH SPOKE WHEEL
19B	2	2967-602	13" SHARK TOOTH WHEEL
20	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
21	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
22	3	2520-357	1/2-13 LOCK HEX NUT ZP
23	1	2565-179	YETTER DECAL 1" X 3"
24	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
25	1	2565-815	ADJUSTMENT DECAL
26	3	2510-102	#10-32X.25SHHCPS ZP W/TRDLCK
27	1	2967-652	DETENT PLATE
28	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
29	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

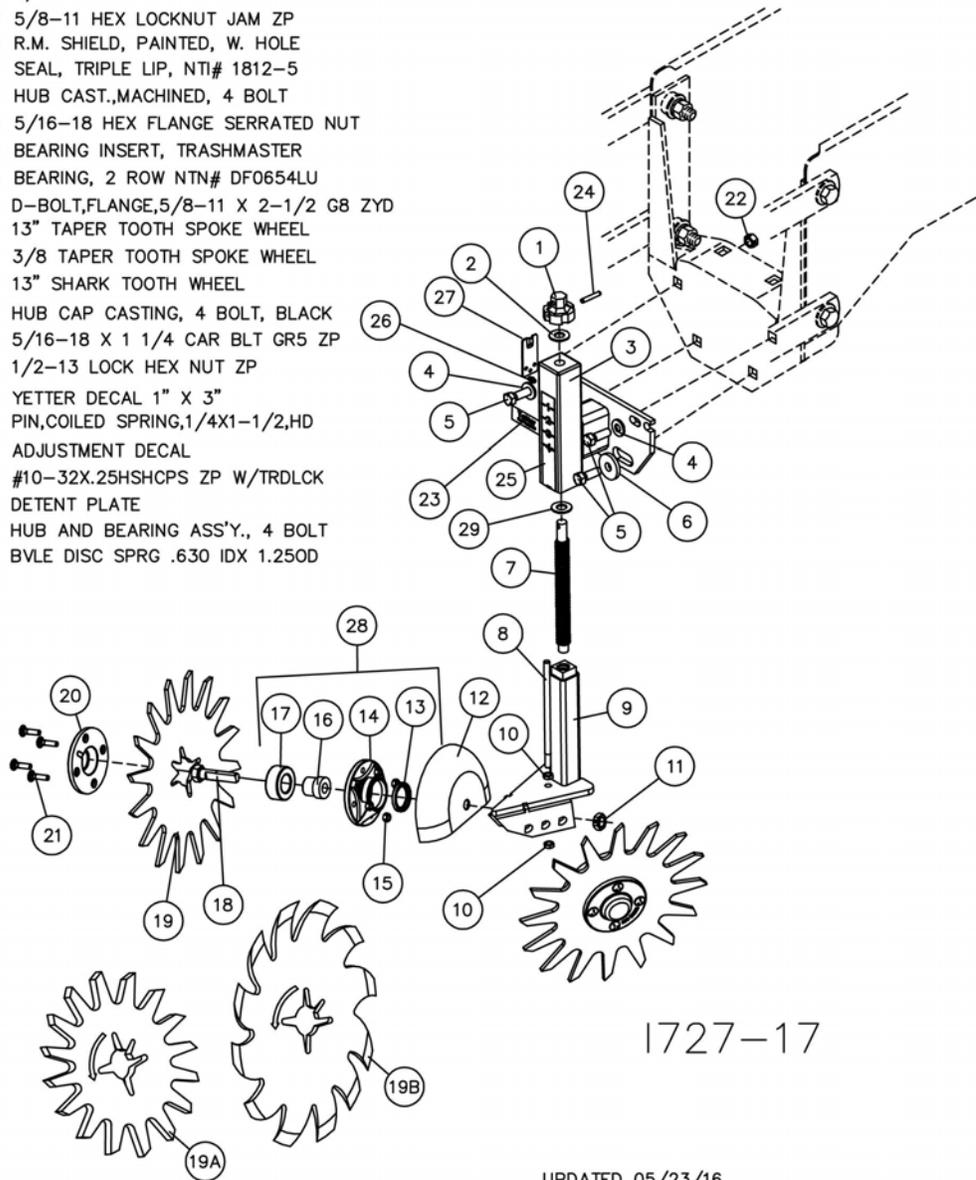

# PARTS IDENTIFICATION

## 2967-044-R & L NOTCHED SCREW ADJ (CNH) R.M.

DET	QTY	PART NO.	DESCRIPTION
1	2	2966-160	NOTCHED DISC ASSEMBLY
2	8	2505-207	5/16-18 X 1-1/4 CAR BLT GR5
3	2	2965-352-DISC	HUB CAP CASTING, 4 BOLT, BL
4	2	2571-277	16 TOOTH NOTCHED R.M. DISC,
5	2	2570-740	D-BOLT 5/8-11 X 2.812" GR. 8 ZP
6	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
7	2	2570-594	BEARING, 2 ROW NTN#DF0654L
8	2	2570-715	BEARING INSERT, TRASHMASTER
9	2	2965-351	HUB CAST., MACHINED, 4 BOLT
10	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
11	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	2	2520-452	5/8-11 HEX NUT ZP
14	2	2520-253	3/8-16 JAM HEX NUT ZP
15	1	2966-249-R	(CNH) NOTCHED SCREW ADJ STEM, RH WA (SHOWN)
	1	2966-249-L	(CNH) NOTCHED SCREW ADJ STEM, LH WA
16	1	2967-661	INDICATOR ROD (CNH) , ZYD
17	2	2502-316	1/2-13 X 3-1/2 HHCS GR 5 ZYD
18	1	2966-207	HOUSING W.A., CNH
19	2	2565-179	YETTER DECAL, 1 X 3
20	1	2967-665	ACME SCREW (CNH), ZYD
21	1	2526-453	5/8 SAE FLATWASHER ZP
22	1	2565-815	ADJUSTMENT DECAL
23	1	2533-110	1/4-28 ZERK STRAIGHT SELF-TAP
24	3	2510-102	#10-32 X .25 HSHCPS ZP W/THR LCK
25	1	2967-652	DETENT PLATE
26	1	2967-699	ADJUSTMENT KNOB (9/07)
27	1	2530-158	PIN, COILED SPRING, 1/4X1-1/2, HD
28	2	2520-357	1/2-13 LOCK HEX NUT ZP
29	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D
30	2	2502-244	3/8-16 X 1-1/4 HHCS GR 5 ZYD.
31	2	2960-223	CYCLO STOP CASTING
32	2	2520-255	3/8-16 HEX LOCK NUT ZYD.
33	2	2526-253	3/8 SAE FLATWASHER ZYD.

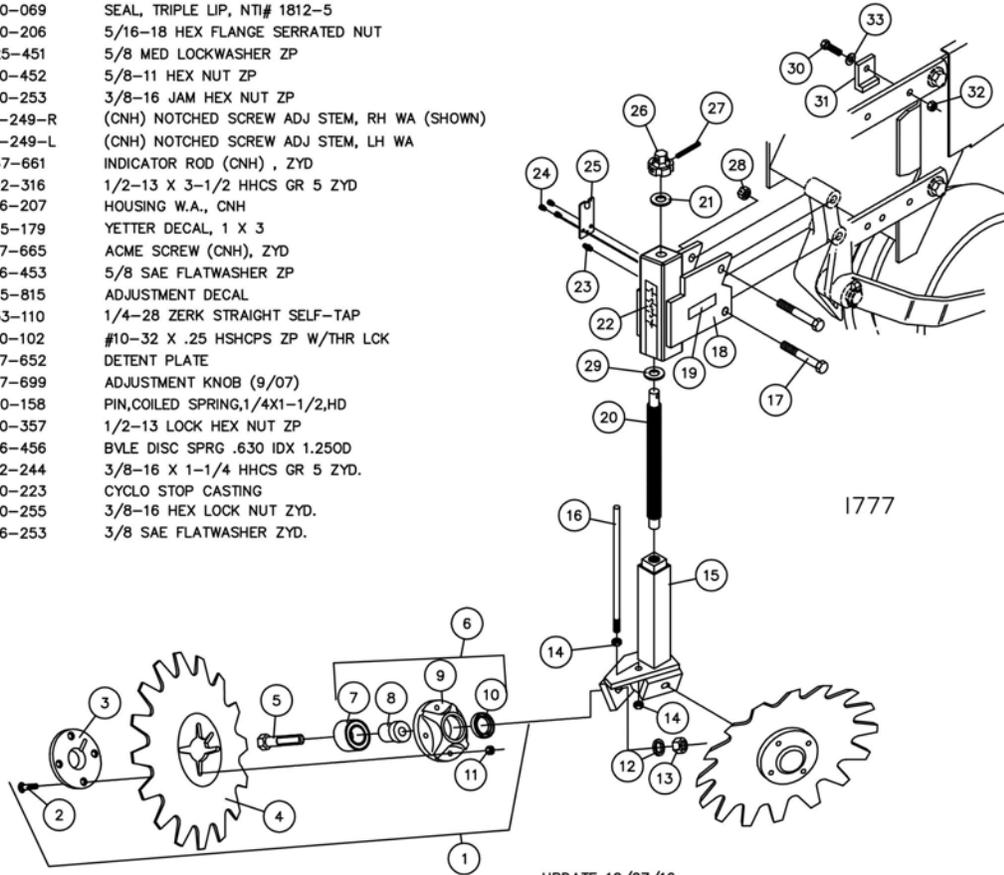


UPDATE 10/27/16

# PARTS IDENTIFICATION

## 2967-052 - SCREW ADJUST RESIDUE MANAGER


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB W.A.(9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-204	HOUSING W.A.
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-657	ACME SCREW
8	1	2967-755	INDICATOR ROD, 9"
9	1	2966-206	ADJUSTMENT STEM W.A.
10	1	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	2	2967-336	R.M. SHIELD
14	2	2967-302	SPACER, 3/4" ZYD
15	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
16	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
17	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
18	2	2570-715	BEARING INSERT, TRASHMASTER
19	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
20	2	2570-742	D-BOLT,FLANGE,5/8-11 X 4" GR.8 ZYD
21	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
21A	2	2967-602	13" SHARK TOOTH WHEEL
22	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
23	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
24	3	2520-357	1/2-13 LOCK HEX NUT ZP
25	1	2565-179	YETTER DECAL 1" X 3"
26	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
27	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
28	3	2510-102	#10-32X.25HSHCPS ZP W/TRDLCK
29	1	2967-652	DETENT PLATE
30	1	2565-815	ADJUSTMENT DECAL
31	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

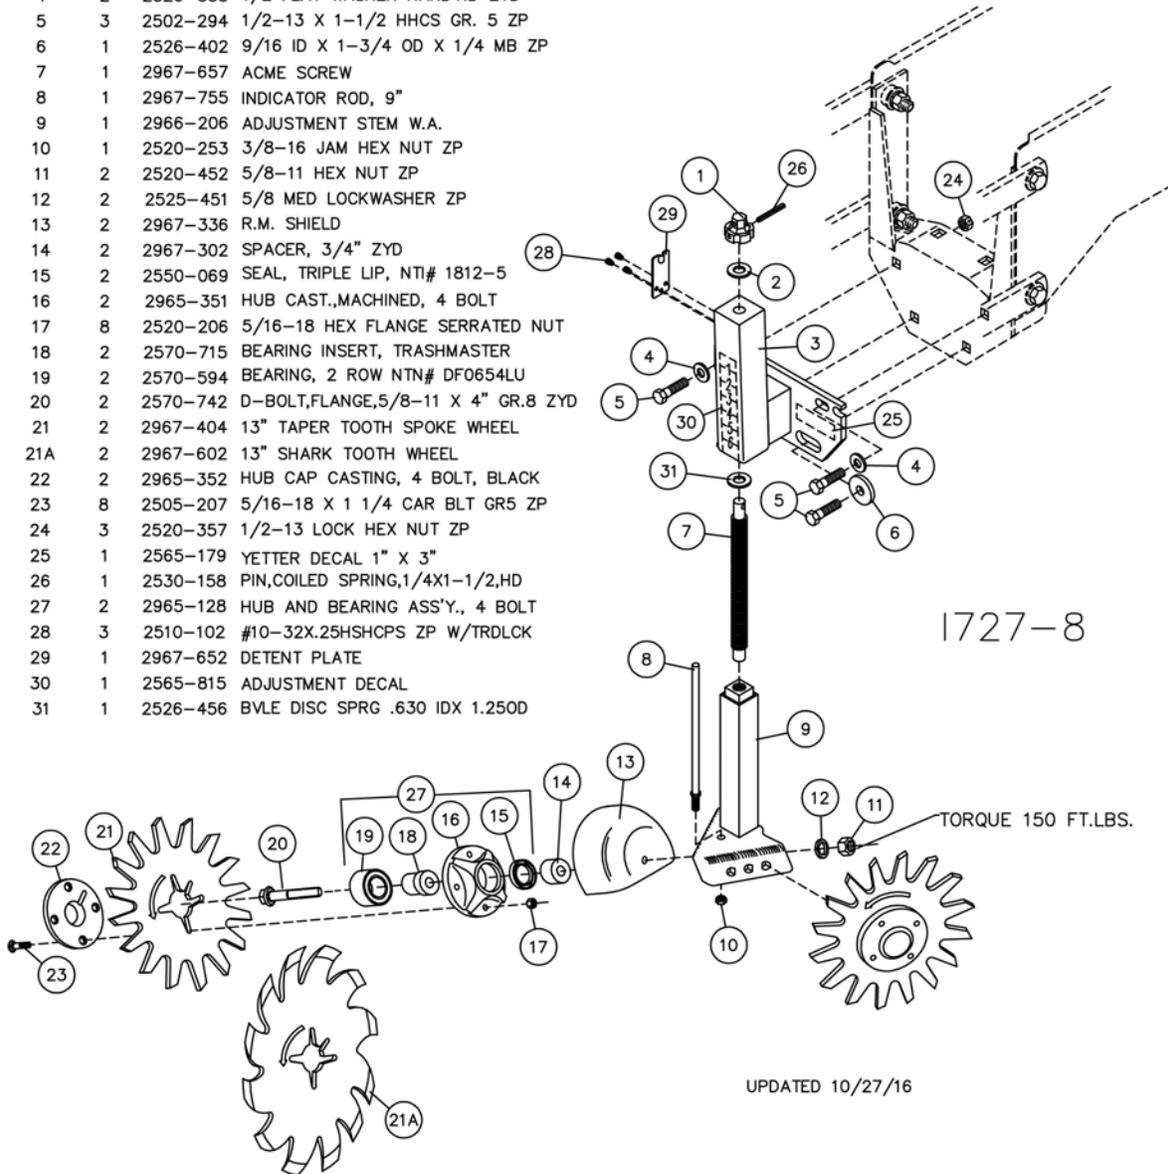

# PARTS IDENTIFICATION

## 2967-053 - SCREW ADJUST RESIDUE MANAGER, CNH

DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-207	HOUSING W.A., CNH
4	2	2502-316	1/2-13 X 3-1/2 HHCS GR 5 ZYD.
5	1	2533-110	1/4-28 ZERK STRAIGHT SELF-TAP
6	1	2565-815	ADJUSTMENT DECAL
7	1	2967-665	ACME SCREW (CNH)
8	1	2967-661	INDICATOR ROD (CNH)
9	1	2966-208	ADJUSTMENT STEM W.A. (CNH)
10	2	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	2	2967-336	R.M. SHIELD, PAINTED, W. HOLE
14	2	2967-302	SPACER, 3/4" ZYD
15	2	2550-069	SEAL, TRIPLE LIP, NTL# 1812-5
16	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
17	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
18	2	2570-715	BEARING INSERT, TRASHMASTER
19	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
20	2	2570-742	D-BOLT,FLANGE,5/8-11 X 4" GR.8 ZYD
21	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
21A	2	2967-602	13" SHARK TOOTH WHEEL
22	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
23	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
24	2	2520-357	1/2-13 LOCK HEX NUT ZP
25	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
26	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
27	3	2510-102	#10-32X.25SHHCPS ZP W/TRDLCK
28	1	2967-652	DETENT PLATE
29	1	2565-179	YETTER DECAL 1" X 3"
30	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D
31	2	2502-244	3/8-16 X 1-1/4 HHCS GR 5 ZYD.
32	2	2960-223	CYCLO STOP CASTING
33	2	2520-255	3/8-16 HEX LOCK NUT ZYD.
34	2	2526-253	3/8 SAE FLATWASHER ZYD.

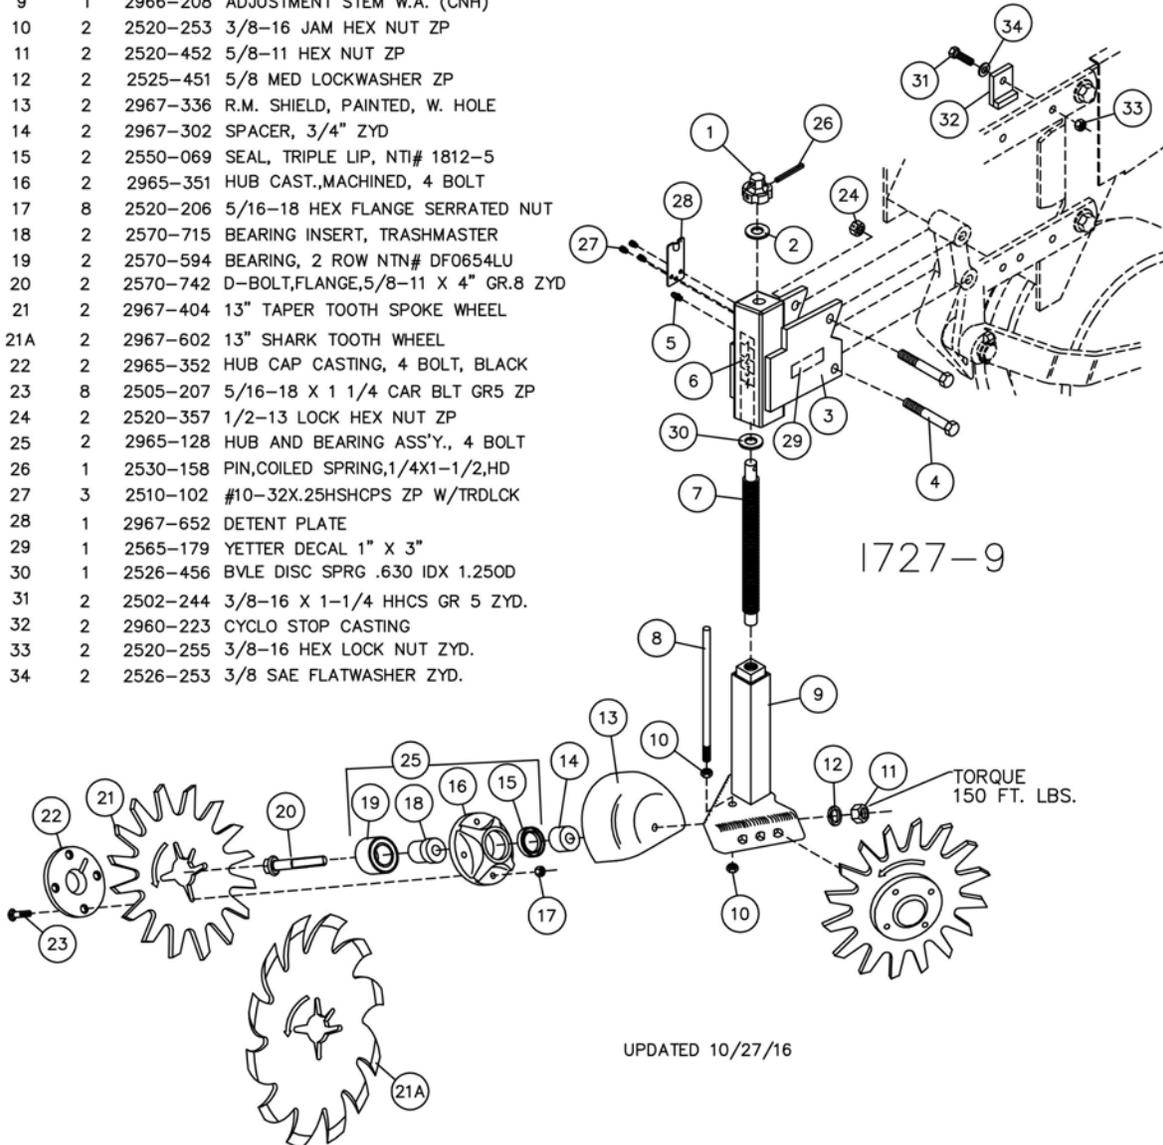


UPDATED 10/27/16

# PARTS IDENTIFICATION

## 2967-054 - NARROW SCREW ADJUST RESIDUE MANAGER


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB W.A. (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-204	HOUSING W.A.
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-657	ACME SCREW
8	1	2967-755	INDICATOR ROD, 9"
9	1	2966-211	NARROW ADJ. STEM W.A.
10	1	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	1	2967-652	DETENT PLATE
13	2	2967-392	SHIELD, RM COMBO-PAINTED
14	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
15	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
16	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
17	2	2570-715	BEARING INSERT, TRASHMASTER
18	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
19	2	2570-766	D-BOLT,FLANGE,5/8-11X2-1/2"GR.8 ZYD
20	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
20A	2	2967-602	13" SHARK TOOTH WHEEL
21	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
22	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
23	3	2520-357	1/2-13 LOCK HEX NUT ZP
24	1	2565-179	YETTER DECAL 1" X 3"
25	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
26	1	2565-815	ADJUSTMENT DECAL
27	3	2510-102	#10-32X.25SHSCPS ZP W/TRDLCK
28	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
29	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

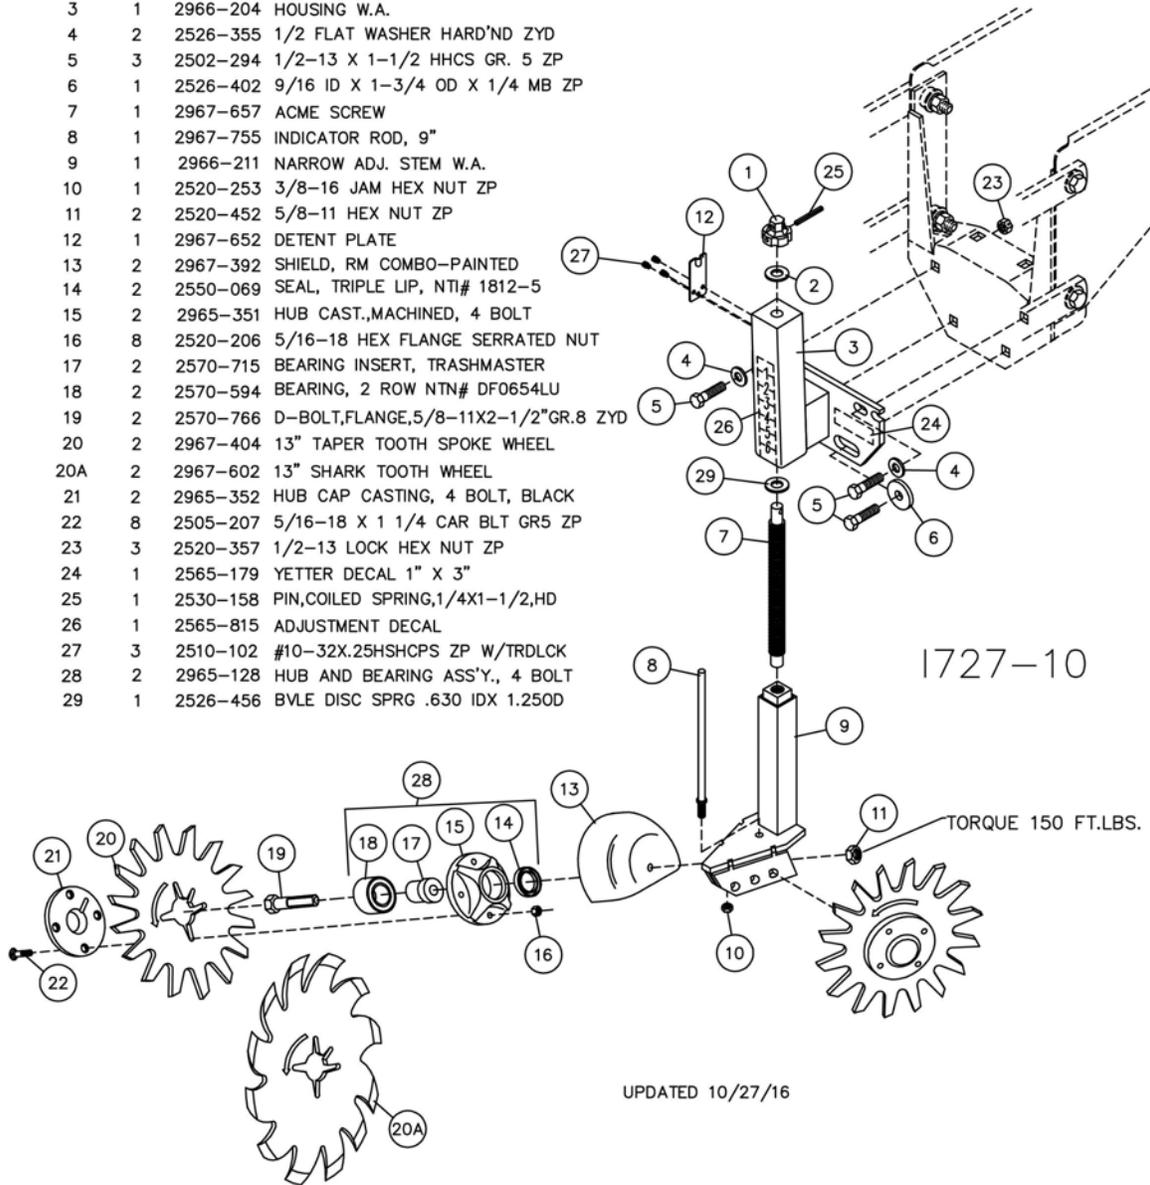

# PARTS IDENTIFICATION

## 2967-055 – NARROW SCREW ADJUST R.M., CNH


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-207	HOUSING W.A., CNH
4	2	2502-316	1/2-13 X 3-1/2 HHCS GR 5 ZYD.
5	1	2533-110	1/4-28 ZERK STRAIGHT SELF-TAP
6	1	2565-815	ADJUSTMENT DECAL
7	1	2967-665	ACME SCREW (CNH)
8	1	2967-661	INDICATOR ROD (CNH)
9	1	2966-210	NARROW ADJ. STEM W.A., CNH
10	2	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-467	5/8-11 HEX LOCKNUT, JAM ZP
12	2	2967-392	SHIELD, RM COMBO-PAINTED
13	1	2530-158	PIN, COILED SPRING, 1/4X1-1/2, HD
14	2	2550-069	SEAL, TRIPLE LIP, NIT# 1812-5
15	2	2965-351	HUB CAST., MACHINED, 4 BOLT
16	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
17	2	2570-715	BEARING INSERT, TRASHMASTER
18	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
19	2	2570-766	D-BOLT, FLANGE, 5/8-11 X 2-1/2 GR.8 ZYD
20	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
20A	2	2967-602	13" SHARK TOOTH WHEEL
21	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
22	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
23	2	2520-357	1/2-13 LOCK HEX NUT ZP
24	2	2565-179	YETTER DECAL 1" X 3"
25	3	2510-102	#10-32X.25SHSHP ZP W/TRDLCK
26	1	2967-652	DETENT PLATE
27	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
28	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D
29	2	2502-244	3/8-16 X 1-1/4 HHCS GR 5 ZYD.
30	2	2960-223	CYCLO STOP CASTING
31	2	2520-255	3/8-16 HEX LOCK NUT ZYD.
32	2	2526-253	3/8 SAE FLATWASHER ZYD.

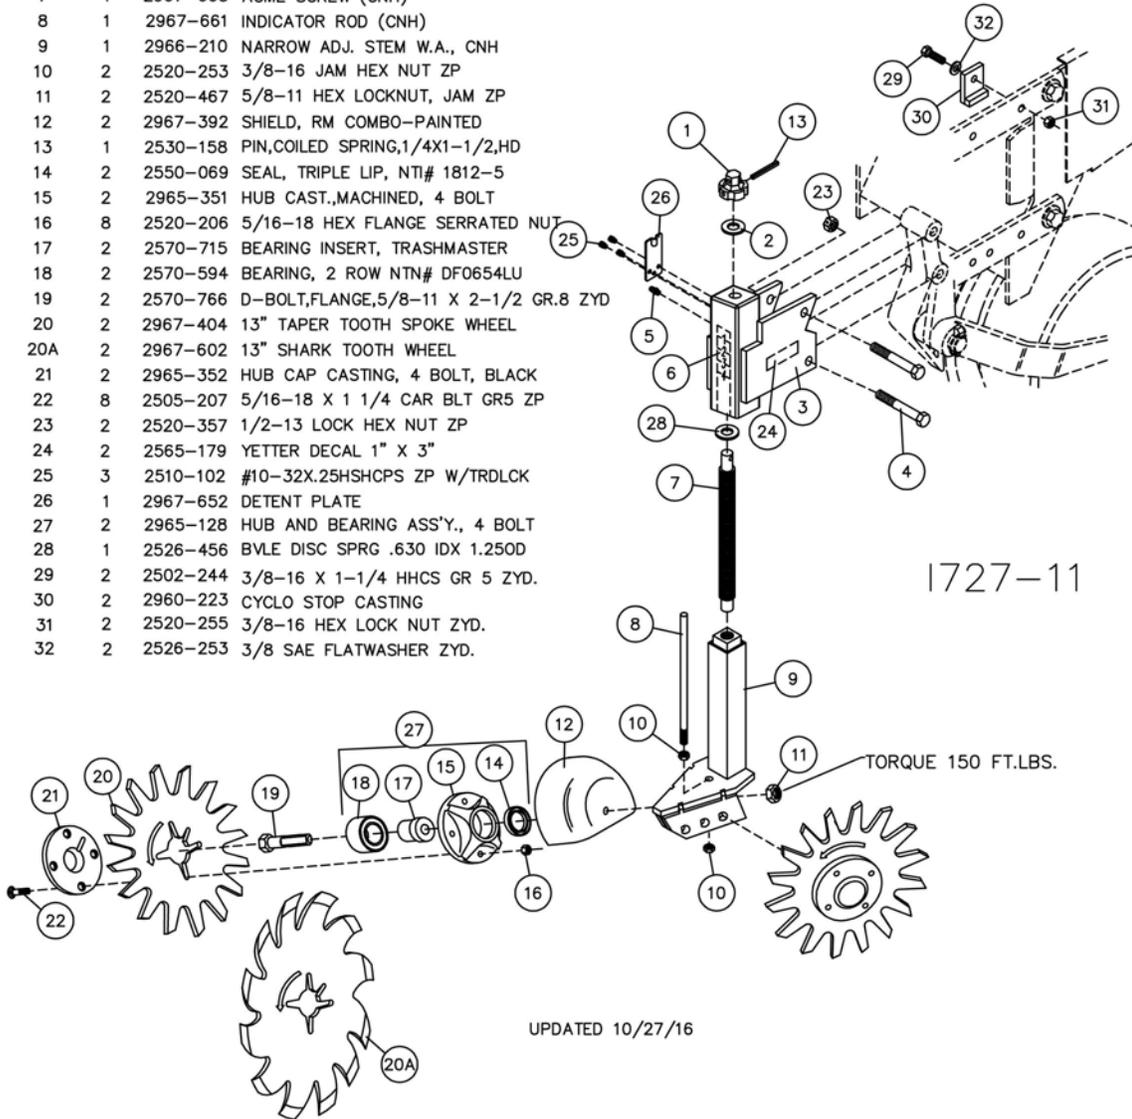

# PARTS IDENTIFICATION

## 2967-056 – NARROW SCREW ADJUST R.M. (LONG ARM)

DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB W.A. (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-212	HOUSING W.A. (LONG ARM)
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-657	ACME SCREW
8	1	2967-755	INDICATOR ROD, 9"
9	1	2966-211	NARROW ADJ. STEM W.A.
10	1	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-467	5/8-11 HEX LOCKNUT, JAM ZP
12	2	2967-392	SHIELD, RM COMBO-PAINTED
13	1	2565-815	ADJUSTMENT DECAL
14	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
15	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
16	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
17	2	2570-715	BEARING INSERT, TRASHMASTER
18	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
19	2	2570-766	D-BOLT,FLANGE,5/8-11 X 2-1/2 GR.8 ZYD
20	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
20A	2	2967-602	13" SHARK TOOTH WHEEL
21	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
22	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
23	3	2520-357	1/2-13 LOCK HEX NUT ZP
24	1	2565-179	YETTER DECAL 1" X 3"
25	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
26	3	2510-102	#10-32X.25SHHCPS ZP W/TRDLCK
27	1	2967-652	DETENT PLATE
28	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
29	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

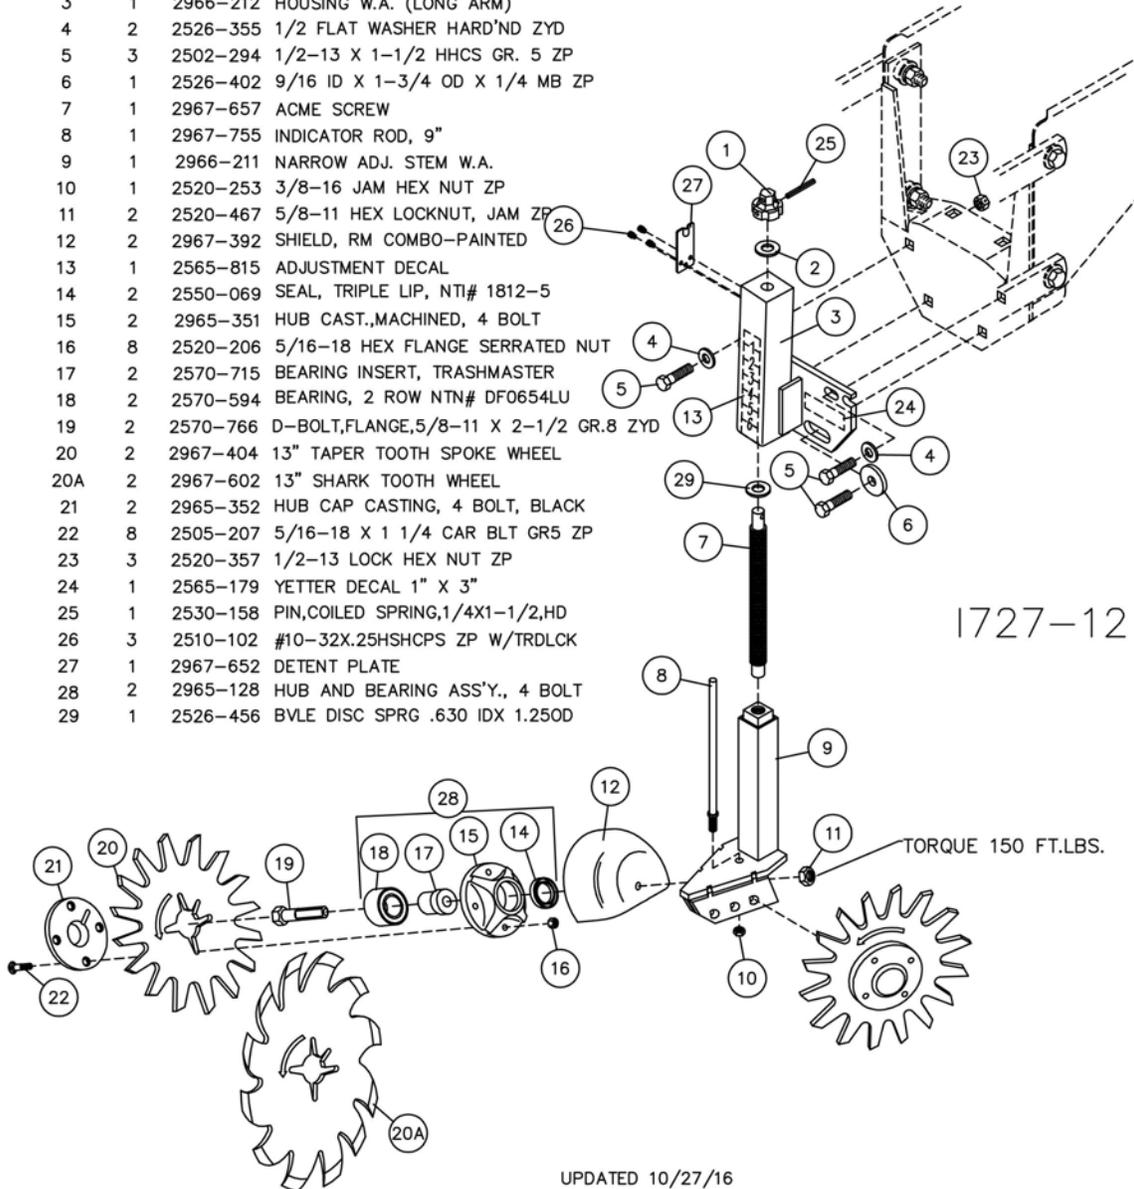


UPDATED 10/27/16

# PARTS IDENTIFICATION

## 2967-057 – SCREW ADJUST RESIDUE MANAGER (LONG ARM)


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB W.A. (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-212	HOUSING W.A. (LONG ARM)
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-657	ACME SCREW
8	1	2967-755	INDICATOR ROD, 9"
9	1	2966-206	ADJUSTMENT STEM W.A.
10	1	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	2	2967-336	R.M. SHIELD, PAINTED, W. HOLE
14	2	2967-302	SPACER, 3/4" ZYD
15	2	2550-069	SEAL, TRIPLE LIP, NTL# 1812-5
16	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
17	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
18	2	2570-715	BEARING INSERT, TRASHMASTER
19	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
20	2	2570-742	D-BOLT,FLANGE,5/8-11 X 4"GR.8 ZYD
21	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
21A	2	2967-602	13" SHARK TOOTH WHEEL
22	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
23	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
24	3	2520-357	1/2-13 LOCK HEX NUT ZP
25	1	2565-179	YETTER DECAL 1" X 3"
26	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
27	1	2565-815	ADJUSTMENT DECAL
28	3	2510-102	#10-32X.25SHSHP ZP W/TRDLCK
29	1	2967-652	DETENT PLATE
30	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
31	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

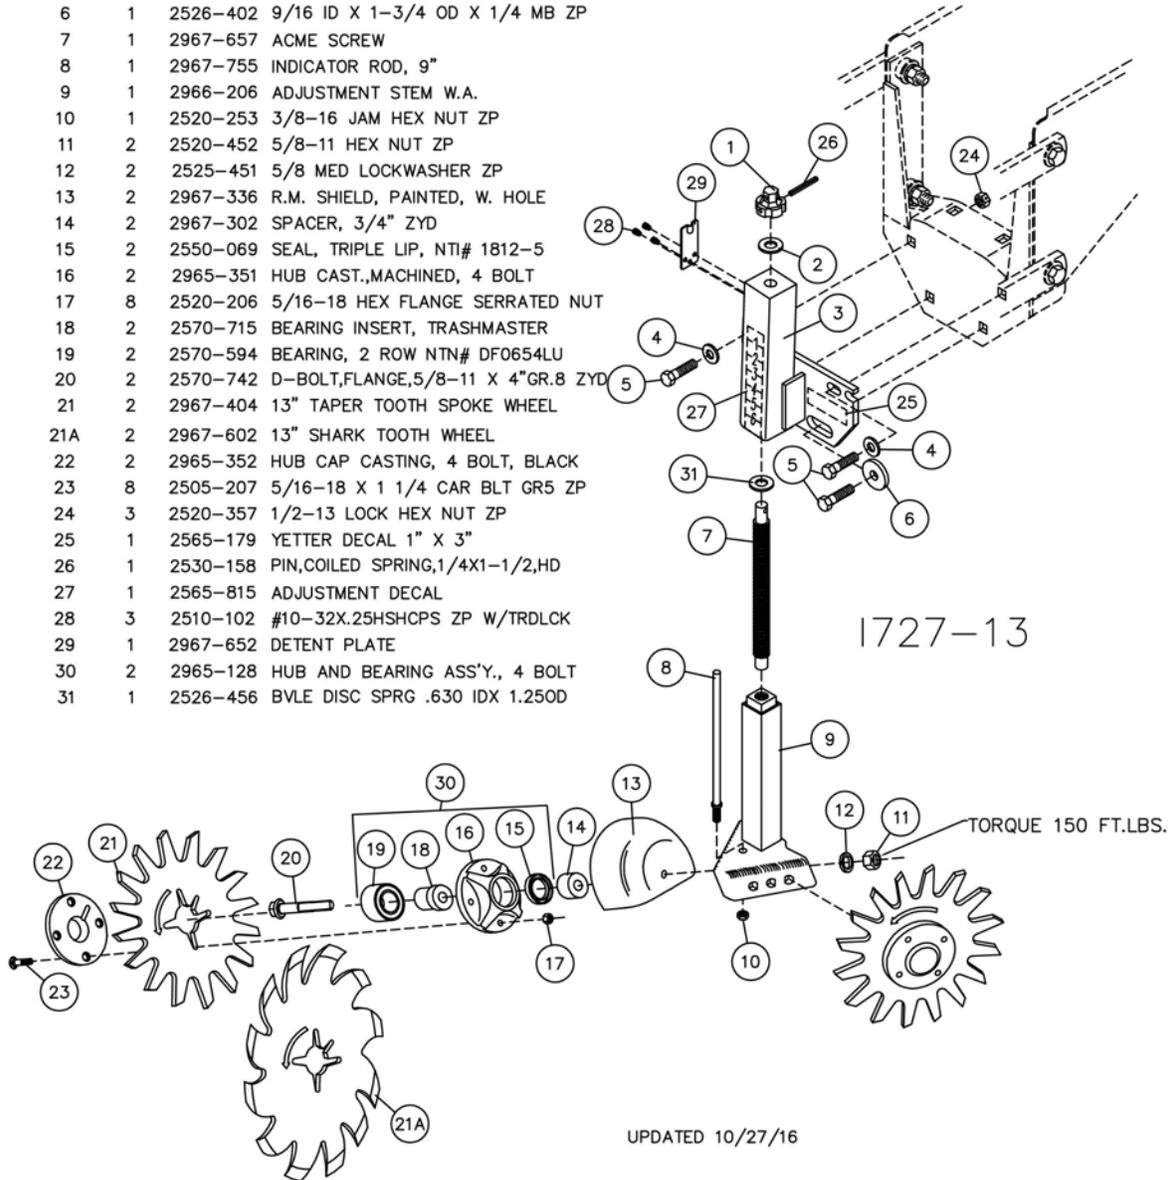

# PARTS IDENTIFICATION

## 2967-058 – SCREW ADJUST RESIDUE MANAGER, WHITE 8000

DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB W.A. (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-213	HOUSING W.A. (WHITE)
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-657	ACME SCREW
8	1	2967-755	INDICATOR ROD, 9"
9	1	2966-206	ADJUSTMENT STEM W.A.
10	1	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	2	2967-336	R.M. SHIELD, PAINTED, W. HOLE
14	2	2967-302	SPACER, 3/4" ZYD
15	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
16	2	2965-351	HUB CAST, MACHINED, 4 BOLT
17	8	2520-206	5/16-18 LOCK HEX NUT ZP
18	2	2570-715	BEARING INSERT, TRASHMASTER
19	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
20	2	2570-742	D-BOLT, FLANGE, 5/8-11 X 4" GR.8 ZYD
21	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
21A	2	2967-602	13" SHARK TOOTH WHEEL
22	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
23	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
24	3	2520-357	1/2-13 LOCK HEX NUT ZP
25	1	2565-179	YETTER DECAL 1" X 3"
26	1	2530-158	PIN, COILED SPRING, 1/4X1-1/2, HD
27	1	2565-815	ADJUSTMENT DECAL
28	3	2510-102	#10-32X.25HSHCP5 ZP W/TRDLCK
29	1	2967-652	DETENT PLATE
30	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
31	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

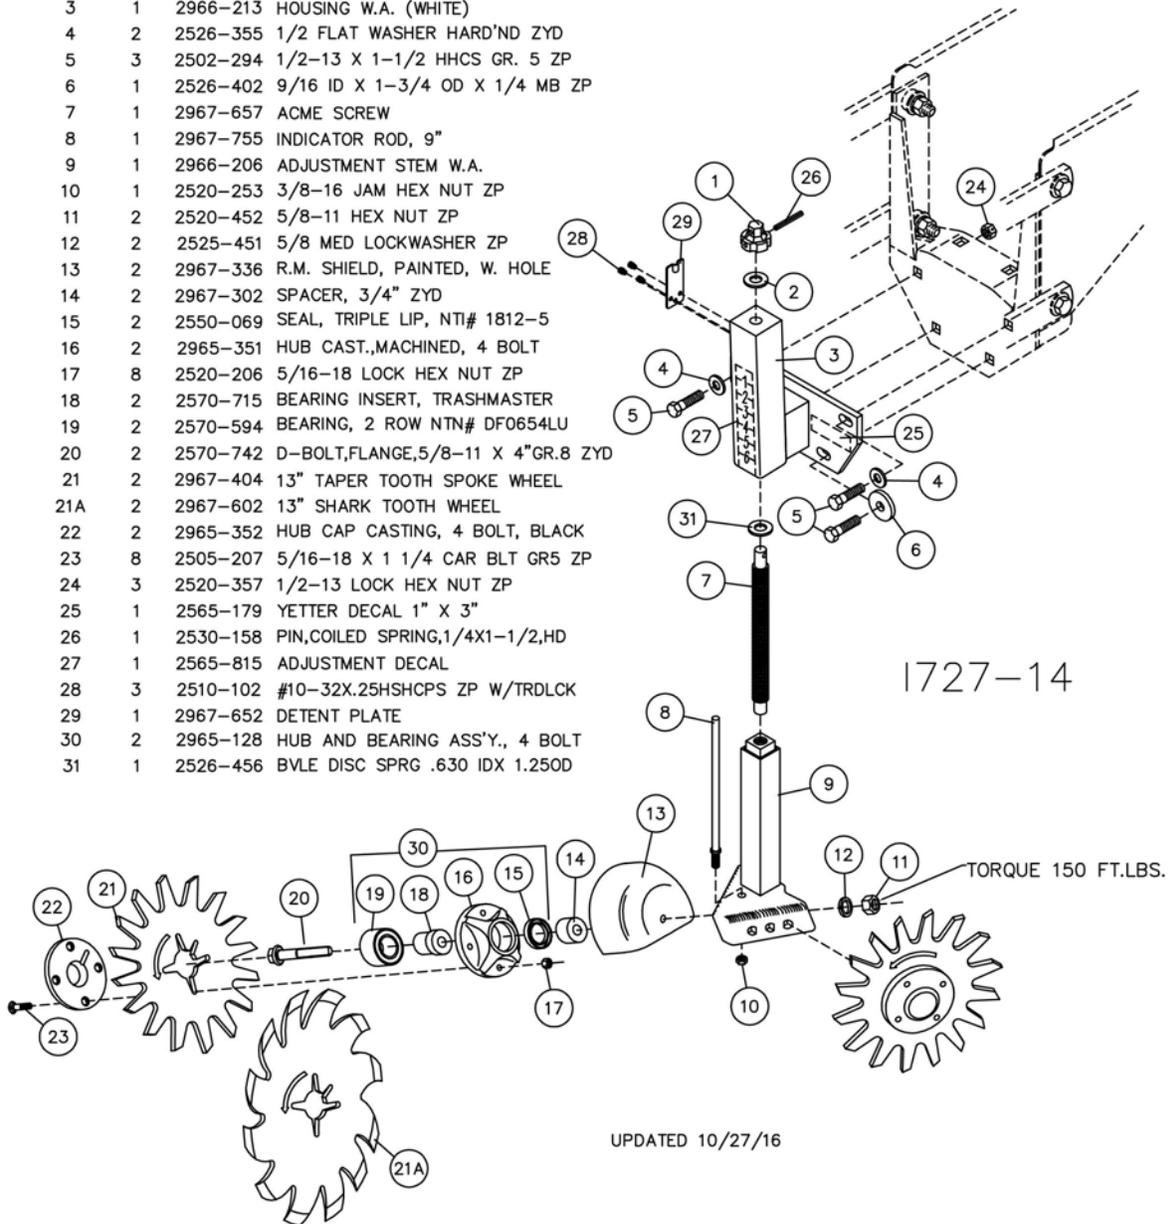


UPDATED 10/27/16

# PARTS IDENTIFICATION

## 2967-059 - NARROW SCREW ADJUST R.M., WHITE 8000


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB W.A. (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-213	HOUSING
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-657	ACME SCREW
8	1	2967-755	INDICATOR ROD, 9"
9	1	2966-211	NARROW ADJ. STEM W.A.
10	1	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-467	5/8-11 HEX LOCKNUT, JAM ZP
12	2	2967-392	SHIELD, RM COMBO-PAINTED
13	1	2565-815	ADJUSTMENT DECAL
14	2	2550-069	SEAL, TRIPLE LIP, NTN# 1812-5
15	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
16	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
17	2	2570-715	BEARING INSERT, TRASHMASTER
18	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
19	2	2570-766	D-BOLT,FLNGE,5/8-11 X 2-1/2"GR.8 ZYD
20	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
20A	2	2967-602	13" SHARK TOOTH WHEEL
21	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
22	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
23	3	2520-357	1/2-13 LOCK HEX NUT ZP
24	1	2565-179	YETTER DECAL 1" X 3"
25	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
26	3	2510-102	#10-32X.25HSHCPS ZP W/TRDLCK
27	1	2967-652	DETENT PLATE
28	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
29	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

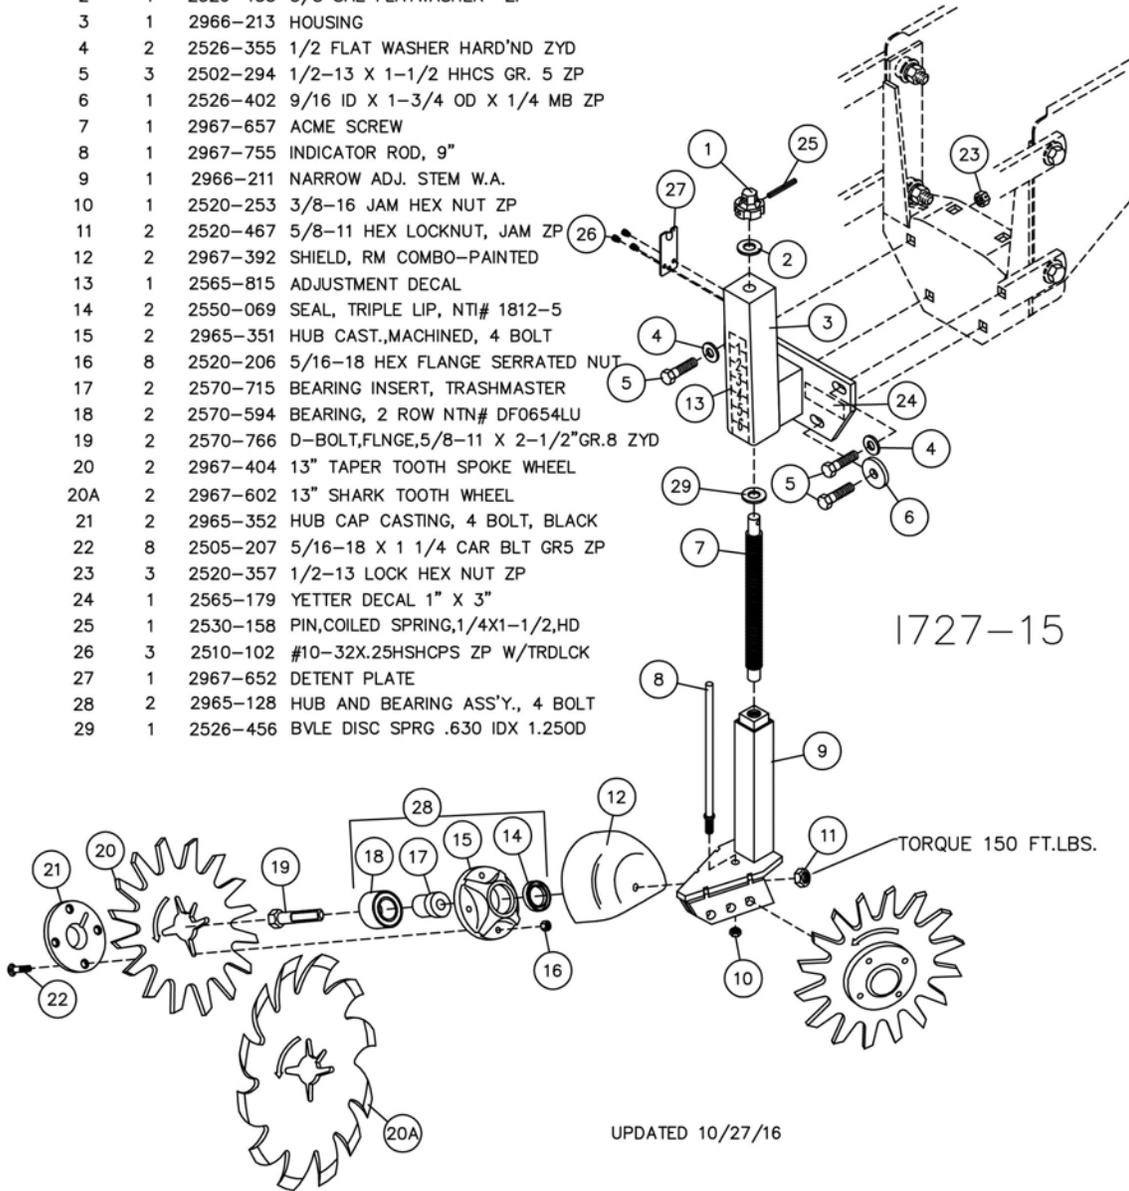

# PARTS IDENTIFICATION

## 2965-022 - SCREW ADJUST TRASHMASTER


DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB W.A. (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-204	HOUSING W.A.
4	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
5	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZP
6	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB ZP
7	1	2967-657	ACME SCREW
8	1	2967-755	INDICATOR ROD, 9"
9	1	2965-219	TRASHMASTER SCREW ADJ STEM W.A.
10	1	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	1	2565-815	ADJUSTMENT DECAL
14	2	2967-302	SPACER, 3/4" ZYD
15	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
16	2	2965-351	HUB CAST.,MACHINED, 4 BOLT
17	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
18	2	2570-715	BEARING INSERT, TRASHMASTER
19	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
20	2	2570-741	5/8-11 X 3-1/2 'D' BOLT GR.5 ZYD
21	2	2571-181	.098 X 12" DISC, 4 BOLT
22	2	2965-352-DISC	HUB CAP CASTING, 4 BOLT, BLACK
23	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
24	3	2520-357	1/2-13 LOCK HEX NUT ZP
25	1	2565-179	YETTER DECAL 1" X 3"
26	1	2530-158	PIN,COILED SPRING,1/4X1-1/2,HD
27	3	2510-102	#10-32X.25SHSHP ZP W/TRDLCK
28	1	2967-652	DETENT PLATE
29	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
30	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D

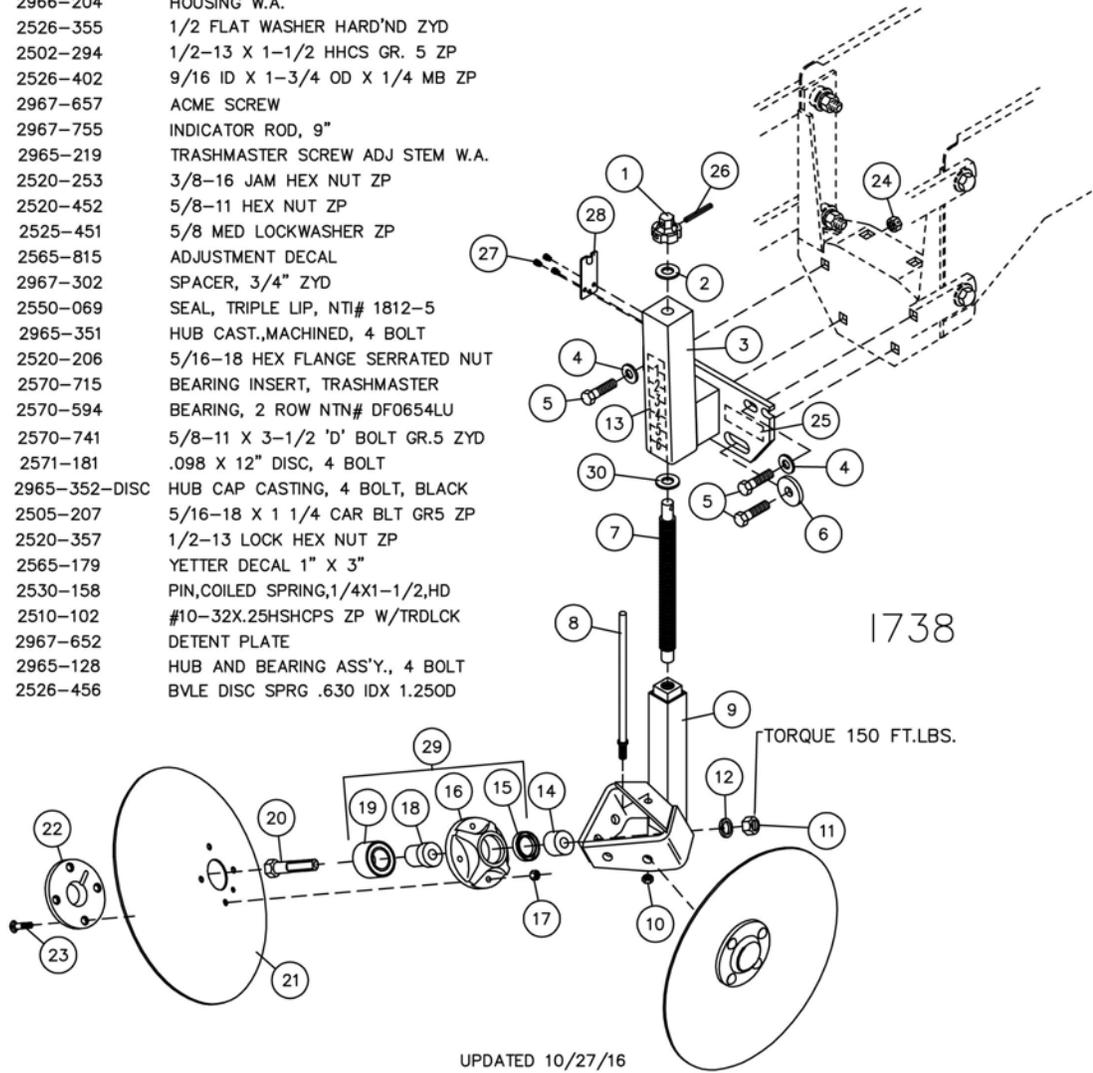

# PARTS IDENTIFICATION


## 2965-023 - SCREW ADJUST TRASHMASTER, CNH

DET	QTY	PART NO.	DESCRIPTION
1	1	2967-699	ADJUSTMENT KNOB (9/07)
2	1	2526-453	5/8 SAE FLATWASHER ZP
3	1	2966-207	HOUSING W.A., CNH
4	2	2502-316	1/2-13 X 3-1/2 HHCS GR 5 ZYD.
5	1	2533-110	1/4-28 ZERK STRAIGHT SELF-TAP
6	1	2565-815	ADJUSTMENT DECAL
7	1	2967-665	ACME SCREW (CNH)
8	1	2967-661	INDICATOR ROD (CNH)
9	1	2965-220	T.M. SCREW ADJ STEM WA, CNH
10	2	2520-253	3/8-16 JAM HEX NUT ZP
11	2	2520-452	5/8-11 HEX NUT ZP
12	2	2525-451	5/8 MED LOCKWASHER ZP
13	1	2530-158	PIN, COILED SPRING, 1/4X1-1/2, HD
14	2	2967-302	SPACER, 3/4" ZYD
15	2	2550-069	SEAL, TRIPLE LIP, NTL# 1812-5
16	2	2965-351	HUB CAST, MACHINED, 4 BOLT
17	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
18	2	2570-715	BEARING INSERT, TRASHMASTER
19	2	2570-594	BEARING, 2 ROW NTN# DF0654LU
20	2	2570-741	5/8-11 X 3-1/2 'D' BOLT GR.5 ZYD
21	2	2571-181	.098 X 12" DISC, 4 BOLT
22	2	2965-352-DISC	HUB CAP CASTING, 4 BOLT, BLACK
23	8	2505-207	5/16-18 X 1 1/4 CAR BLT GR5 ZP
24	2	2520-357	1/2-13 LOCK HEX NUT ZP
25	1	2565-179	YETTER DECAL 1" X 3"
26	3	2510-102	#10-32X.25HSHCPS ZP W/TRDLCK
27	1	2967-652	DETENT PLATE
28	2	2965-128	HUB AND BEARING ASS'Y., 4 BOLT
29	1	2526-456	BVLE DISC SPRG .630 IDX 1.250D
30	2	2502-244	3/8-16 X 1-1/4 HHCS GR 5 ZYD.
31	2	2960-223	CYCLO STOP CASTING
32	2	2520-255	3/8-16 HEX LOCK NUT ZYD.
33	2	2526-253	3/8 SAE FLATWASHER ZYD.

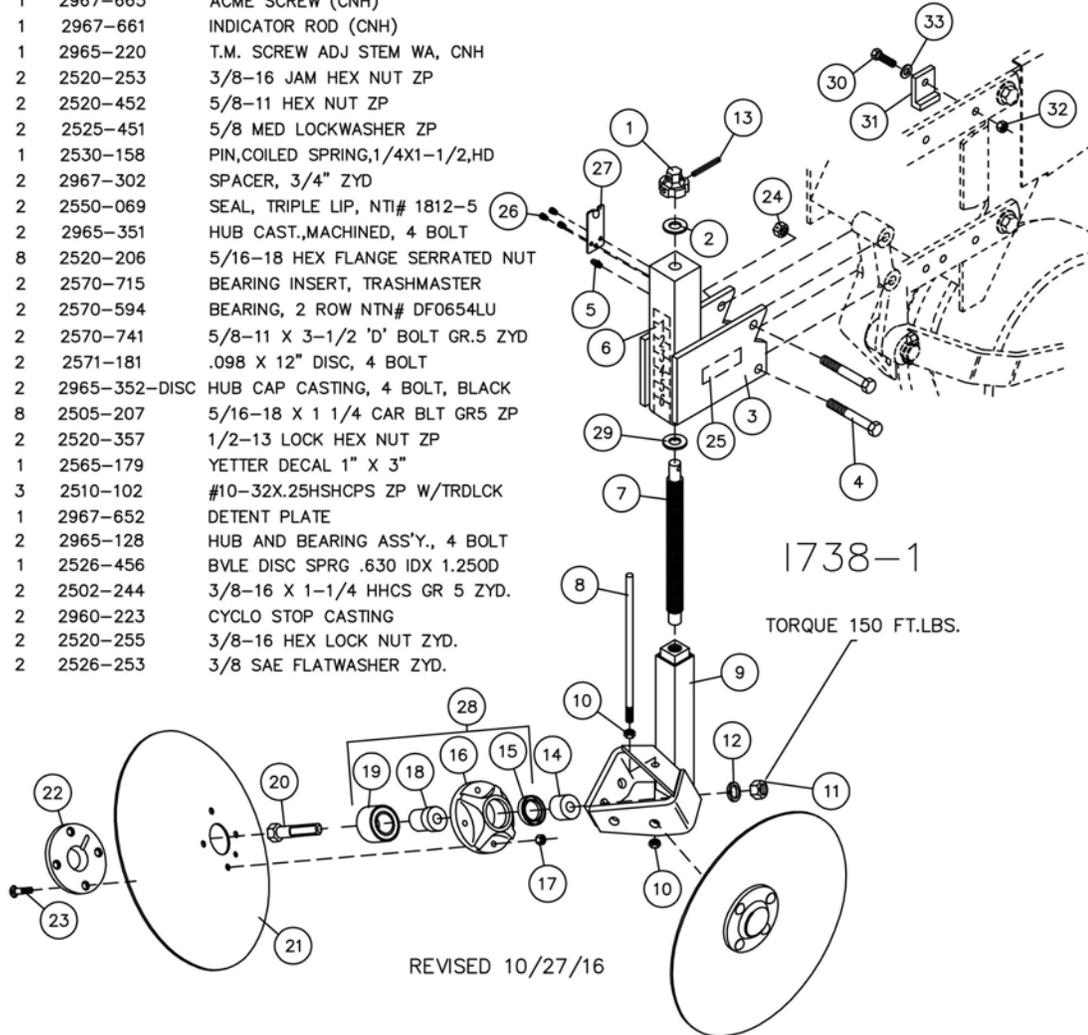

# PARTS IDENTIFICATION

2967-090 (SHOWN)  
 2967-090-HD  
 2967-090-ST

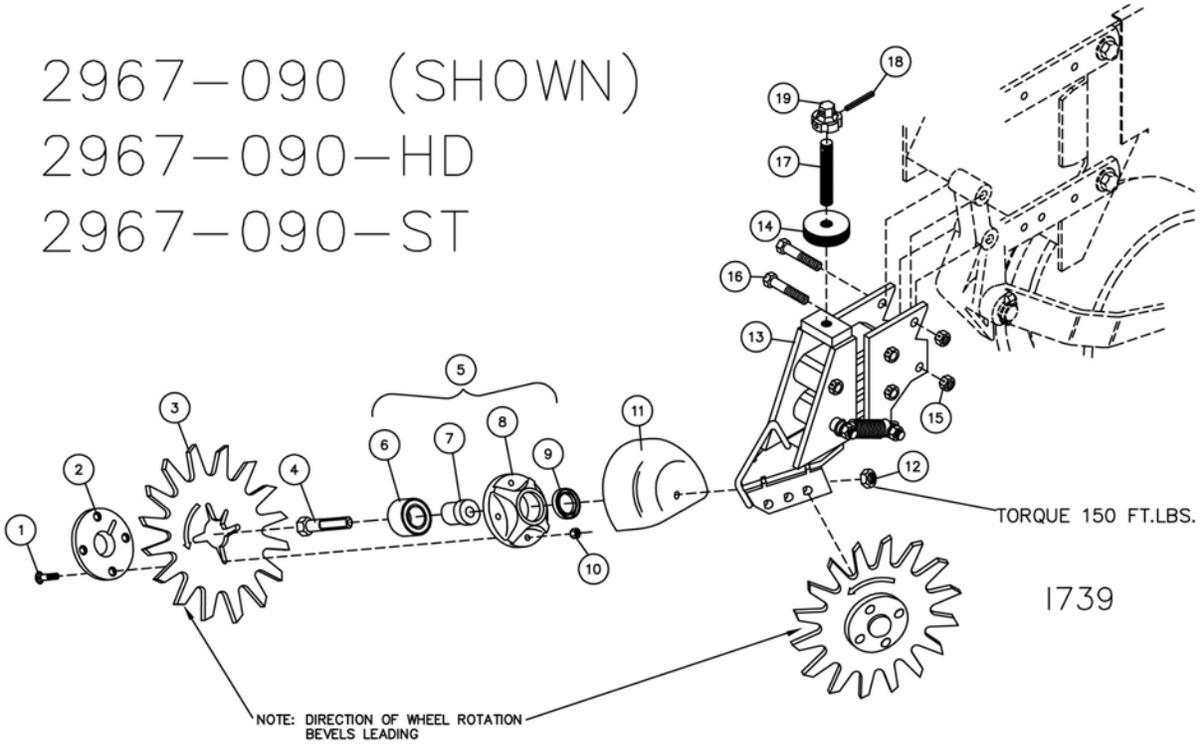


DET	QTY	PART NO.	DESCRIPTION
1	8	2505-208	5/16-18 X 1-1/2 CAR BOLT GR5 ZP
2	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
3	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
	2	2967-602	13" SHARK TOOTH WHEEL (NOT SHOWN)
4	2	2570-766	D-BOLT, FLANGE, 5/8-11 X 2-1/2" GR8 ZP
5	2	2965-128	HUB & BEARING ASS'Y, 4 BOLT INCLUDES NO.S 6, 7, 8, & 9
6	2	2570-594	BEARING, 2 ROW NTN# DF0654L
7	2	2570-715	BEARING INSERT, TRASHMASTER
8	2	2965-351	HUB CAST., MACHINED, 4 BOLT
	2	2533-110	1/4" SELF TAP ZERK (NOT SHOWN)
9	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
10	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
11	2	2967-392	SHIELD, RM COMBO-PAINTED
12	2	2520-467	5/8-11 LOCK HEX JAM NUT ZP
13	1	2966-132	LINKAGE ASS'Y, CASE FNR
14	1	2967-673	LOCKING BUSHING ZYD.
15	2	2520-357	1/2-13 LOCK HEX NUT ZP
16	2	2502-316	1/2-13 X 3-1/2 HHCS GR 5 ZP
17	1	2967-678	LOCK STUD ZYD.
18	1	2530-158	PIN, COILED SPRING, 1/4X1-1/2, HD
19	1	2967-699	ADJUSTMENT KNOB (9/07)

REVISED 10/27/16

## PARTS IDENTIFICATION


2966-132 - CNH FLOATING RM LINKAGE ASSY

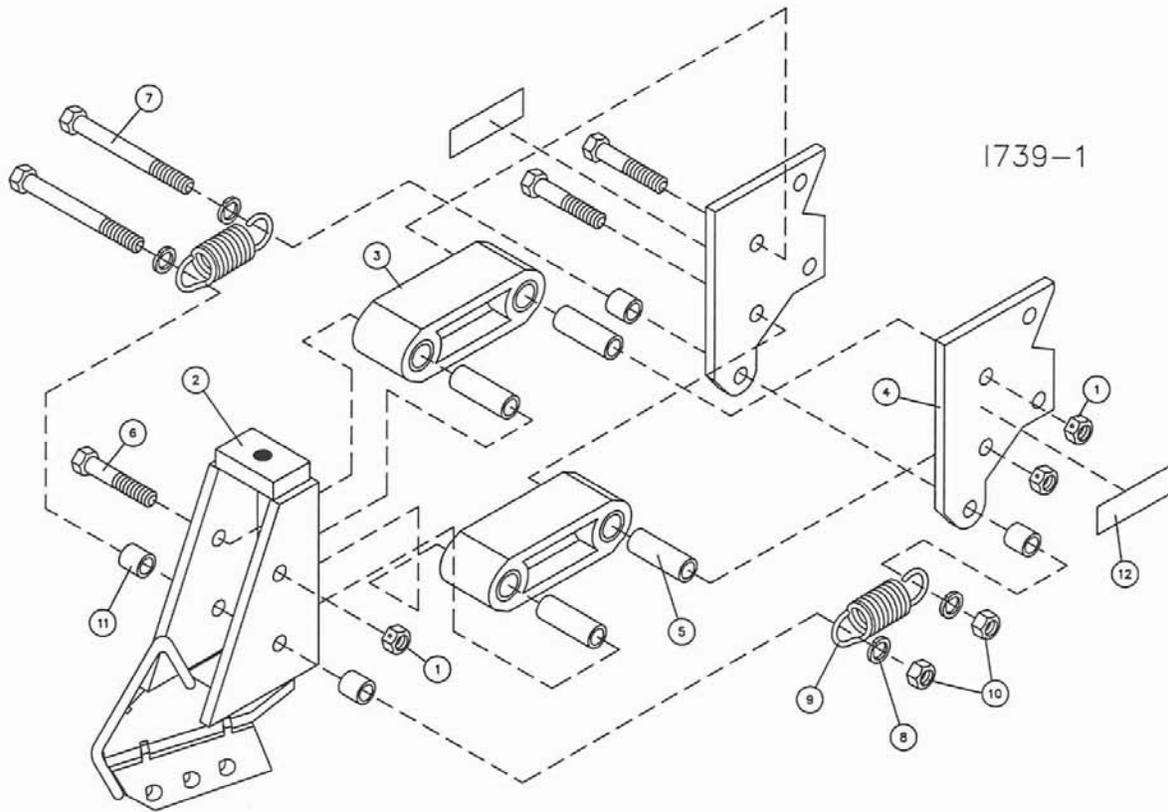

DET	QTY	PART NO.	DESCRIPTION
1	3	2520-357	1/2-13 LOCK HEX NUT ZP
2	1	2966-214	STEM W.A.
3	2	2967-110	SHORT PARALLEL ARM ASS'Y
4	2	2967-674	RM MOUNT PLATE
5	4	2984-349	SUPPORT BUSHING
6	3	2502-316	1/2-13 X 3-1/2 HHCS GR 5 ZP
7	2	2502-368	1/2-13 X 5-1/2 HHCS GR 5 ZYD.
8	4	2525-352	1/2 MED LOCK WASHER ZYD.
9	2	2550-751	1" OD X .125 WIRE EXT SPRING
10	2	2520-352	1/2-13 HEX NUT ZYD.
11	4	2967-677	SPRING BUSHING
12	2	2565-162	YETTER DECAL, 1 X 3

# PARTS IDENTIFICATION

2967-098

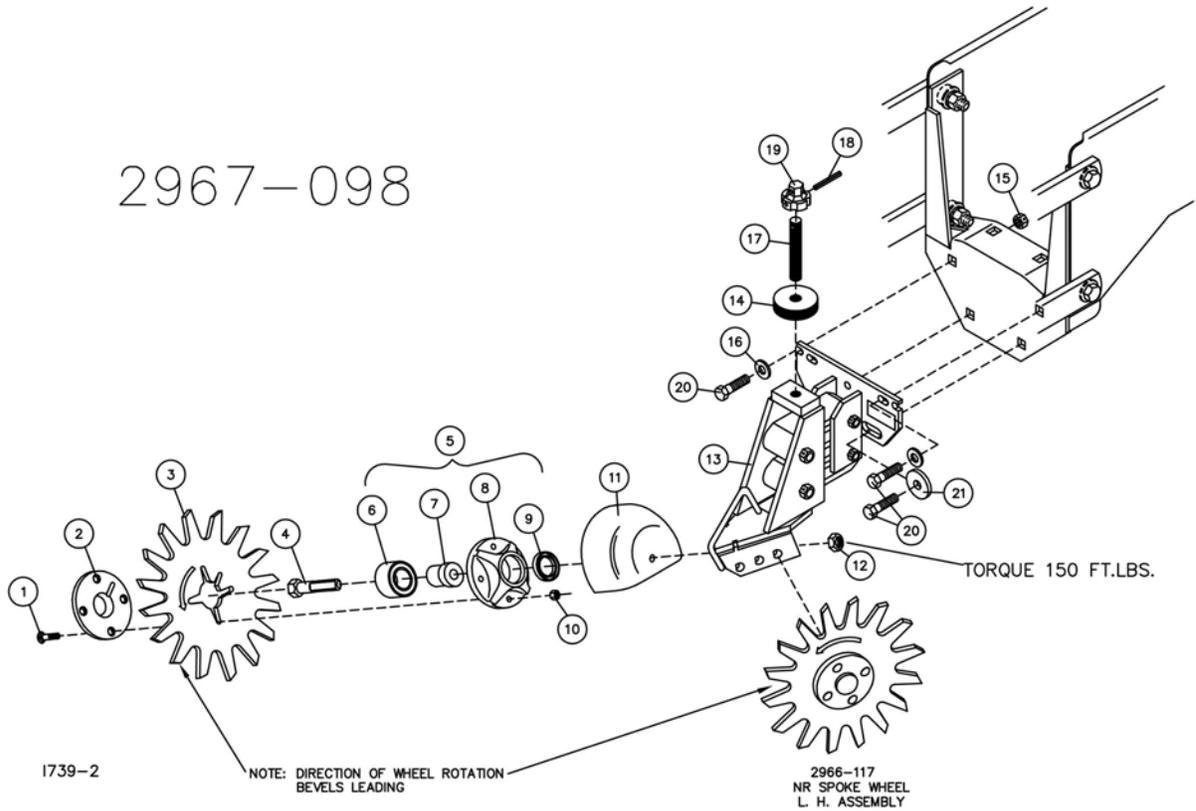


DET	QTY	PART NO.	DESCRIPTION
1	8	2505-208	5/16-18 X 1-1/2 CAR BOLT GR5 ZP
2	2	2965-352	HUB CAP CASTING, 4 BOLT, BLACK
3	2	2967-404	13" TAPER TOOTH SPOKE WHEEL
	2	2967-602	13" SHARK TOOTH WHEEL (NOT SHOWN)
4	2	2570-766	D-BOLT, FLANGE, 5/8-11 X 2-1/2" GR8 ZP
5	2	2965-128	HUB & BEARING ASS'Y, 4 BOLT INCLUDES NO.S 6, 7, 8, & 9
6	2	2570-594	BEARING, 2 ROW NTN# DF0654L
7	2	2570-715	BEARING INSERT, TRASHMASTER
8	2	2965-351	HUB CAST., MACHINED, 4 BOLT
	2	2533-110	1/4" SELF TAP ZERK (NOT SHOWN)
9	2	2550-069	SEAL, TRIPLE LIP, NTI# 1812-5
10	8	2520-206	5/16-18 HEX FLANGE SERRATED NUT
11	2	2967-392	SHIELD, RM COMBO-PAINTED
12	2	2520-467	5/8-11 LOCK HEX JAM NUT ZP
13	1	2966-149	FLOATING RM LINKAGE ASS'Y
14	1	2967-673	LOCKING BUSHING ZYD.
15	3	2520-357	1/2-13 LOCK HEX NUT ZP
16	2	2526-355	1/2 FLAT WASHER HARD'ND ZYD
17	1	2967-678	LOCK STUD ZYD.
18	1	2530-158	PIN, COILED SPRING, 1/4X1-1/2, HD
19	1	2967-699	ADJUSTMENT KNOB (9/07)
20	3	2502-294	1/2-13 X 1-1/2 HHCS GR. 5 ZYD
21	1	2526-402	9/16 ID X 1-3/4 OD X 1/4 MB

REVISED 10/27/16

# PARTS IDENTIFICATION


# 2966-149

DET	QTY	PART NO.	DESCRIPTION
1	4	2520-357	1/2-13 LOCK HEX NUT ZP
2	1	2966-214	STEM W.A.
3	2	2967-110	SHORT PARALLEL ARM ASS'Y
4	1	2966-230	ARM MOUNT W.A.
5	4	2984-349-NP	SUPPORT BUSHING NOT-PAINTED
6	4	2502-316	1/2-13 X 3-1/2 HHCS GR 5 ZP
7	1	2565-179	YETTER DECAL 1" X 3"

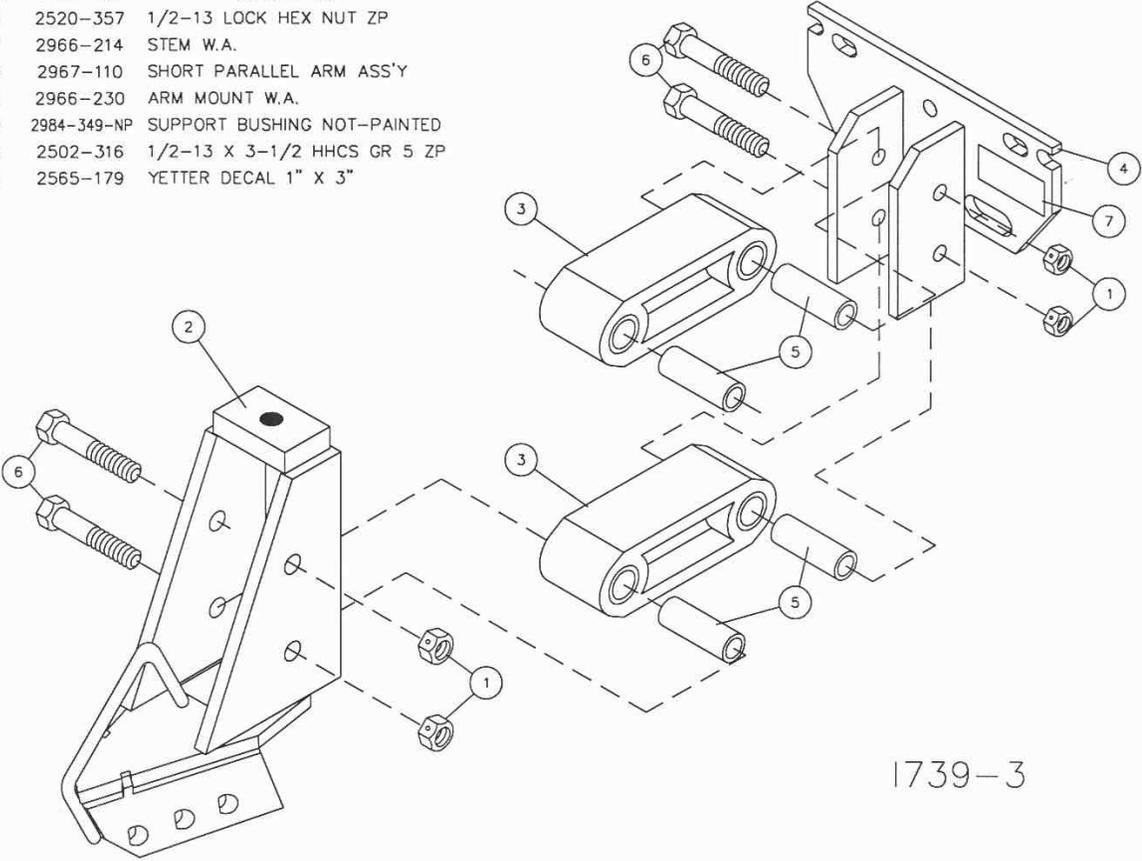

1739-3

## PARTS IDENTIFICATION

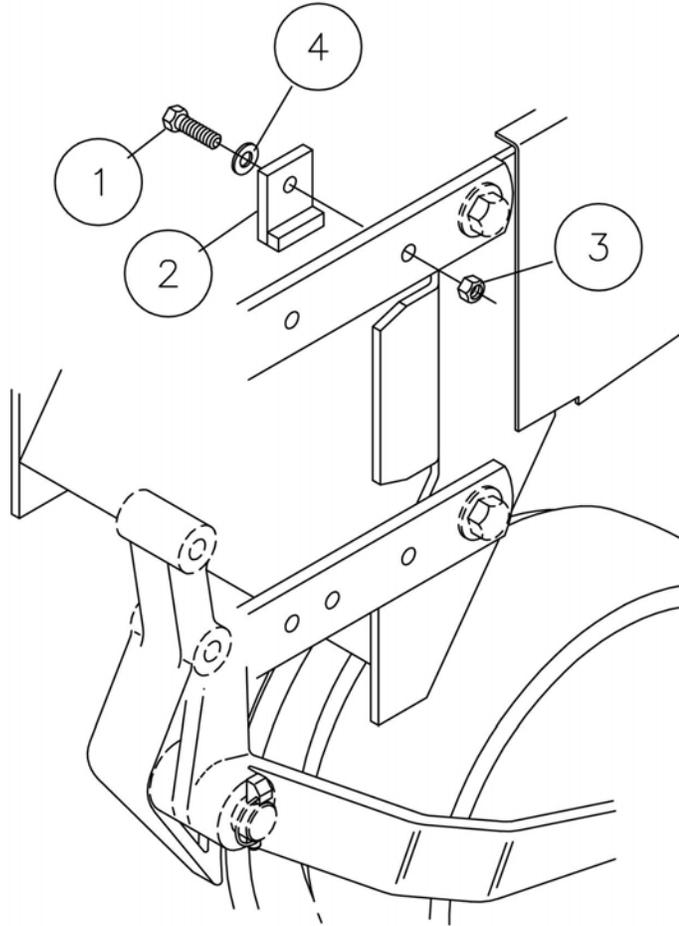

I727-4B

DET	QTY	PART NO.	DESCRIPTION
1	2	2502-244	3/8-16 X 1-1/4 HHCS GR 5
2	2	2960-223	CYCLO STOP
3	2	2520-255	3/8-16 HEX LOCK NUT
4	2	2526-253	3/8 SAE FLATWASHER

# Our name Is getting known

Just a few years ago, Yetter products were sold primarily to the Midwest only. Then we embarked on a program of expansion and moved into the East, the South, the West and now north into Canada. We're even getting orders from as far away as Australia and Africa.

So, when you buy Yetter products . . .you're buying a name that's recognized. A name that's known and respected. A name that's become a part of American agriculture and has become synonymous with quality and satisfaction in the field of conservation tillage.

Thank you.

**YETTER MANUFACTURING CO.**  
Colchester, IL 62326-0358 • 309/776-4111  
Toll Free 800/447-5777  
Fax 309/776-3222  
Website: [WWW.YETTERCO.COM](http://WWW.YETTERCO.COM)  
E-MAIL: [INFO@YETTERCO.COM](mailto:INFO@YETTERCO.COM)

2565-729\_REV\_I • 11/2016