


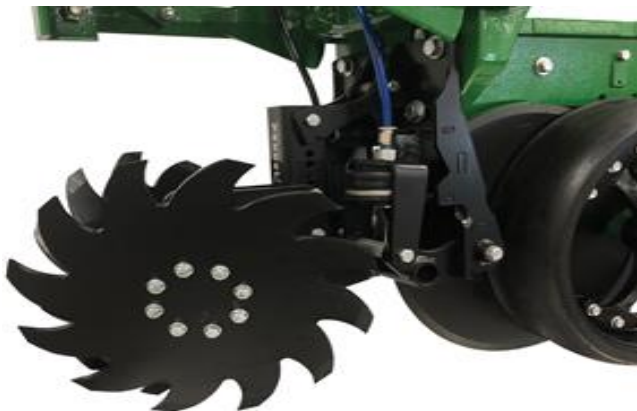

2940 AIR ADJUST RESIDUE MANAGER USING 2940-050A YETTER ELECTRIC COMPRESSOR

OPERATOR'S MANUAL
2565-773_REV_J • 11/2024



*Patented

YETTER MANUFACTURING CO.
FOUNDED 1930

Colchester, IL 62326-0358

Toll free: 800/447-5777

309/776-3222 (Fax)

Website: www.yetterco.com

E-mail: info@yetterco.com

GERMINATE UNIFORMITY™



FOREWORD

You've just joined an exclusive but rapidly growing club.

For our part, we want to welcome you to the group and thank you for buying a Yetter product.

We hope your new Yetter products will help you achieve both goals-increase your productivity and increase your efficiency so that you may generate more profit.

This operator's manual has been designed into four major sections: Foreword, Safety Precautions, Installation Instructions and Parts Breakdown.

This **SAFETY ALERT SYMBOL** indicates important safety messages in the manual. When you see this symbol, be alert to the possibility of **PERSONAL INJURY** and carefully read the message that follows.



DANGER: Indicates an imminently hazardous situation which, if not avoided "will" result in death or serious injury. This signal word is to be limited to the most extreme situations



WARNING: Indicates a potentially hazardous situation which, if not avoided, "could" result in death or serious injury.



CAUTION: Indicates a potentially hazardous situation, which if not avoided, "may" result in minor or moderate injury. It may also be used to alert against unsafe practices.



NOTICE: Indicates information considered important, but not hazard related (e.g., messages relating to property damage).

It is the responsibility of the user to read the operator's manual and comply with the safe and correct operating procedure and to lubricate and maintain the product according to the maintenance schedule in the operator's manual.

The user is responsible for inspecting his machine and for having parts repaired or replaced when continued use of the product would cause damage or excessive wear to the other parts.

It is the user's responsibility to deliver his machine to the Yetter dealer who sold him the product for service or replacement of defective parts, which are covered by the warranty policy.

If you are unable to understand or follow the instructions provided in this publication, consult your local Yetter dealer or contact:

YETTER MANUFACTURING CO.

309/776-4111

800/447-5777

309/776-3222 (FAX)

Website: www.yetterco.com

E-mail: info@yetterco.com

WARRANTY POLICY

Yetter Manufacturing warrants all products manufactured and sold by it against defects in material. This warranty being expressly limited to replacement at the factory of such parts or products as will appear to be defective after inspection. This warranty does not obligate the Company to bear cost of labor in replacement of parts. It is the policy of the company to make improvements without incurring obligations to add them to any unit already sold. No warranty is made or authorized to be made, other than herein set forth. This warranty is in effect for one year after purchase.

Dealer : _____

Yetter Manufacturing warrants its own products only and cannot be responsible for damage to equipment on which mounted.



SAFETY PRECAUTIONS



A brief description of signal words that may be used in this manual:

DANGER: Indicates an imminently hazardous situation which, if not avoided “will” result in death or serious injury. This signal word is to be limited to the most extreme situations.

WARNING: Indicates a potentially hazardous situation which, if not avoided, “could” result in death or serious injury.

CAUTION: Indicates a potentially hazardous situation, which if not avoided, “may” result in minor or moderate injury. It may also be used to alert against unsafe practices.

NOTICE: Indicates information considered important, but not hazard related (e.g., messages relating to property damage).

Consult your implement and tractor operator’s manual for correct and safe operating practices. Be aware of towed implement width and allow safe clearance.

Safety decals are placed on the implement to alert the operator and others to the risk of personal injury or unsafe operation during normal operations and servicing.

1. The safety decals must be kept clean and in good condition to ensure that they are legible.
2. Safety decals must be replaced if they are missing or illegible.
3. When components are replaced during repair or servicing, check that the new components include the necessary safety signs.
4. Replacement safety decals may be obtained from your local dealer.



WARNING

Read these instructions carefully to acquaint yourself with the Equipment. Working with unfamiliar equipment can lead to accidents.

Never park the equipment on a steep incline or leave the equipment running unattended.

Never clean, lubricate or adjust a machine that is in motion.

Always check that straps are secure.

Make sure latches are in pinned position when moving equipment.

Do not allow children to operate this equipment.

Do not allow riders on the equipment, trailer and/or pick-up.

Use speed and caution dictated by the terrain being traversed. Do not operate on any slope steep enough to cause tipping or loss of control.

Read and understand the operator’s manual and require all other persons who will operate the equipment to do the same.

If operating on public roadways, where legal, be certain all lighting is operating properly and observe all traffic laws.

Beware of increased stopping distances and control effort when operating with implements attached.

Be familiar with all controls and be prepared to stop equipment quickly in an emergency.

FAILURE TO HEED MAY RESULT IN PERSONAL INJURY OR DEATH.

TABLE OF CONTENTS

Safety.....	2-3
Bolt Torque.....	4
2940 Components, Kits, Accessories, and Ordering Part Numbers.....	5-9
Introduction & System Requirements.....	10
System Information.....	11-14
Installation Instructions.....	15-37
Installation Guide.....	15
Residue Manager/RM Coulter Combo.....	16-19
Cab Controller.....	20
Compressor	21
Control Box	22
Compressor & Control Box Cable/Harnesses.....	23-24
Dump Valve Assembly.....	24
Airline Routing.....	25
Airline & Dump Valve Diagrams.....	26-37
Operation.....	38-44
Maintenance.....	45-47
Parts Identification.....	47-62
Troubleshooting.....	63

BOLT TORQUE

Mounting bolts and hardware




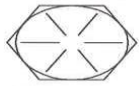
All hardware used on the 2940 Air Adjust is Grade 5 unless otherwise noted. Grade 5 cap screws are marked with three radial lines on the head. If hardware must be replaced, be sure to replace it with hardware of equal size, strength and thread type. Refer to the torque values chart when tightening hardware.



NOTICE: Over tightening hardware can cause as much damage as when under tightening. Tightening hardware beyond the recommended range can reduce its shock load capacity.

Chart below is a guide for proper torque. Use it unless specified torque is called out elsewhere in the manual. Torque is force you apply to wrench handle or cheater bar, times the length of handle/bar. Use torque wrench whenever possible.

The following table shows torque in ft. lbs. for coarse thread hardware.

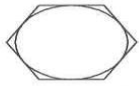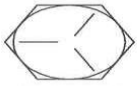BOLT DIA. AND THREADS PER INCH	 GRADE 2	 OR  GRADE 5 A-325	 GRADE 8
3/8-16	25	35	50
7/16-14	35	55	80
1/2-13	55	85	125
9/16-12	75	125	175
5/8-11	105	170	235
3/4-10	185	305	425
7/8-9	170	445	690
1-8	260	670	1030
1 1/8-7	365	900	1460
1 1/4-7	515	1275	2060
1 3/8-6	675	1675	2700
1 1/2-6	900	2150	3500
1 3/4-5	1410	3500	5600

Components, Kits, Accessories, & Ordering Numbers

Residue Manager Kits

2940-001B	Pneumatic Residue Manager (RM) Assembly with choice of wheel kit (JD 1700 & 7200, White 9000)
2940-002B	Pneumatic Narrow RM Assembly with choice of wheel kit (JD 1700 & 7200, White 9000, AME)
2940-003B	Pneumatic RM Assembly with choice of wheel kit (CNH 800 – 1200)
2940-004B	Pneumatic Narrow RM Assembly with choice of wheel kit (CNH 800 – 1200)
2940-005B	Pneumatic RM Assembly with choice of wheel kit (JD 7000, White 6000 & 8000, Kinze 2000, 3000, & 4900)
2940-006B	Pneumatic Narrow RM Assembly with choice of wheel kit (JD 7000, White 6000 & 8000, Kinze 2000, 3000, & 4900)
2940-007B	Pneumatic RM/Coulter Combo with choice of wheel kit & coulter blade (JD 7000, White 6000 & 8000, Kinze)
2940-010B	Pneumatic RM/Coulter Combo with choice of wheel kit & coulter blade (JD 1700 & 7200, White 9000)
2940-018	Coulter Less RM Less Blade for JD 7000, Agco 6000 & 8000, Kinze
2940-019	Coulter Less RM Less Blade for JD 1700, 7200, Agco 9000

Compressor Kit

2940-050A Electric Pneumatic Compressor

Control Kits

2940-053

Pneumatic Control Box w/ Yetter Monitor

2940-053-LM

Pneumatic Control Box Less Yetter Monitor

Air Lines and Wiring Kits

2940-065	6 & 8 Row Wiring/Tubing Kit
2940-067	12 & 16 Row Wiring/Tubing Kit
2940-072	Split Row/Interplant Kit
2940-087	ISOBUS Kit

Compressor Mounting Kits

2940-085	Bracket Two Point Hitch Kit	2940-090	8 X 12 Mount Kit
2940-086	Bracket Draft Tube Kit or Universal Kit	2940-091	8 X 16 Mount Kit

Part Numbers and Descriptions

2940-049 Air Adjust Mount Ext. Kit (For JD HD scrapers)→



2940-100 Data Panel/Cab Controller-----→



2940-101A Electric Pneumatic Compressor -----→



2940-103 Pneumatic Control Box -----→



2940-112 VDM 12 Volt Controller-----→



2940-113 RAM Cab Controller Mount Kit-----→



2940-119 Electric Compressor Rebuild Kit

2940-126A Pneumatic Combo Sub-Assembly (2940-010)

2940-130A Pneumatic Combo Sub-Assembly(2940-007A)

2940-136 Dump Valve Kit-----→

















2940-139 Pressure On Valve-----→



2940-147 Package of 10 Tees-----→



Components, Kits, Accessories, & Ordering Numbers

2940-148	Package of Zip Ties (100) ----->	
2940-149	Manual Kit & Cab Controller Mount Bolt Bag →	
2940-150	Main Power Cable with 80A Breaker----->	
2940-151	10 ft. Main Power Cable Extension ----->	
2940-152	Hitch to Cab Controller CAN Cable----->	
2940-153	Cab Controller IGN/GRD Supply Harness---->	
2940-154	30 ft. Dump Valve Cable Black ----->	
2940-155	30 ft. Dump Valve Cable White----->	
2940-156	15 ft. Dump Valve Cable Black	
2940-157	15 ft. Dump Valve Cable White	
2940-158	3 in. Y Harness Black----->	
2940-159	3 in. Y Harness White----->	
2940-160	5 ft Dump Valve Cable White	
2940-161	5 ft Dump Valve Cable Black	
2940-162	Dump Valve Harness at Compressor----->	
2940-163	20 ft Main Power Extension----->	
2940-164	5 ft CAN Aux To Air Harness----->	
2940-165	10 ft CAN Aux to Air Harness	
2940-166	VDM Power Cable with 40 Amp Breaker--->	

Components, Kits, Accessories, & Ordering Numbers

2940-167
2940-168

10 ft VDM Power Cable Extension-----→
20 ft VDM Power Cable Extension



2940-169

10 ft Cab to Hitch Extension-----→



2940-170
2940-171

10 ft CAN Aux to Air Harness Extension ---→
30 ft CAN Aux to Air Harness Extension



2940-181

Hyd. Compressor Solenoid/Switch Harness→



2940-182
2940-189
2940-190
2940-192

20Ft Hyd. Compressor Control Harness-----→
10Ft Hyd. Compressor Control Harness
Pneumatic RM Assembly (2940-001 - 004)
Pneumatic RM Assembly (2940-005 - 006)



2940-209

CNH Adaptor Bracket (1260/1265 models) →



2940-215

Air Adjust Wheel Mount W.A. -----→



2940-216

Air Adjust Narrow Wheel Mount W.A. -----→



2940-307

Draw Latch for compressor housing lid-----→



2940-336

MAC Dump Valve-----→



2940-337

3/8 Push to Connect (PTC) elbow 1/8 NPT-→



2940-338

3/8 PTC Tee-----→



2940-341

Air Tubing Cutter-----→



2940-342

Ball Valve-----→



2940-345

Black 3/8 Air Tubing 100ft roll-----→



2940-346

Blue 3/8 Air Tubing 100ft roll-----→



Components, Kits, Accessories, & Ordering Numbers

2940-352

3/8 PTC Plug(package of 5)----->



2940-357

Extreme Air Magnum Rebuild Kit----->



2940-358

3/8 PTC Union, Straight----->



2940-374

Tee-1)1/4"NPT male, 2)1/4"NPT female ----->



2940-376

Updated Water Separator Drain Valve Kit-->



2940-377

Compressor Pressure Switch----->



2940-379

PQE Inlet Elbow 1/4 NPT to 3/8PTC----->



2940-380

3/8 PC X 1/8 BSPP O-Ring Straight Fitting->



2940-381

3/8PTC X 1/8BSPP O-ring Elbow Fitting---->



2940-382

Shop Air Adapter----->



2940-383

3/8 PC WYE Fitting----->



2940-386

Shorter Air Bag----->



2940-388

Larger Air Bag----->



2940-390

Extreme Air Magnum Compressor & Filter->



2940-391

100 AMP Compressor Relay, Continuous-->



2940-395

Replacement Filter Element----->



Components, Kits, Accessories, & Ordering Numbers

2940-402	Full PQE Unit----->	
2940-404	Pressure Regulator (part of the 2940-415) →	
2940-408	3/8PTC Elbow Fitting 1/4NPT----->	
2940-415	Water Separator/Regulator Assembly----->	
2940-416	175PSI Tank Safety Relief Valve----->	
2940-430	20 ft Can Aux to Air Harness Extension----->	
2940-439	0 – 160psi Hydraulic Compressor Gauge--- →	
2940-441	Pressure Transducer----->	
2940-598	Plug Cap for Receptacle Protection----->	
2940-599	Plug Cap for Receptacle Protection(metal)→	
2940-609	45 Degree Air Fitting 3/8PC X 1/8NPT ---- →	
2940-635	3/8 PTC X 3/8 NPT 90 Degree Swivel ----->	
2966-293	CNH Adaptor Bracket----->	

INTRODUCTION

The Yetter Electric Air Compressor assembly builds 145psi of air pressure and dispenses that air to the row cleaners' air bags as the operator commands it from the tractor cab. Yetter electric compressors are durably constructed and designed for easy integration to operate the Yetter 2940 Air Adjust System. The ability of the air adjustments allows the operator to adjust the row cleaner precisely on the move without leaving the tractor cab resulting in more acres planted. The precise adjustments give the row units and planter a more even, smoother ride leading to more accurate seed placement and seed depth resulting in a more uniform emergence. **IT IS NOT RECOMMENDED TO PLUMB ANY OTHER PNEUMATICALLY OPERATED SYSTEMS TO USE THE 2940 YETTER ELECTRIC COMPRESSOR AS ITS AIR SOURCE.**

SYSTEM REQUIREMENTS

POWER SUPPLY

The compressor and the VDM (Valve Drive Module) each use 12V from the battery.

The 2940-100 Cab Controller uses a switched power source. The 2940-153 will need connected to a switched power source. (Connector to the tractor not included)

6CFM @ 0psi, 2.6CFM @ 100psi. 12 gallon storage tank.

OEM ELECTRIC COMPRESSORS ON PLANTERS ARE NOT AN ADEQUATE SOURCE OF AIR TO OPERATE THE YETTER 2940 AIR ADJUST SYSTEM!

A CIGARETTE LIGHTER OUTLET ISN'T A SWITCHED POWER SOURCE AND THEREFORE SHOULD NOT BE USED.

SWITCHED POWER SOURCE CONNECTOR PART #'S:

JOHN DEERE P/N: RE67013

CNH P/N: 187103A1

CAT P/N: AG233356

FUSE PROTECTION

To protect the compressor assembly & VDM from damage always ensure the integrity of the integrated 40 amp and 80 amp circuit breaker at the tractor battery where cable connects to the battery in case of short or over-circuit. When connected correctly, the tractor has a fuse to protect the cab controller located in the tractor's fuse panel. **NEVER MOUNT THE COMPRESSOR ASSEMBLY MORE THAN 50 FEET FROM THE BATTERY USING THE PROVIDED MAIN POWER CABLES. THIS WILL WEAKEN THE 80AMP BREAKER TO THE POINT OF FAILURE. IF MORE THAN 50 FEET IS NEEDED, BUILD POWER CABLE(S) TO LENGTH USING 00 GAUGE CABLE!**

AIR COMPRESSOR MAINTENANCE

To prolong life expectancy of the compressor, clean the filter on a regular basis by removing the element from the housing, tapping it on a hard surface, exposed side down. This will empty the pleats of the filter of collected dust. If the dust has been wet or will not clean out, call Yetter to order a new element, part number 2940-395. You may lightly blow out the interior of the upper housing using an air tool. The housing and filter should be checked every two days of field operation, or more if conditions are very dusty.

See pages 45 for further maintenance.

CONNECTIONS



FAILURE TO LINE UP TABS WHEN PLUGGING MALE INTO FEMALE CONNECTORS CAN RESULT IN SHORT CIRCUIT. ALSO CHECK TAB AND SLOT SIZES, PLUGGING CONNECTORS IN BACKWARDS WILL RESULT IN FAULTY SYSTEM!!


2940 AIR ADJUST SYSTEM INFORMATION

The 2940 Air Adjust Residue Manager control system consists of five primary components and kits. These parts include; Residue Manager (RM) or Residue Manager Coulter Combo Kit, Cab Controller, the Yetter Electric Air Compressor Assembly, Compressor Mounting Kit and the necessary Wires, Air Lines, and Fittings Kit.

Residue Manager

RM/Coulter Combo

Each of these kits will include the required brackets, wheel assemblies, & mounting hardware for installation to the row unit.

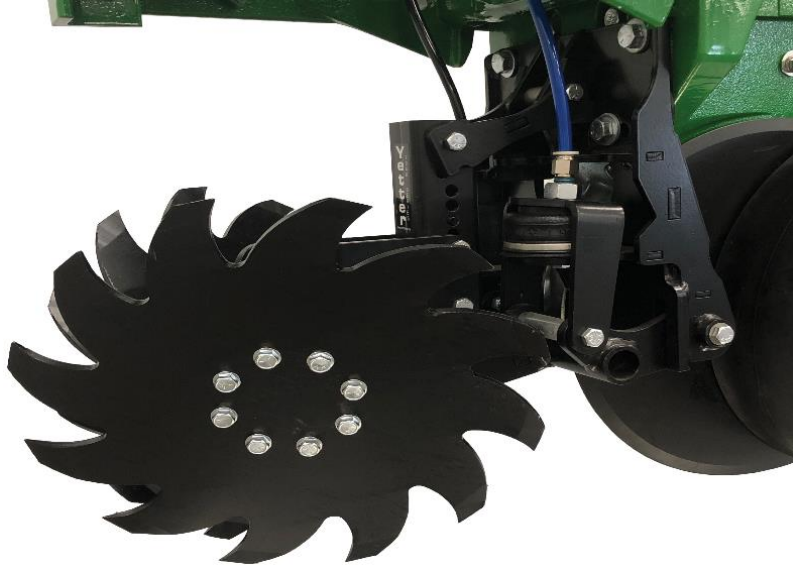

Cab Controller

2940-100



The Cab Controller will use the RAM mount provided for installation in cab. Hold the POWER button to turn the cab controller on & press ENTER to activate the system. Make adjustments quickly & accurately during planting with the cab controller. Adjust up & down pressure to create the ideal "ride" or floating position for residue managers. Lift & down pressure settings can be adjusted independently. Down pressure can be increased to fix row cleaner in the rigid position. Five presets can be programmed within the controller for quick changes. Residue Managers can be raised as needed with a push of the Roman numeral I up button.

RAM Mount



Serial Number

There are 2 serial numbers to identify production dates & software.

Cab Controller Serial Number




VDM Serial Number




Serial Number Location

Air Compressor Assembly

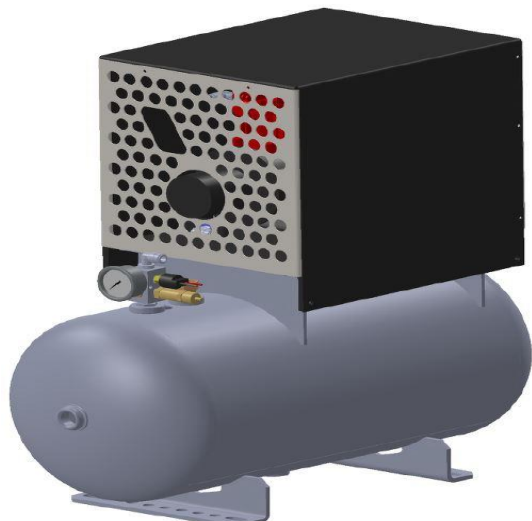

2940 Air Adjust requires a stable air supply source that can provide a minimum 145psi of clean, dry air. The 'clean, dry air' is a key component of the air supply, moisture within the air supply can shorten the life-cycle of the system. Another key component is having a leak free system to reduce the duty cycle and compressor hours, extending the service life.

2940-101A External Lay Out

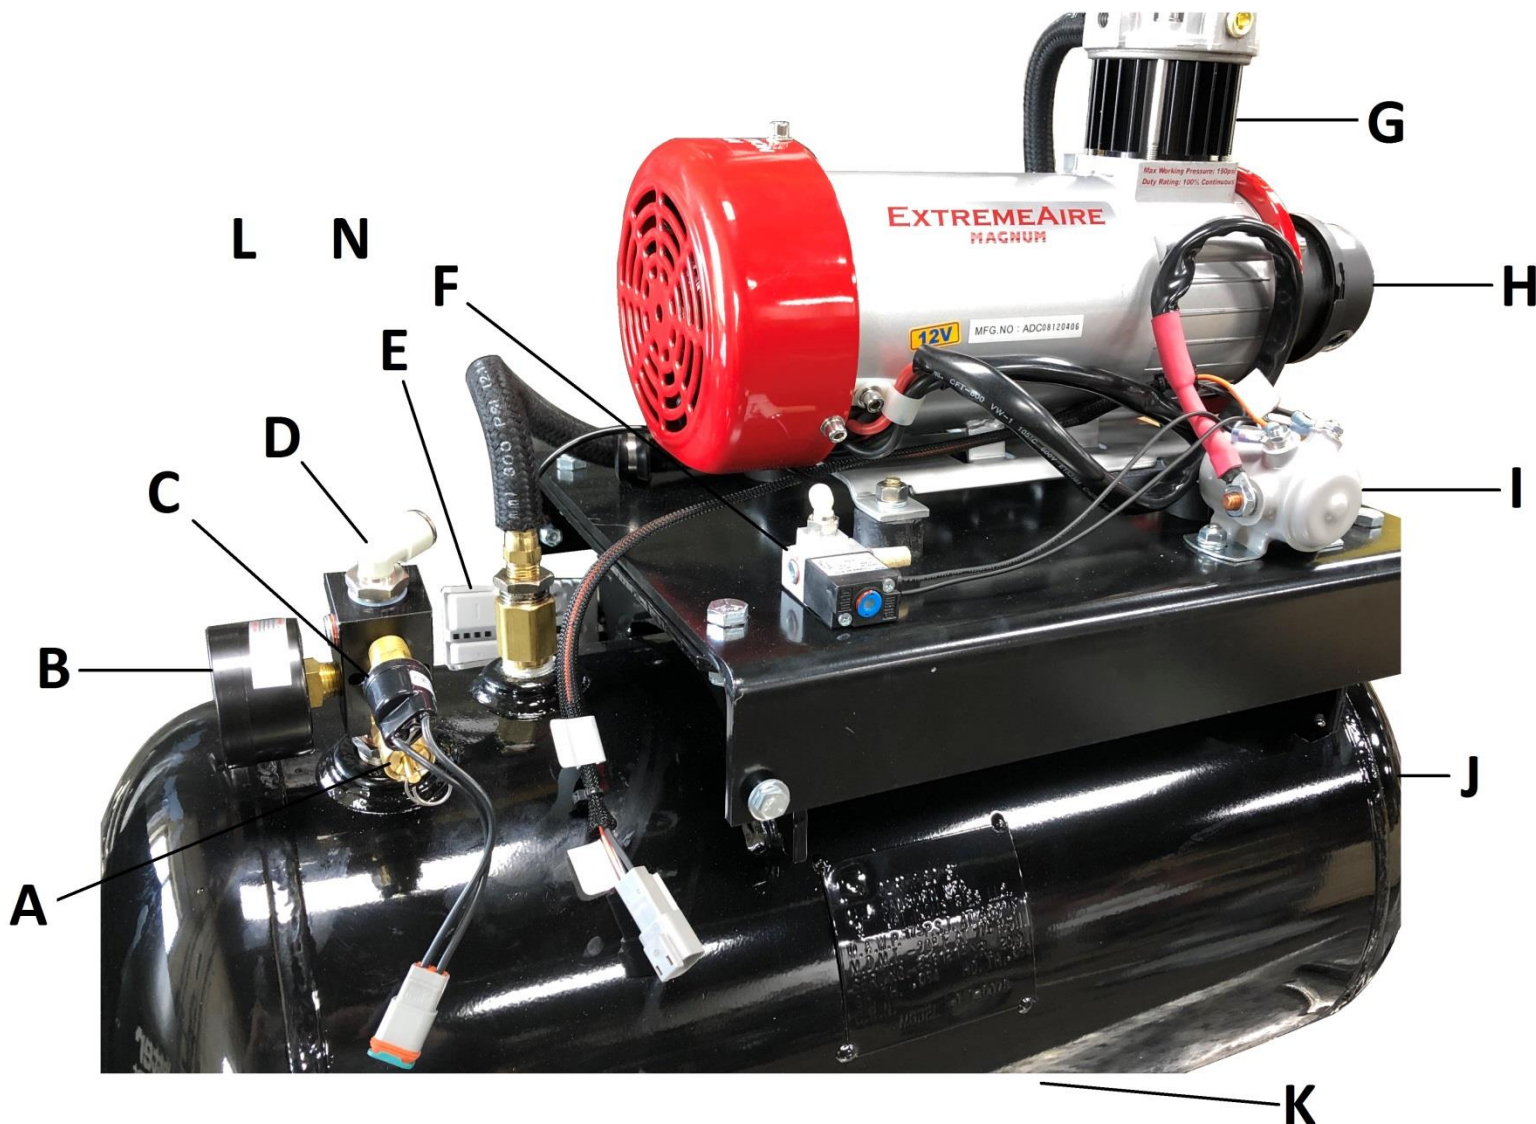

- A – 2940-416 175psi Safety Relief Valve
- B – 2940-439 0 – 160psi Compressor Gauge, 1/4"NPT
- C - 2940-377 Pressure Switch 125psi – 145psi
- D – 2940-635 3/8"PTC X 3/8NPT 90° Fitting
- E – No Part # Main Power Connector
- F – 2940-336 Head Pressure Relief Valve

- G – 2940-390 Electric Air Compressor
- H – 2940-395 Replacement Filter Element
- I – 2940-391 100 Amp Compressor Relay
- J – 2940-440 12G Tank Assembly
- K – No Part # Tank Drain Valve

Control Box

The 2940-103 control box communicates with the 2940-100 cab controller via the VDM and dispenses air out of the Pneumatic Quick Exhaust (PQE) as the operator commands it. The VDM is the valve drive module that is programmed to carry out each function of the system. **Serial # is located on the front of the VDM in the compressor assembly. See photo below.**



Serial Number Location

2940-103 Control Box External Lay Out


2018 – 2020 Model



- A. **WHEEL TRACK DOWN PRESSURE PORT**- Safely route black airline from the WT port to the inlet port of the down pressure dump valve on the center/wheel track rows of the planter. The down pressure on the center section residue managers (RM) or RM/Coulter Combo can be adjusted separately than the wing/outer sections down pressure to make up for tractor/planter tire compaction. WT should be set 2-5 psi heavier than RD. If the WT port is not used, install a plug (2940-352) to prevent air loss.
- B. **RESIDUE MANAGER DOWN PRESSURE PORT**- Safely route black airline from the RD port to the inlet port on the down pressure dump valves on the wing/outer sections of the planter. This port dispenses down pressure to the RM or RM/Coulter Combos on the wing/side of the planter.
- C. **RESIDUE MANAGER UP PRESSURE PORT**- Safely route blue airline from the RU port to the inlet port of the up pressure dump valves on each section of the planter. This port dispenses up pressure to each RM or RM/Coulter Combo on the planter.
- D. **12 PIN DEUTSCH CONNECTOR (BLACK)**- Depending on application, route 2940-164 or 2940-165 CAN AUX cable from rear of the tractor to this female connector. If the control box is mounted at the rear of the planter, 2940-170, 2940-171, or 2940-430 CAN AUX extensions will route to this female connector.
- E. **12 PIN DEUTSCH CONNECTOR (GRAY)**- Connect the 2940-162 dump valve cable and route to the dump valves. The 2 pin cable labeled RM UP DUMP (yellow/black wires) routes to all up pressure dump valves. The 2 pin cable labeled RM DOWN DUMP (orange/black wires) routes to all down pressure dump valves. The 2 pin cables labeled Aux 3 and Aux 4 are not used.
- F. **MAIN AIR SUPPLY INLET**- Plumb the 2940-367 250psi rated 3/8" airline from the hydraulic compressor to the inlet (water trap side) of the water separator/regulator assembly. Plumb 2940-345 3/8" black airline from outlet (regulator side) of the water separator/regulator assembly to this port.
- G. **ACCESSORY AIR OUTPUT**- Remove brass cap or plug to install fitting for miscellaneous uses. (ex: air tools) **DO NOT REMOVE WHEN SYSTEM IS PRESSURIZED!**
- H. **DUMP INLET**- Install the 1/4" airline from the bottom of the water separator into this port.
- I. **DUMP EXHAUST**- Install 1/4" airline in this port and route toward the ground. (this will drain condensation from the water separator)
- J. **COMPRESSOR COMMUNICATION CONNECTOR**- Sends power to the pressure switch & solenoid (see page 24)

2940-103 Control Box Internal Lay Out

2018 – 2020 Model

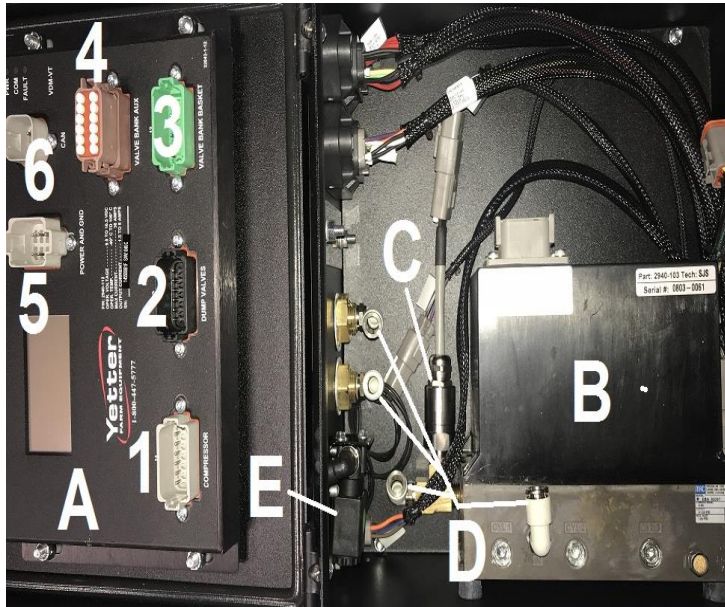

- | | |
|--------------|--|
| A – 2940-112 | VDM |
| 1. | J1 Compressor Communication |
| 2. | J2 Dump Valve Communication |
| 3. | J3 PQE Communication |
| 4. | J4 Plugged(used only with 2940-054 kits) |
| 5. | J5 VDM Power and Ground |
| 6. | J6 Cab Controller Communication |
| B – 2940-402 | PQE |
| C – 2940-441 | Pressure Transducer |
| D – 2940-379 | PQE Inlet Elbow |
| E – 2940-376 | Water Separator Dump Valve |
| F – 2940-135 | Pressure On Valve |

Harness, Airlines, and Fittings Kit



12V-DC cables will be used to power the Compressor, VDM, Cab Controller, and Dump Valves. Flexible tubing will be used to move air from the external ports of the PQE to each air bag. Each kit will include pneumatic lines for both circuits, down and lift, as well as the fittings to make connections and cable ties to securely fasten the lines to the planter. Note: All 2940 Air Adjust kit include a tubing cutter within the kit.

The 2940-341 tubing cutter should be used for every cut to ensure a clean, square cut.



2940 Air Adjust Installation Guide Outline

STEP 1: RESIDUE MANAGER (RM) OR RM/COULTER COMBO INSTALLATION

Residue Manager Only: Install the RM Assembly using mounting hardware. When installing wheel mount assembly on the adjustment tube of the RM Assembly, place the top hole of the wheel mount to the 4th or 5th hole from the top of the adjustment tube for conventional tillage or mellow soils, 5th or 6th hole from the top for no/minimum till conditions. Install wheels on wheel mounts using hardware from the 2966-119 bolt bag. Install the RM wheels so that the left wheel leads, right wheel trails on the left side of the planter & the right wheel leads, left wheel trails on the right side.

RM/ Coulter Combo: Install the RM/Coulter Combo assembly using hardware from the 2940-128 bolt bag. Mount the coulter blade on the coulter arm hub & mount the RM wheels using the 5/8 Whiz Lock Nuts. RM wheels on combo units will install in the rear holes on both sides on all rows. It is recommended to set the coulter blade equal to or above seed depth. [Refer to the diagrams on pages 16 - 19](#)

STEP 2: INSTALLING 2940-100 CAB CONTROLLER

Mount the 2940-100 Cab Controller & 2940-113 RAM Mount in the tractor cab. Position the Cab Controller within reach during operation without compromising safety/visibility from the cab. Connect the 2940-152 harness to the female 6 pin connector on the back of the cab controller & route the black CAN connector towards the hitch of the tractor. Connect the 2940-153 2 pin connector to the female 2 pin connector on the back cab controller. Splice the red & black wires to the appropriate connector to fit the tractor's switched power source. [Refer to the diagram on page 20](#)

STEP 3: INSTALLING COMPRESSOR ASSEMBLY & POWER CABLES

COMPRESSOR: Begin by locating a suitable mounting location for the compressor assembly. Placement of the compressor assembly will vary on the make and model of the planter. Use mounts supplied or depending on application, [different mounts may need to be built](#). NOTE: Be sure to check clearance of compressor assembly in all locations, especially noting tractor tires during turns, folding/unfolding the planter for transport mode, markers, and 2-point top link. The compressor must be mounted using 50 feet or less of main power cable extensions from the operating tractor's battery. If over 50 feet, heavier gauge power cables (00) must be built or purchased in the correct length.

POWER CABLE: Install the 2940-150 main power cable with 80amp breaker on the battery terminals (red is positive+, black is negative -). Next, connect the appropriate length of main power extensions (2940-151 or 2940-163) off of the 2940-150, route the main power extensions to large Anderson power connector coming out of the 2940-101A compressor assembly housing, & install. Install the 2940-181 Y harness on the compressor. [Refer to the diagram on pages 21 & 23](#)

STEP 4: CONTROL BOX AND HARNESS INSTALLATION

CONTROL BOX: Mount the control box in a safe location with mounts/hardware supplied. Install the 2940-415 water separator/regulator assembly near the control box. Measure & cut the 2940-367 250psi rated 3/8" airline, install airline from outlet elbow on compressor into the 2940-415 inlet (water trap side). The regulator is preset to only allow 100psi of clean, dry air beyond it. Install 2940-345 3/8" airline from the 2940-415 outlet (regulator side) to control box inlet. Install 1/4" airline from the elbow on the bottom of the 2940-415 to the 1/4" PTC fitting closest to the door hinge on the side of the control box. Route 1/4" airline from remaining 1/4" PTC fitting on the 2940-103 toward the ground, as airline will dispense moisture.

HARNESS: Install the 2940-166 VDM power cable with 40amp breaker on the battery terminals (red is positive+, black is negative -). Install the appropriate length VDM power extension (2940-167 or 2940-168) off of the 2940-166, route to the hitch of the tractor to install into the matching connector on the CAN AUX to Air Harness. Lastly, install the CAN AUX to Air Harness, 2940-164 (5ft) or 2940-165 (10ft). The smaller Anderson power connector will connect to the VDM power extension, the black CAN connector connects to the other black CAN connector that routes to the cab controller, & the black male 12 pin Deutsch connector connects to the black female end on the side of the control box housing. 2940-170 (10ft), 2940-171 (30ft), or 2940-430 (20ft) CAN AUX to Air Extensions may be necessary if the control box is mounted further back on the planter than the hitch. Install the compressor communication harness, 2940-182 or 2940-189 into the 4 pin connector on the control box and route to the compressor and install into the 2940-181 Y harness. [Refer to the diagram on page 22 - 24](#)

STEP 5: DUMP VALVE & DUMP VALVE HARNESS INSTALLATION

Install the dump valves (DV) to the planter as shown in the diagram that matches your planter. 16 row planters and less will have 1 up pressure & 1 down pressure DV on the middle of each wing/side & 1 up pressure & 1 down pressure DV on the wheel track (WT) or center rows. 24 row planters & larger will have 3 DVs per wing/side; 2 down pressure & 1 up pressure, & 2 DVs on the WT rows, 1 up pressure & 1 down pressure. Install the gray male 12 pin Deutsch connector of the 2940-162 into the gray female 12 pin Deutsch on the bottom side of the compressor assembly housing. The 2940-162 will have 4) 2 pin pig tails. The connector labeled RM Up Dump (yellow/black wires) will connect to all up pressure DVs using 2940-155 (30ft), 2940-157 (15ft), & 2940-160 (5ft) white DV harnesses. Use 2940-159 white Y harnesses to connect all white DV cables together. The connector labeled RM Down Dump (orange/black wires) will connect to all down pressure DVs using 2940-154 (30ft), 2940-156 (15ft), 2940-161 (5ft) black dump valve harnesses. Use 2940-158 black Y harnesses to connect all black DV cables together.

CONNECTORS LABELED AUX 3 & AUX 4 WILL NOT BE USED! [Refer to pages 24 - 36](#)

STEP 6: PLUMBING AIRLINES

A group of airlines that route to the residue manager air bags are referred to as trunk airlines. The airline routing from the RU, RD, & WT to the inlet of the DV for the matching circuit is referred to as a supply airline. Start by routing the trunk airlines: route black (down pressure) & blue (up pressure) airline on each wing/side of the planter. If installing on a split row planter, keep the airline on the front rank residue managers on each wing plumbed separate from the back rank. When plumbing in the WT (wheel track) rows, use the center 4 or 6 rows that plant over the tractor & planter wheel tracks. If equipping on a narrow transport planter with 4 center rows & 6 rows are desired on the WT circuit, tie in the 1 row on each wing/side of the planter closest to the first & last center row. Use supplied tees to make enough open ports in each circuit to install supply airline to the inlet port of each DV of the matching circuit. Also use tees to connect the outlet port of the DVs to the matching circuits of the trunk airlines. On split row planters, a ball valve will be used to shut air off to bean rows when planting corn. [Refer to the diagrams on pages 25 - 37](#)

STEP 7: PERFORM A PRE-OPERATION TEST OF THE SYSTEM

Now that the system is installed, perform a pre-operation test. Start by folding/unfolding & lowering/raising the planter to check for enough slack in airline & in harnesses at hinge points. Check all electrical connections, cables, & airline making sure nothing was damaged. Next, turn on the cab controller by holding the power button. After the cab controller is on, turn all pressures (RU, RD, and WT) to 0psi & press ENTER to activate the system. The compressor will turn on, build to 95psi & turn off. Check the interior of the compressor housing (PQE, Pressure on Valve, & airline within the housing) for leaks. Apply 30psi to the RU port & watch your row cleaners as they should all rise to maximum up travel. Check for leaks on all up pressure circuits & fittings. When that leak check is finished, turn RU to 0psi & turn RD & WT to 30. Check all down pressure airline & fittings in these circuits for leaks & repair as needed. [Refer to page 42 - 44](#)



Residue Manager(RM) Installation

CAUTION: ENGAGE THE CYLINDER STOPS ON THE PLANTER LIFT WHEELS TO "LOCK" THE PLANTER IN THE UP POSITION


Installation overview:

- Prior to installation of each RM mounting bracket assembly, check the freedom of motion of the parallel linkage or pivot arm.
- The installation process should be done with the planter raised, half folded for transport, & the row units fully extended down.
- Install the 2940 RM or RM/Coulter Combo mounting bracket assembly centered & level side to side on each planter row unit.
- If planter manufacturer is John Deere & equipped with HD scrapers on the True V opener blades, a 2940-049 kit will need installed to space the RM or RM/Coulter Combo mounting bracket assembly out to avoid interference. **(See page 48)**

For John Deere, Kinze, & White Models Installing RM Only

Step 1: Place 1) Pneumatic RM Assembly, 1) Mounting Hardware Bolt Bag (2940-142), 1) Wheel Mount Weld Assembly (2940-215 or 2940-216), 1) RH Wheel Assembly (2966-140), 1) LH Wheel Assembly (2966-141), & 1) Wheel Mount Bolt Bag (2966-119) at each planter row unit. Install the Pneumatic RM assembly using 3) 1/2" X 1-1/2" GR5 bolts, 6) 1/2" flat washers, & 3) 1/2" lock nuts. Use the diagram below for hole alignment, as well as direction of the mounting bolts. Tighten the hardware.

Tools needed are 3/4" socket, 3/4" wrench, impact, & 10" extension.

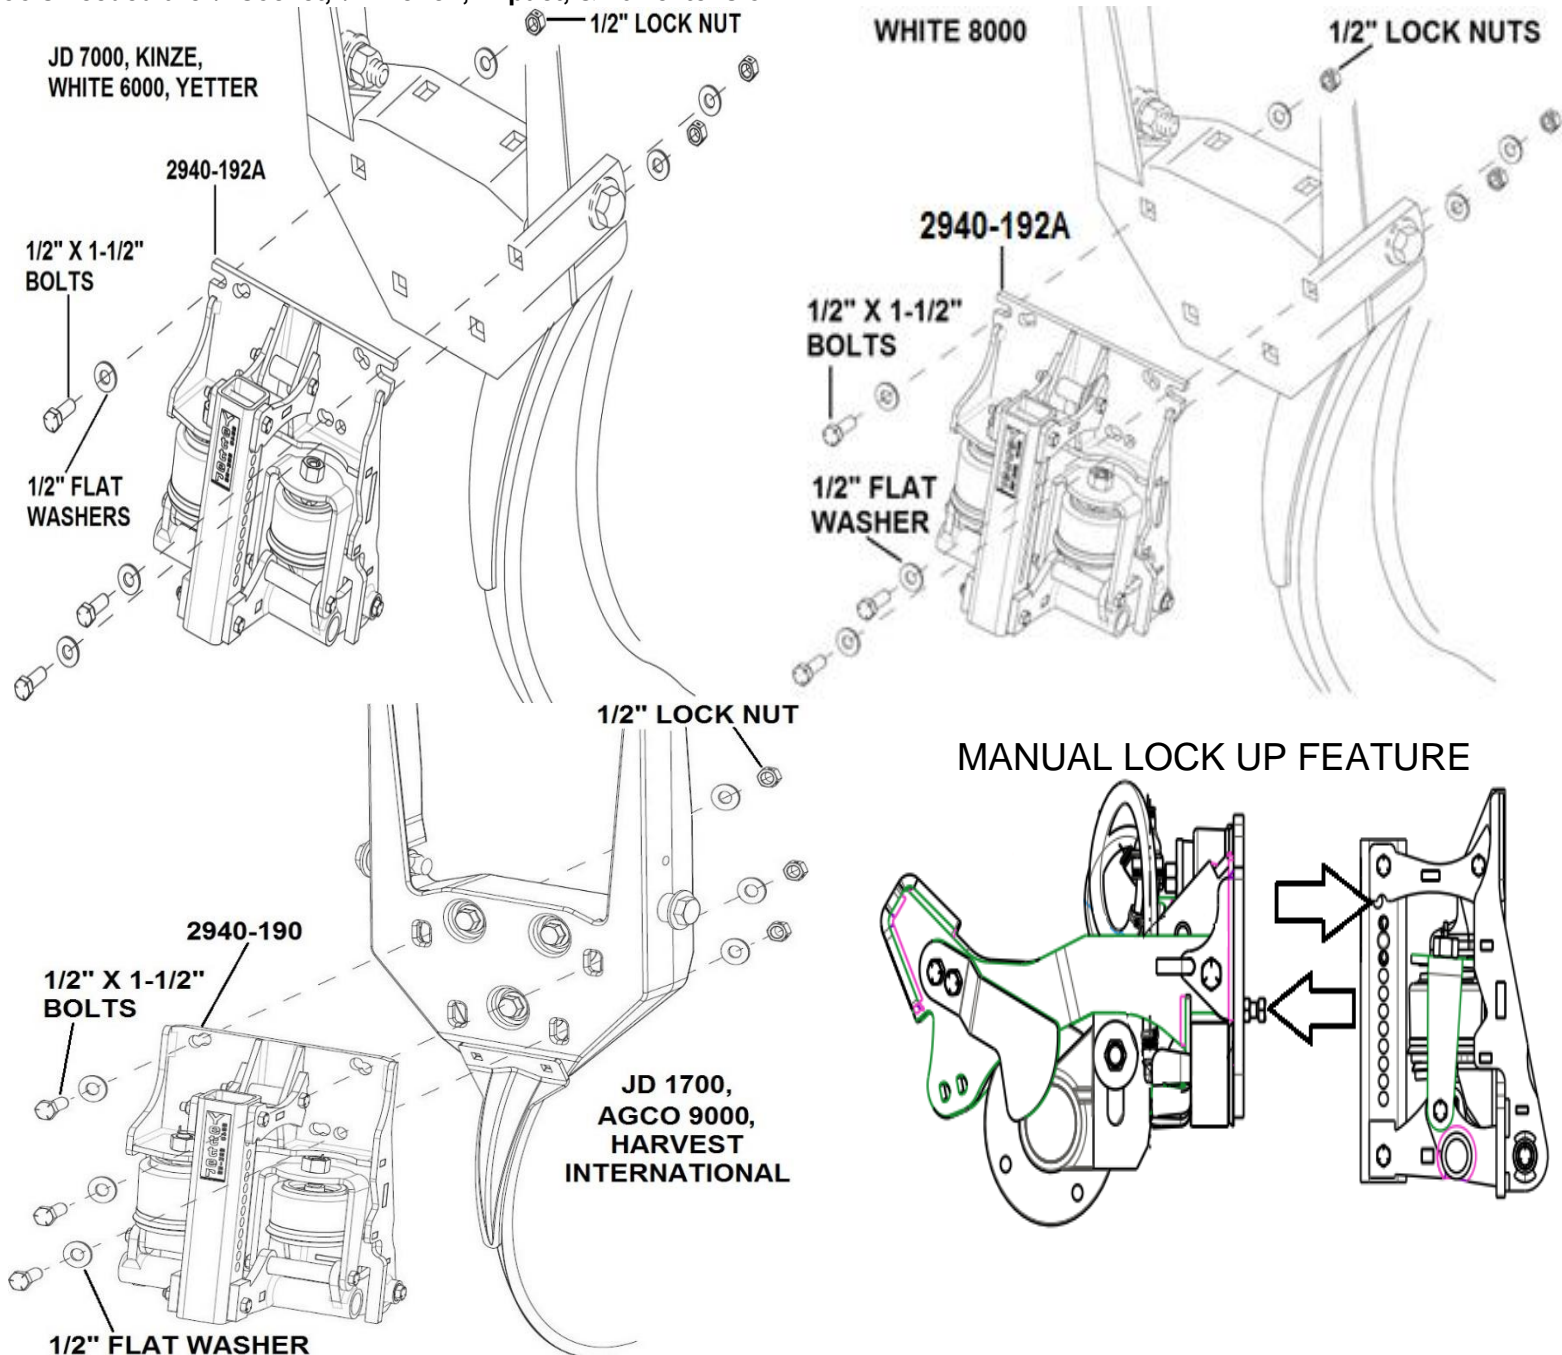


NOTE: AGCO 9000 units will use 1/2" x 2" mounting bolts!


For Case Models Installing RM Only

Step 1: 800 – 1200 SERIES: Place 1) Pneumatic RM Assembly (2940-190), 1) CNH Adaptor Bracket (2940-209), 1) CNH Mounting Bolt Bag (2940-145), 1) Wheel Mount (2940-215/2940-216), 1) Cyclo Stop Casting Bolt Bag (2965-135), 1) RH Wheel Assembly (2966-140), 1) LH Wheel Assembly (2966-141), & 1) Wheel Mount Bolt Bag (2966-119), & 2) Bearing Shields (2967-392) at each row unit. Mount the 2940-190 to the 2940-209 using 3) 1/2" X 1-1/2" GR5 bolts (note the bolt direction), 3) 1/2" flat washers, & 3) 1/2" lock nuts. Mount this assembly to the row unit attachment casting using 2) 1/2" X 3-1/2" bolts & 2) 1/2" lock nuts. Install the 2) Cyclo Stop casting pieces to each upper parallel arm using either A) 3/8" X 1-1/4" bolts, 3/8" washer (not shown), & 3/8" lock nuts or B) 1/2" X 1-1/4" bolts & 1/2" lock nuts. Note the direction of the mounting bolt.

2100 SERIES: Place 1) Pneumatic RM Assembly (2940-190), 1) Mounting Hardware Bolt Bag (2940-142), 1) Wheel Mount W.A. (2940-215/2940-216), 1) RH Wheel Assembly (2966-140), 1) LH Wheel Assembly (2966-141), & 1) Wheel Mount Bolt Bag (2966-119), & 2) Bearing Shields (2967-392) at each planter row unit. Use the same bolt direction as below. The top 2 mounting bolts will be the same as diagram below. Use the bottom hole that is aligned with the OEM CNH faceplate adaptor. Tools needed are 3/4" socket, 9/16" socket, 3/4" wrench, 9/16" wrench, impact wrench, & 10" extension.

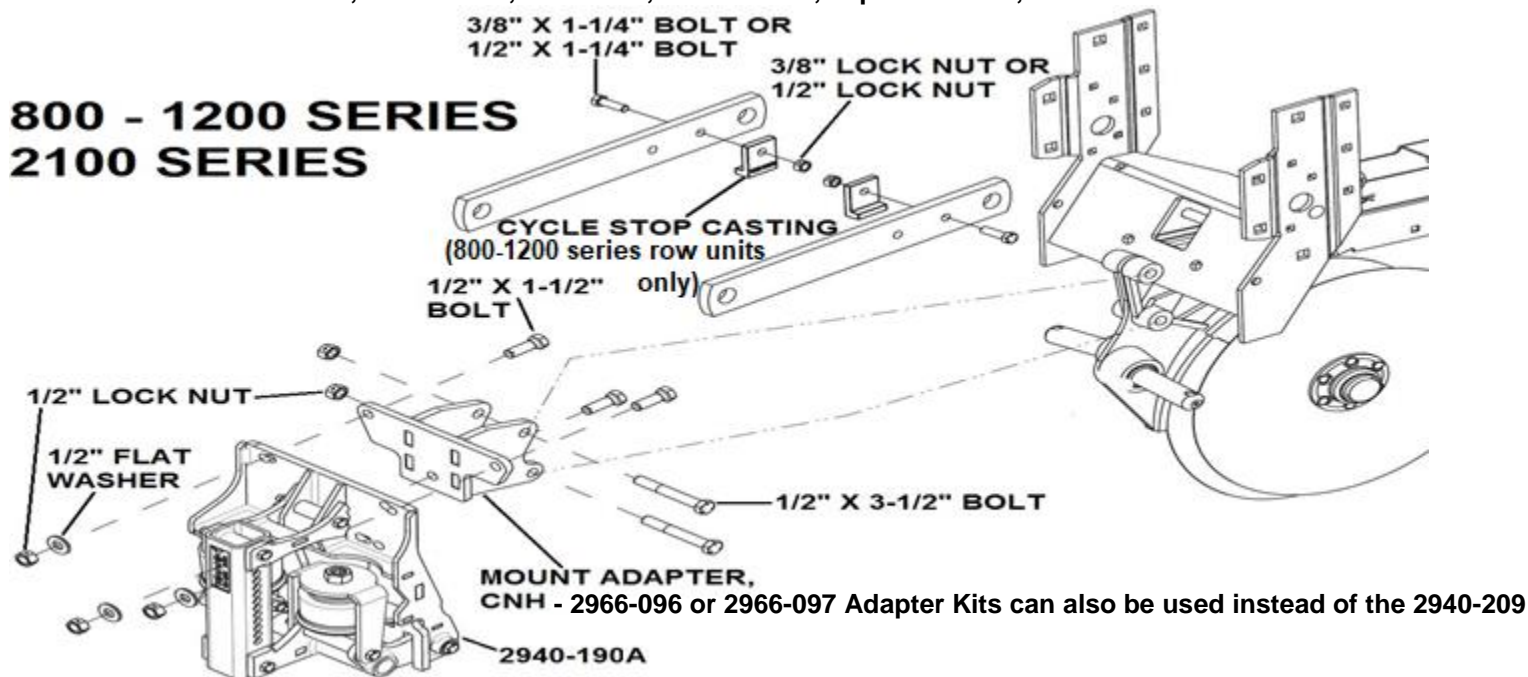


Step 2: Install 1) 2940-380 3/8" PTC X 1/8" BSPP male fitting to each air bag using an 11/16" wrench. Do not over tighten.

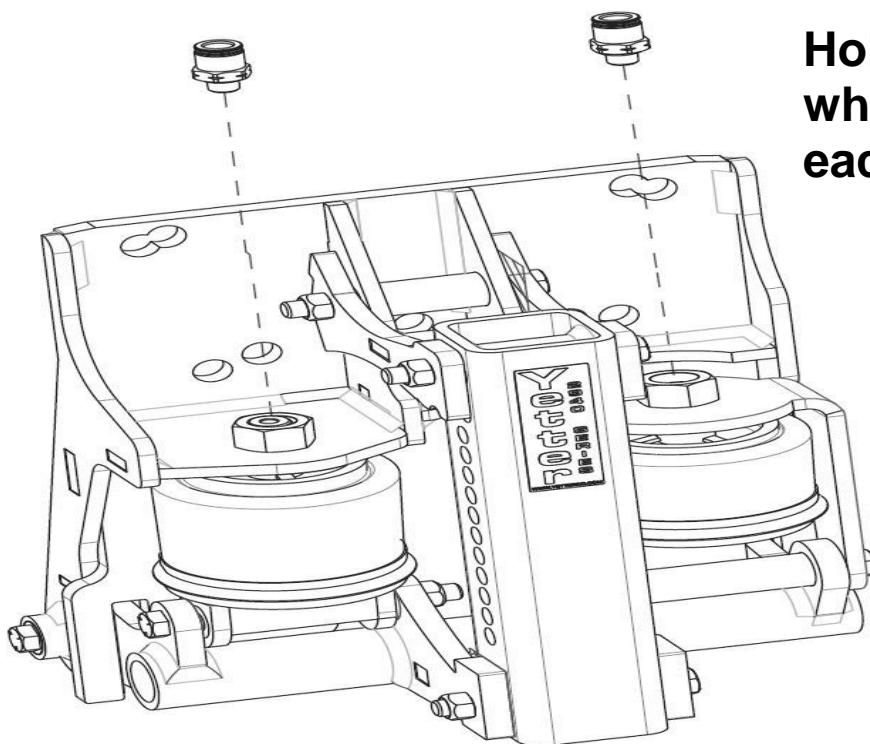


Hold the air bag while tightening each air fitting.

Residue Manager Installation Con't

Step 3: Install the Wheel Mount (2940-215 or 2940-216) on the adjustment tube of the mounting bracket assembly. Recommended mounting location is 5th hole down from the top of the adjustment tube mounts to the top hole of the wheel mount. Adjustments may need to be made depending on tillage practice, soil conditions, and/or residue thickness. **Tools needed are a 9/16 socket, 9/16 wrench, impact, and a 10" extension.**

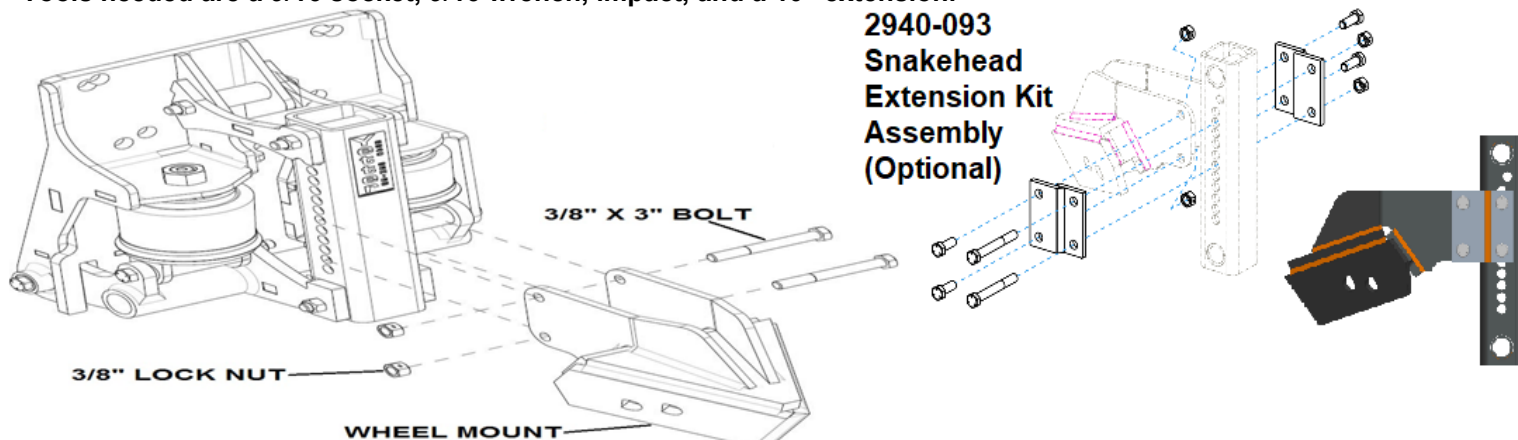

Step 4: Mount RM wheels on wheel mount using 2) 5/8" lock washers & 2) 5/8 hex nut. Mount wheels so left side of planter has left wheel leading, right wheel trailing. Mount wheels so that right side of the planter has right wheel leading, left wheel trailing. Right & left is determined by standing behind the planter looking at the tractor or sitting in the tractor facing forward. Diagram below is proper installation for the right side of the planter. **Tighten using a 15/16 wrench. (Ratcheting wrench if available)** **Note: Properly install row cleaner wheels so that wheel teeth curve back when entering field debris.**

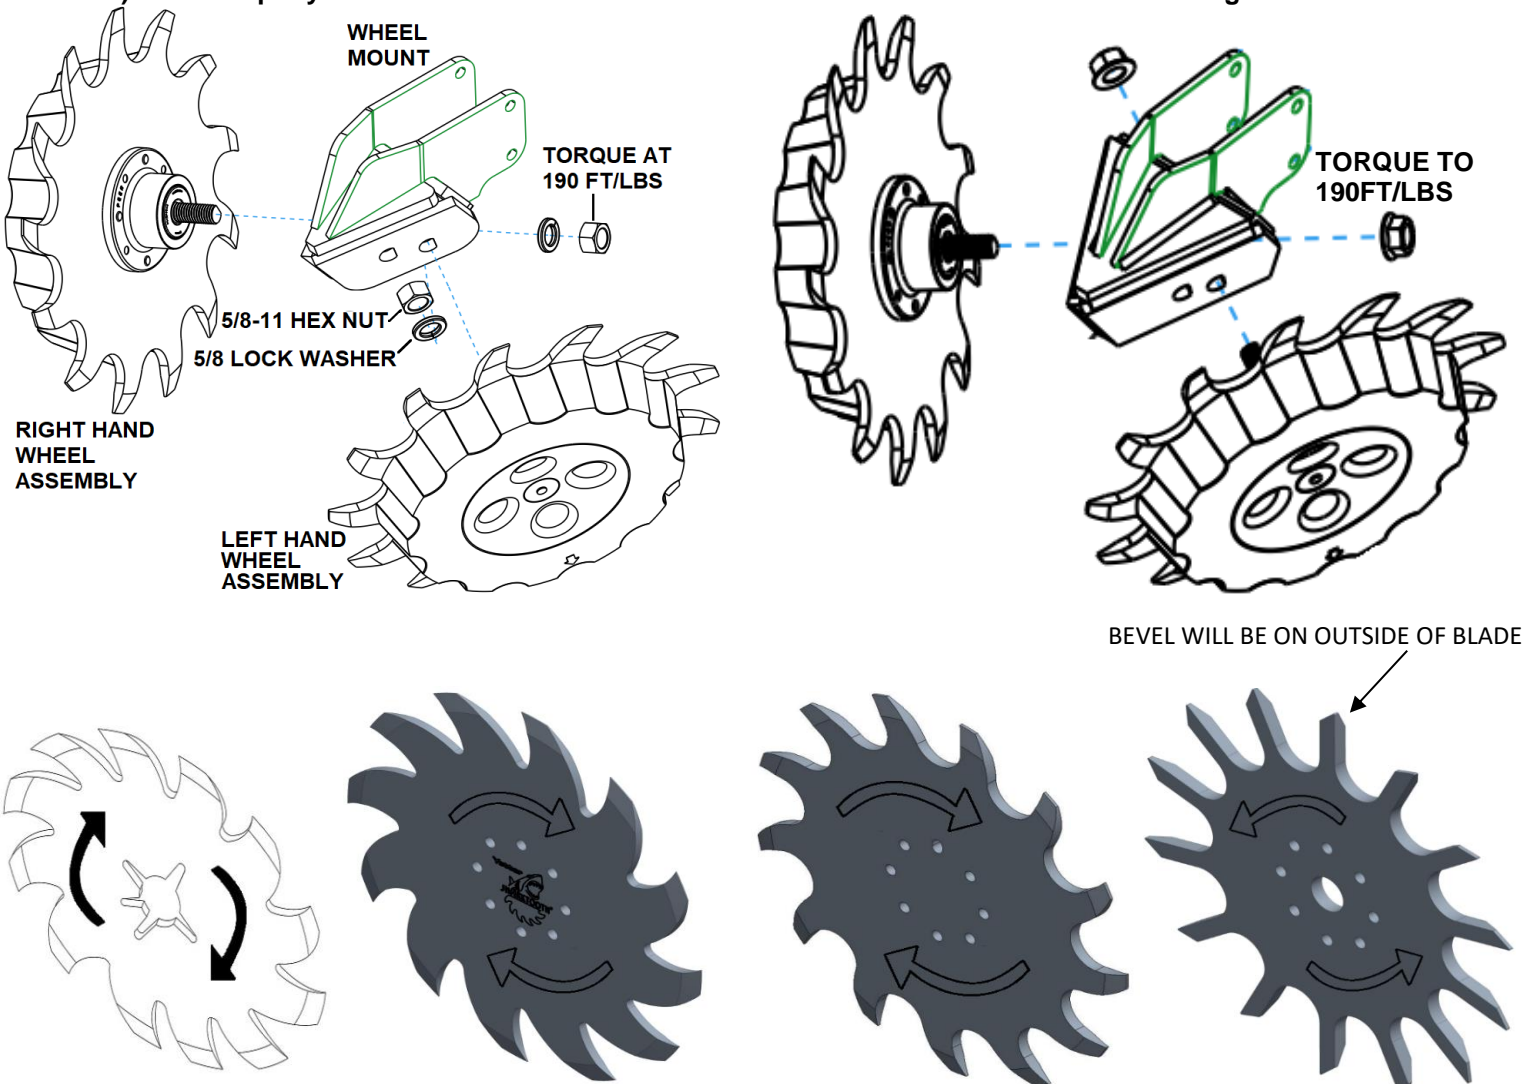


CAUTION: It is highly recommended to wear gloves when tightening wheels!


RM/Coulter Combo Installation

Step 1: Place 1) RM/ Coulter Combo assembly, 1) Coulter Blade, 1) Mounting Bolt Bag (2940-128), 1) RH wheel assembly (2966-116), & 1) LH wheel assembly (2966-117) at each row unit. Mount RM/Coulter Combo assembly to row unit face plate using 3) 1/2" X 1 1/2" bolts & 3) 1/2" lock nuts. See diagrams below for bolt alignment & bolt direction. Tighten hardware.

Tools needed are 3/4" socket, 3/4" wrench, impact, & 10" extension.

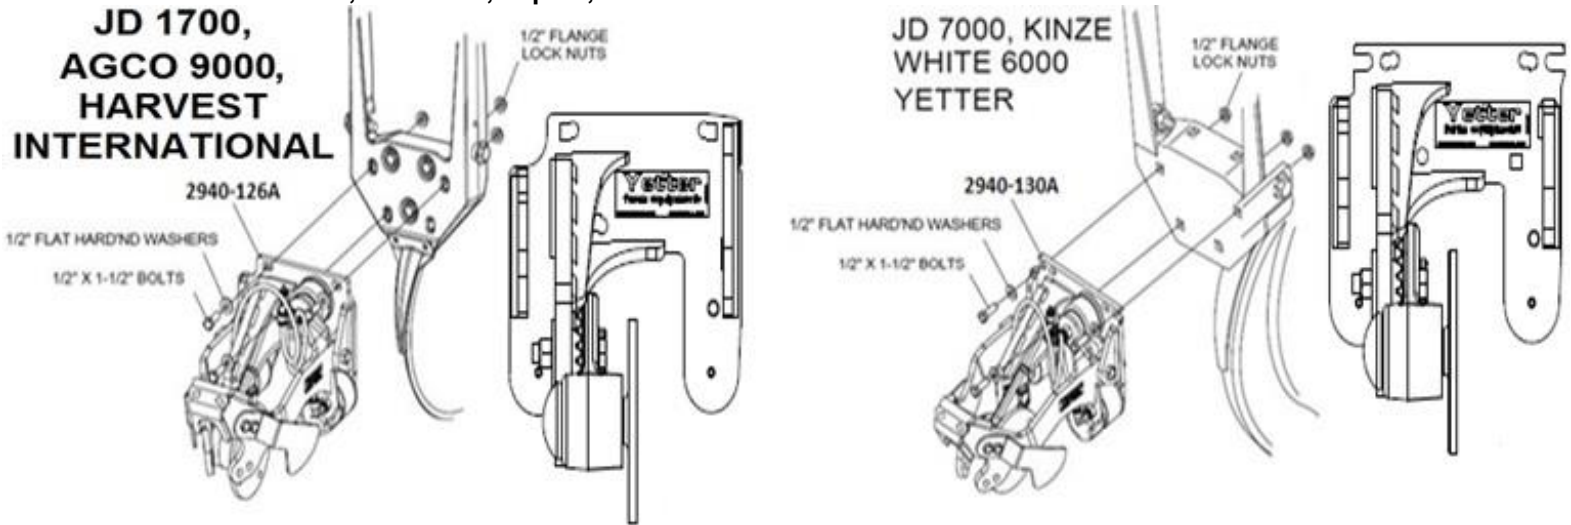


Step 2: Install coulter blade using 4) 1/2"X1 1/4" bolts & 4) 1/2" lock nuts using a 3/4" socket, 3/4" wrench, impact, & 10" extension.

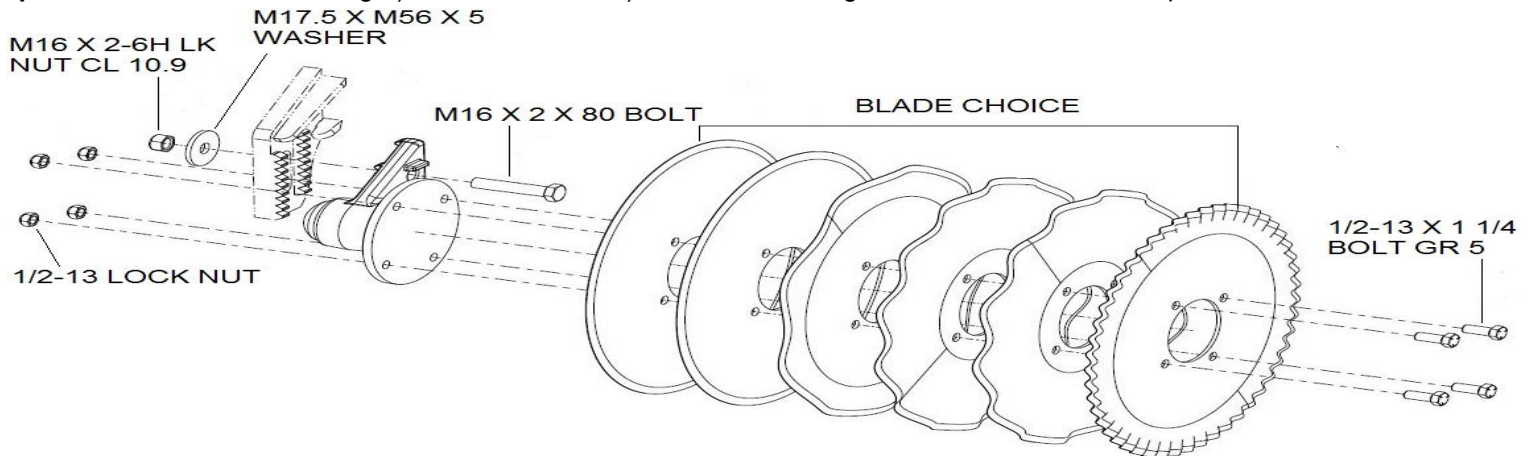


Adjust coulter blade depth equal to or above planter opener blades. Adjust blade depth as required for blade wear. Planter double disc blades that are worn to 14 1/4"-smaller in diameter should be replaced. Example: 14 1/4" blades will have a 3/8" shallower planting depth than 15" blades at same gauge wheel adjustment setting.

STEP 3: Install each of the RM wheels in the rear D-bolt holes using a 5/8 serrated flange nuts & tighten using a 15/16 wrench.

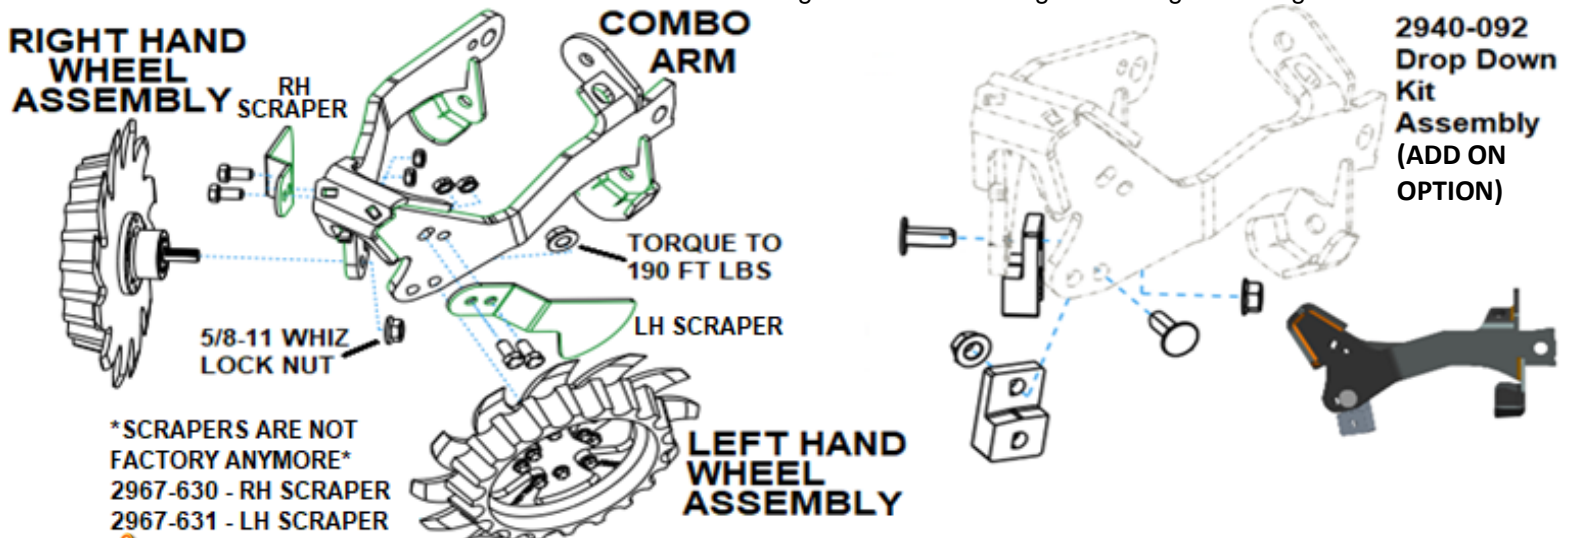

CAUTION: It is highly recommended to wear gloves when tightening wheels!

Yetter Cab Controller Installation (Skip this page if using ISOBUS monitor)

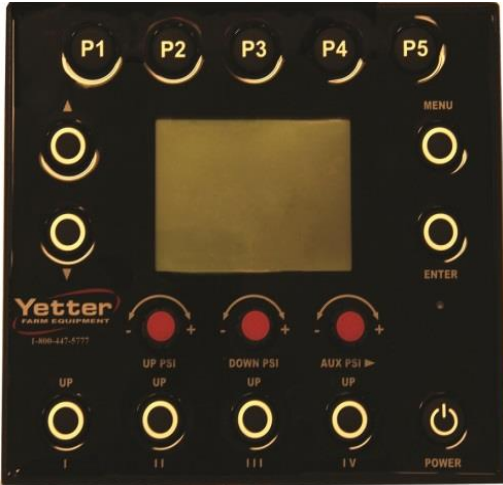

Step 1: Begin installing the 2940 Air Adjust cab controller once an adequate mounting location has been found. Fix the base component of the 2940-113 Mounting Bracket in place. Use items labeled B if mounting to a slotted, flat mounting system using a ratchet, 11mm socket, & 11mm wrench to tighten the hardware. Use items C if using a tubular mounting system. 2 different sized U-bolts are provided for tubular mounting systems. Use a ratchet & 5mm socket to tighten the hardware.

Step 2: Connect the mount bracket to the rear of the controller using 4) M5 Hex Nut and 4) M5 split washers (labeled A) using a ratchet & 8mm socket to tighten the hardware. Set the cab controller in place and tighten the clamp by turning the handle clockwise.

Step 3: Attach the male 2 pin connector of the 2940-153 to the female 2 pin connector on the 2940-100 Cab Controller. Install the connector not provided for your tractor at the bare end of the 2940-153 and connect to tractors switched power source. **The cigarette outlet is NOT a switched port on all models of tractors, and therefore should not be used.**



Switched Power Source Connector part #'s:

JOHN DEERE PART #: RE67013

CNH PART #: 187103A1

CAT P/N: AG233356

Step 4: Route & install the 2940-152 hitch to switch panel wire harness from the rear 6 pin connector of the 2940-100 Cab Controller to the hitch-point at the rear of the tractor. The black CAN connector of the 2940-152 will connect to the 2940-164 or 2940-165 CAN AUX to Air Harness. **(See page 23 for further details)** If an extension is needed between the 2940-100 Cab Controller and this harness, a 2940-169 10ft cab to hitch extension is available to order.



INSTALLING 2940 AIR COMPRESSOR ASSEMBLY





Step 1: Every planter/tractor combination will contain its own unique situations in regard to mounting the 2940 Compressor Assembly for clearance and accessibility. **YOU SHOULD EXERCISE YOUR OWN BEST JUDGEMENT TO FIT YOUR SITUATION.** Begin by locating a suitable mounting location for the compressor assembly. Placement of the compressor assembly will vary on the make and model of the planter. Use mounts supplied or depending on application different mounts may need to be built. NOTE: Be sure to check clearance of compressor assembly in all locations, especially noting tractor tires and folding/unfolding the planter for transport mode, markers, and 2-point top link.

Step 2: Visually inspect the proposed mounting location for structural stability and to find signs of wear in that location. Possible obstructions to be aware of include marker arms, liquid fertilizer tanks, rear tires (duals especially) during tight turns, etc...

Step 3: Mark out the position of the Compressor then complete a cycle of folding/unfolding to transport mode and raising/lowering of the planter; as well as, driving in a tight circle in one or both directions, in planting position, to verify or identify obstructions.

Step 4: Once the compressor is mounted, repeat the previous process very cautiously to once again verify that the compressor is clear of obstructions.

Always mount the compressor in the vertical position, housing above the tank.

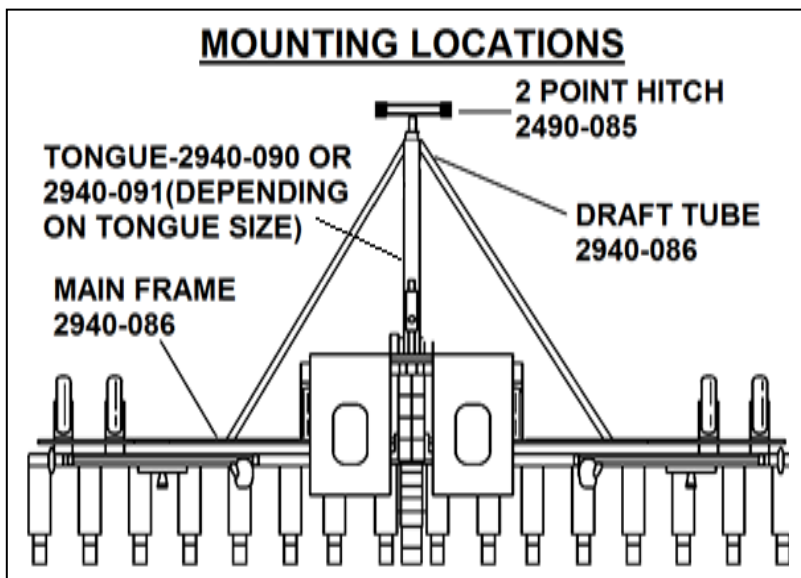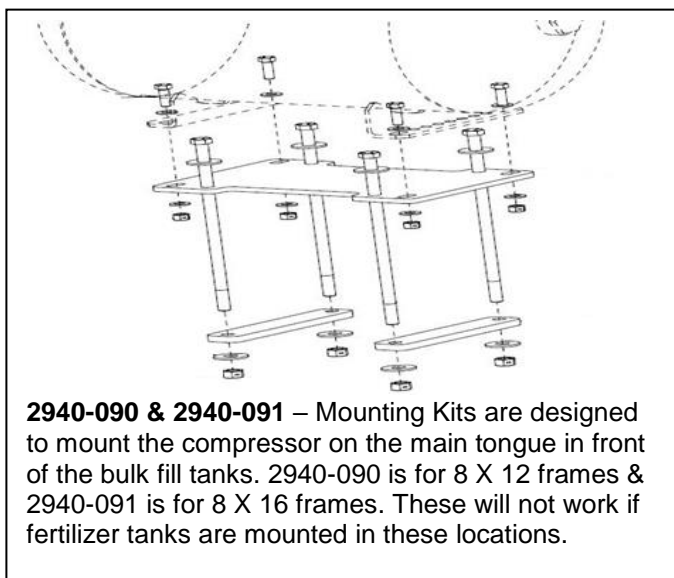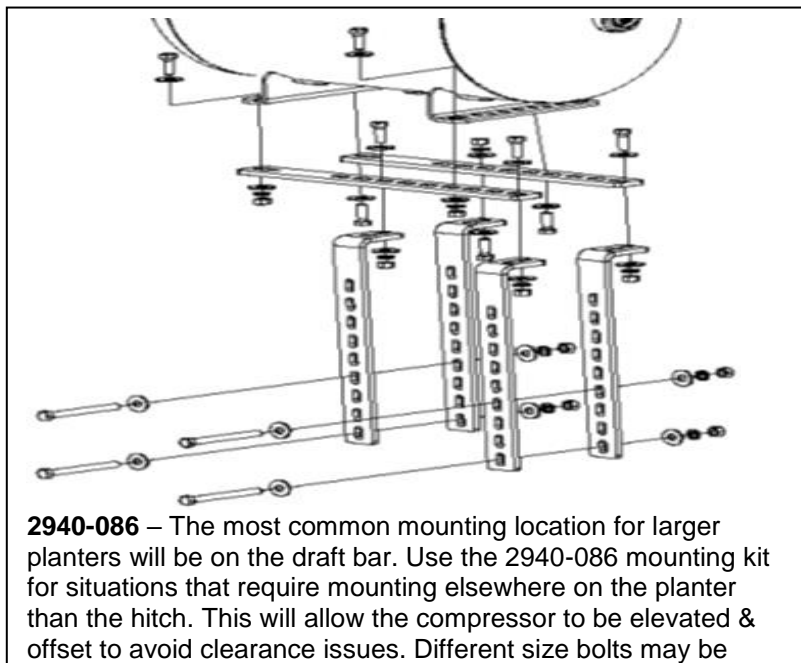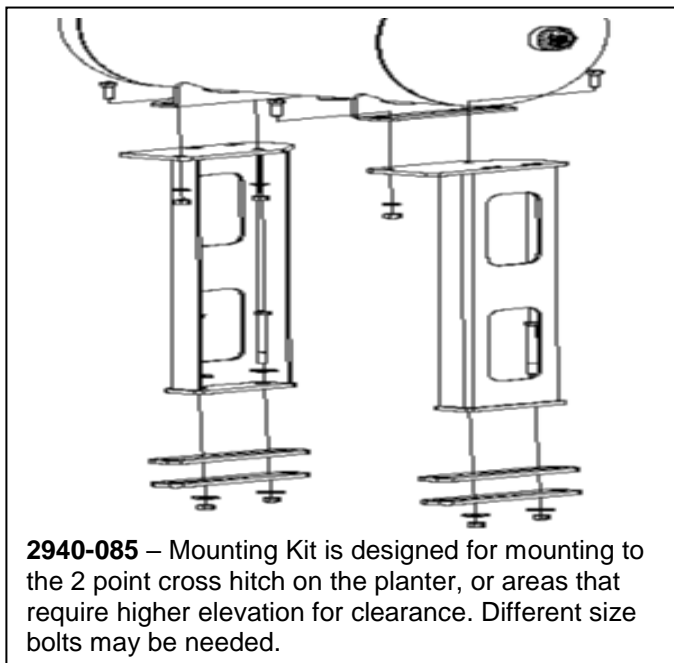

Refer to page 60 for Part Identification.


In some situations, mounting brackets may need to be built to fit your planters set-up.

2940-103 Control Box Installation

The 2940-103 Control Box is an assembled unit that utilizes compressed air supplied by the OEM hydraulic compressor to operate the 2940 Air Adjust System. In some situations, a mount may need to be built to install the 2940-103 in an adequate location. OEM ELECTRIC COMPRESSORS ALREADY ONBOARD PLANTERS WILL NOT OPERATE YETTER 2940 AIR ADJUST SYSTEMS!

2940-103 MOUNTING GUIDE

2940-082 (See page 59 for diagram)

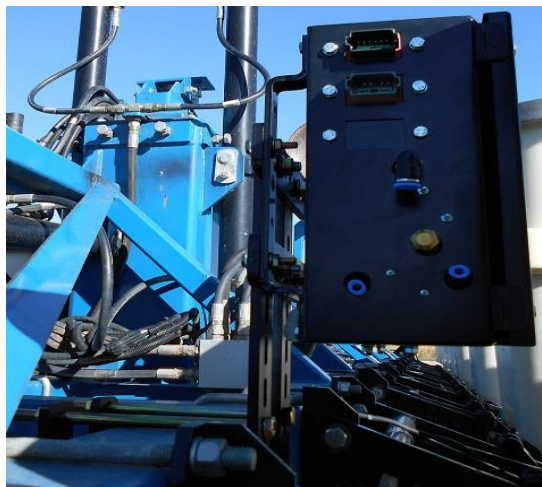

2940-083 (See page 59 for diagram)



2940-084 (handrail by compressor)





2940-084 (handrail between bulk fill tanks)



(See page 59 for diagram of the 2940-084)

Water Separator/Regulator Installation

Install the 2940-415 water separator/regulator assembly near the control box in a suitable location out of harm's way. The water separator removes moisture from entering the system's control box. Install the assembly with the water trap vertical & the elbow fitting towards the ground. The regulator (2940-404) should be set to only allow no more that 100psi into the control box. Below are some examples of mounting locations for the water separator/regulator assembly.

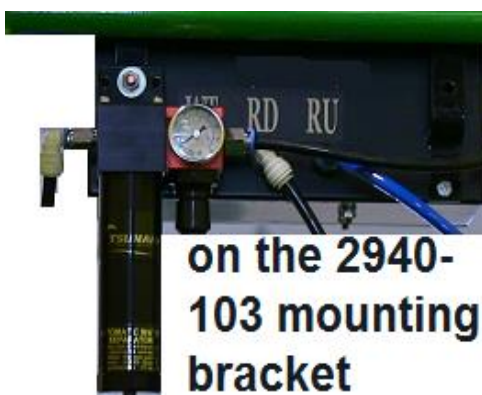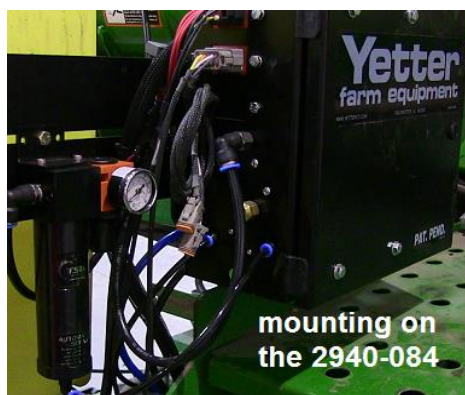

Compressor Power Cable and Harness Installation

Step 1: Install the 2940-150 main power cable with 80A breaker and the 2940-166 VDM power cable with 40A breaker on the operating tractor's battery. Red cable installs on the positive (+) battery terminal post and the black cable installs on the negative (-) battery terminal post.



Step 2: From the open 2 pole Anderson connector of the 2940-150, safely route & install the appropriate length of main power extension cables, 2940-151 is a 10ft main power extension & 2940-163 is a 20ft main power extension, into the Anderson connector that comes out of the bottom of the compressor housing. If operating tractor is articulating or if compressor is further back on the planter than the hitch, more extension cables may be needed. **Cable length from the battery to the compressor should not exceed 50 feet. Longer than 50 feet distances cause the 80A breaker to become weak and trip often. If distance is greater than 50 feet, heavier cable needs made using 00 gauge wire.**



Step 3: From the open Anderson connector on the 2940-166, safely route/install the appropriate length of VDM power extension cables, 2940-167 (10ft) extension & 2940-168 (20ft) power extension, to the hitch of the tractor. At the hitch of the tractor, place the open 2 pole Anderson connector next to the black CAN connector that routes to the cab controller, these are the disconnecting points when unhooking the planter from tractor.



Step 4: Install the 2940-164 5ft CAN AUX to Air harness or 2940-165 10ft CAN AUX to Air harness. The black CAN connector connects to the other black CAN connector that comes from the cab controller. The small Anderson connector connects to the VDM power extension that routes to the battery. The male black 12 pin Deutsch connector installs into the black female 12 pin Deutsch connector located on the bottom of the compressor housing. If the compressor assembly is located further back on the planter than the hitch, CAN AUX to Air extension harnessing may need to be purchased. 2940-170 is 10ft extension, 2940-171 is 30ft extension, & 2940-430 is a 20ft extension.



Electric Communication Harness (Only if application is using the Yetter Electric Compressor)

Step 1: Install the 2940-181 hydraulic compressor solenoid/switch harness; the male 2 pin connector installs into the female connector on the On/Off solenoid on the hydraulic block on the side of the compressor housing, the female 2 pin connector installs into the male 2 pin connector on the pressure switch.

Step 2: Connect the 2940-189 10 foot control harness to the 4 pin connector of the 2940-181 & route to control box. If more length is needed, call Yetter & order more. (2940-182 is 20 foot length; 2940-189 is 10 foot length)


Step 3: Connect the 2940-182 or 2940-189 into the 4 pin female connector on the side of the control box.

2940 -136 Dump Valve Kit Installation

Step 1 - Align the holes on valve (8) with mounting plate (3) holes. Insert bolts (5) through the aligned holes and start the nuts (4) on the threads. Tighten nut with ¼" wrench while holding bolt with a Phillips screwdriver until tight.

Step 2 - Install supplied 6" piece of airline (6) in port 1, the vent elbow (7).


Step 3 - If install is on a John Deere planter, use flat flanged nut (1) to install Dump Valve assembly by placing circle cut out on mounting tab (3) on U-bolt used to mount the row unit to planter toolbar. Pinch mounting tab (3) between existing nut on U-bolt & the flat flanged nut (1). If install is on any other OEM planter, use the serrated flanged nut (2) for the install of the dump valves.

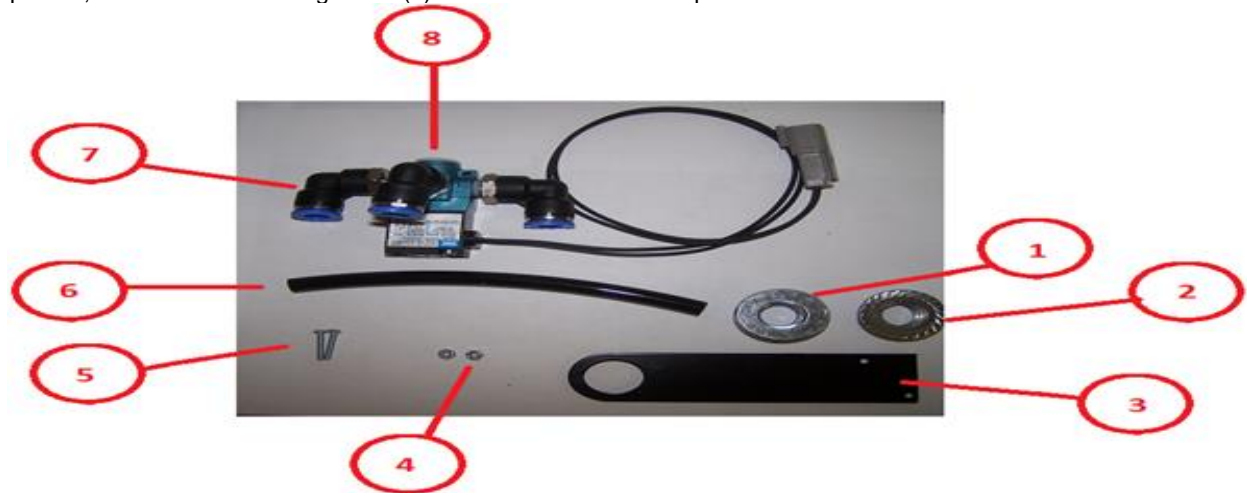


Solenoid Down



Solenoid Up

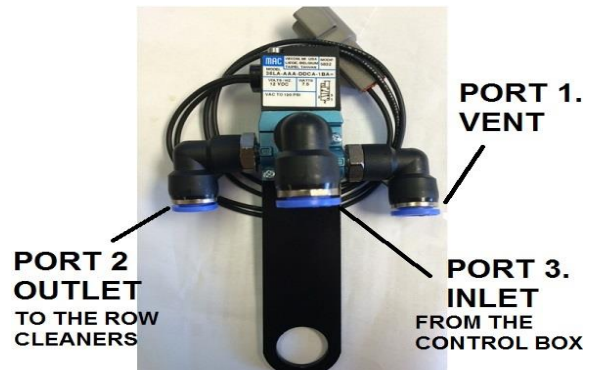

Single Dump Valve Mounting

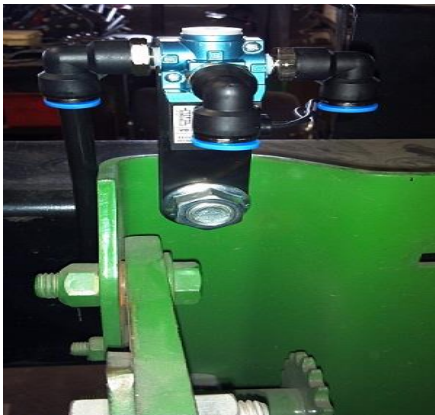

Dual Dump Valve Mounting



See pages 26 – 36 for dump valve & dump valve harness installation. Dump valve placement will vary depending on planter size. Dump valve cable length will vary depending on planter model & row spacing. White dump valve cables are to be used on all lift circuit (blue airline) dump valves. Black dump valve cables are to be used on all down pressure (black airline) dump valves.

Airline Routing –Compressor to Control Box



If using a Yetter Electric Compressor

Step 1: Install 2940-367 250psi rated 3/8" airline from the compressor outlet to the inlet port (water trap side labeled A) of the water separator.

Step 2: Install 2940-345 3/8" black airline from the outlet port of the water separator (labeled B) to the inlet port (labeled 1) on the control box.

Step 3: Install 1/4" airline from 1/4"PTC elbow (labeled C) on water separator to the 1/4"PTC fitting (labeled 2) closest to the door hinge on control box.

Step 4: Install 1/4" airline from 1/4"PTC fitting (labeled 3) on side of control box & route toward the ground making sure airline is pointed away from anything that moisture may damage/rust.

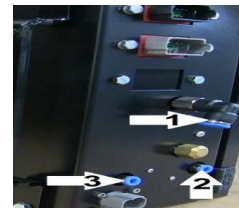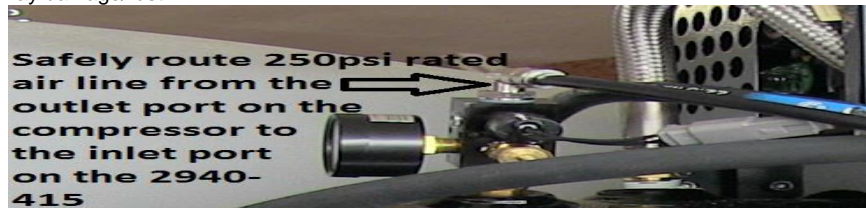

Airline Routing-Planter Frame

Below is a suggested method for safely/securely routing airlines on planter frame whether installing trunk airlines (airlines routing to row cleaner air bags) or supply airlines (airlines that route from compressor housing to dump valve's inlet port). Safely route airlines on frame that row units are mounted to or follow path to which the hydraulic hoses on planter are routed. After airline & dump valve harnessing is complete, use provided zip ties to keep parts away from pinch/wear points.



Airline Routing-Row Unit

Below is a suggested method for safely & securely routing airlines from air bag to tees on planter frame. These are generalizations and **YOU SHOULD USE YOUR OWN BEST JUDGEMENT** in routing airlines. DO NOT pass the airlines between rear of parallel arm & the row unit. DO NOT pass airlines between frame & head plate used to mount row unit to planter frame. These can act as both a pinch points & wear points. If necessary, use provided zip ties to keep airlines away from pinch & wear points & sharp or rotating objects that may damage the airline.





Specific airline routing will be dependent upon: Row unit make/model (AGCO, CNH, JD, Kinze, etc), row unit spacing (15", 20", 22", 30", 36", etc), parallel arm length, & other variables. RM units will have 1 up pressure & 1 down pressure air bag & RM/Coulter Combo models will have 2 air bags on the bottom of the bracket for up pressure & a single air bag on top is for down pressure. The 2 up pressure air bags will have airline already tee'd together so the lift pressure trunk airlines will need plumbed to that tee.

Airline Routing

The following pages are dump valve & airline diagrams of different planter models. Dump valve cable length may vary from the directions given. For example, a 24 row planter on 30 inch centers will have different length dump valve cables than a 24 row planter on 20 inch centers. The wiring & tubing kit will have everything needed to complete the installation.

Direction of flow: Supply Tank → Water Separator Assembly → Control Box → Dump Valves → Air Bags All airlines are 3/8". Blue airline should be used on all lift pressure air bags & black airline should be used on all down pressure air bags. Use airline colors to differentiate lift pressure (Blue) & down pressure (Black) on planter for troubleshooting, leak detection, & dump valve circuit indication. Route airlines as efficiently & conveniently as possible. **If there is no diagram for your situation, contact a Yetter service representative (800-447-5777) & a drawing will be made.**

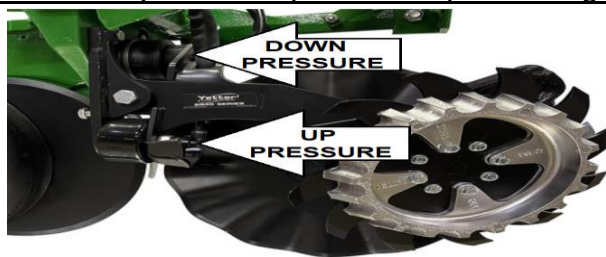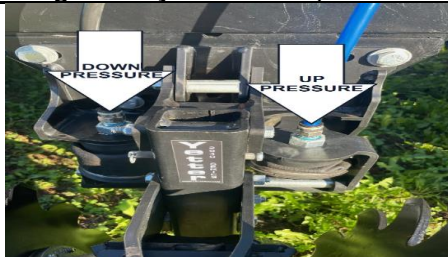

6 Row Dump Valve Diagram

KEY

■ = Dump Valve

□ = Planter Row Unit

Y = Y Harness

Down
Pressure
Dump Valve

Row

1 □

2 □

3 □ ■

4 □

5 □

6 □

Routes to the 2
pin pigtail
labeled RM
DOWN DUMP



Up
Pressure
Dump Valve

Row

1 □

2 □


3 □

4 □ ■

5 □

6 □

Routes to the 2 pin
pigtail labeled RM
UP DUMP

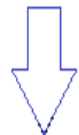

Step 1: Install 1 dump valve on row 3 & 1 dump valve on row 4.

Step 2: Install the male 12 pin Deutsch connector of the 2940-162 dump valve cable into the **GRAY** female connector on the side of the 2940-101 compressor housing.

Step 3: Install the mating 2 pin connector of the 2940-156 black dump valve cable to the dump valve on row 3 & route the other end of the 2940-156 to the 2 pin connector labeled RM DOWN DUMP (orange/black wires) on the 2940-162 from step 2 & install.

Step 4: Install the mating 2 pin connector of the 2940-157 white dump valve cable to the dump valve on row 4 & route the other end of the 2940-157 to the 2 pin connector labeled RM UP DUMP (yellow/black wires) on the 2940-162 from step 2 & install.

★ Aux 3 & Aux 4 on 2940-162 are not yet used ★

6 Row Airline Diagram

Step 1: T1 & T2 Route blue & black airline from row 1 to row 6. Install the black airline in the down pressure (larger) air bag & the blue airline in the up pressure (smaller) air bag. Trace both airlines back to row 1 installing tees in each (blue & black) airline at each row unit. From each tee in the up pressure (blue airline) circuit, route blue airline to the up pressure air bag and install in the fitting. From each tee in the down pressure (black airline) circuit, route black airline to the down pressure air bag and install in the fitting. When back to row 1, cut each airline to length & install each airline into the matching air bag.

Step 2: On row 3 at the down pressure dump valve, install a tee in the black airline installed in step 1. Install black airline from the open port on the tee to the outlet port on the dump valve.


Step 3: On row 4 at the up pressure dump valve, install a tee in the blue airline installed in step 1. Install blue airline from the open port on the tee to the outlet port of the dump valve.

Step 4: S1 Route black airline from the RD port on the 2940-101 compressor housing to the inlet port on the down pressure dump valve on row 3.





Step 5: S2 Route blue airline from the RU port on the 2940-101 compressor housing to the inlet port of the up pressure dump valve on row 4.

Step 6: Install a plug (2940-352) into the WT port on the 2940-101 compressor housing to prevent air loss. Another way to do this is to cut a 6inch piece of black airline, install one end into the WT port, fold the airline over causing a kink, & zip tie the airline to stay like this. This circuit will not be used with this size of planter.

**Down
Pressure
Black Airline
Row**

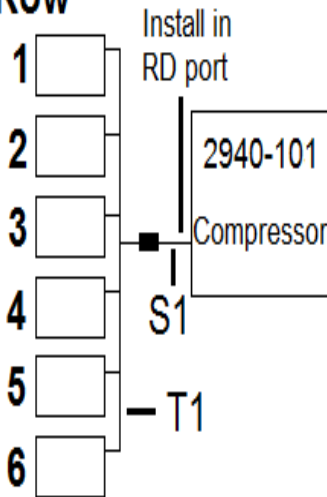

**Up
Pressure
Blue Airline
Row**

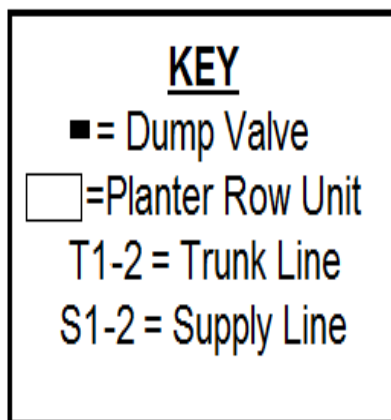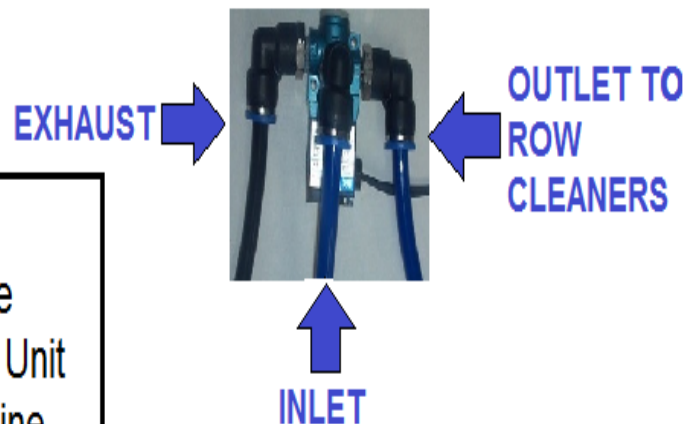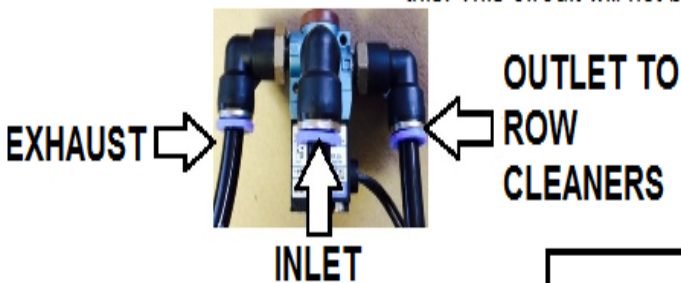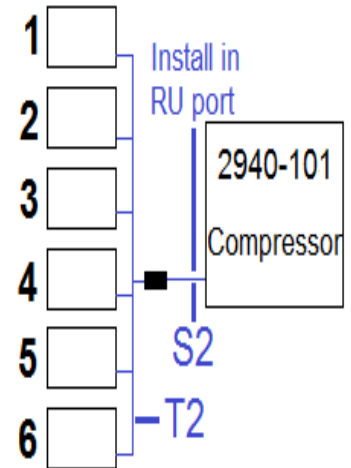

6/11 or 6/12 Split Row Dump Valve Diagram

KEY


■ = Dump Valve

□ = Planter Row Unit

Y = Y Harness

Down
Pressure
Dump Valve

Row

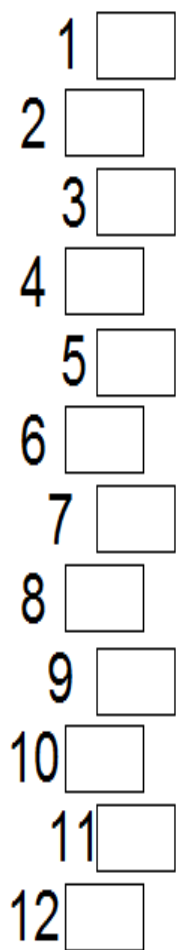

Routes to the 2
pin pigtail labeled
RM DOWN DUMP

Step 1: Install 2 dump valves on row 3 and 2 dump valves on row 9.


Step 2: Install the male 12 pin Deutsch connector of the 2940-162 dump valve cable into the **GRAY** female connector on the side of the 2940-101 compressor housing.

Step 3: Route & install 15 foot length of black dump valve cable (2940-156) from the 2 pin connector of 1 dump valve on row 3 to 1 dump valve on row 9. Use a black "Y" harness (2940-158) to connect the down pressure dump valve on row 9 to the 15 foot black dump valve cable routed from row 3's down pressure dump valve. From the remaining open connector on the black "Y" harness, route the necessary length of black dump valve cable to reach the 2 pin connector labeled RM DOWN DUMP (orange/black wires) on the 2940-162 harness installed in step 2.

Step 4: Route & install 15 foot length of white dump valve cable (2940-157) from the open 2 pin connector of the up pressure dump valve on row 3 to the up pressure dump valve on row 9. Use a white "Y" harness (2940-159) to connect the up pressure dump valve on row 9 to the 15 foot white dump valve cable routed from row 3. From the remaining open connector on the white "Y" harness, route the necessary length of white dump valve cable to reach the 2 pin connector labeled RM UP DUMP (yellow/black wires) on the 2940-162 harness installed in step 2.

Up
Pressure
Dump Valve

Row

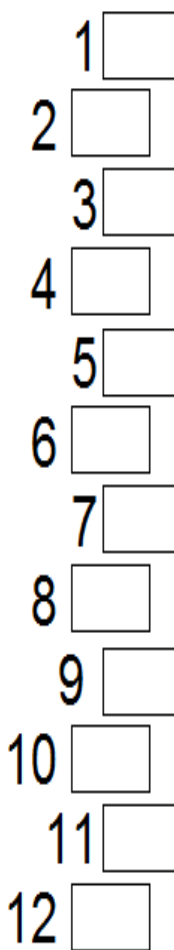


Routes to the 2
pin pigtail labeled
RM UP DUMP

★ Aux 3 & Aux 4 on 2940-162 are not yet used ★

6/11 or 6/12 Split Row Airline Diagram

Down Pressure Black Airline on corn rows

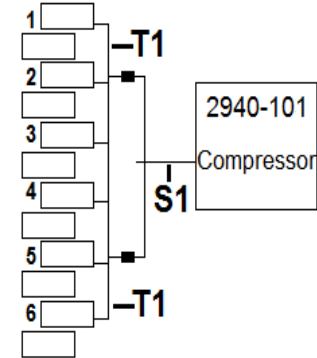

KEY

- = Dump Valve
- = Ball Valve
- = Planter Row Unit
- S1-2 = Supply Airline
- T1-4 = Trunk Airline

Step 1: T1 & T2 Route black & blue airline from the first corn row to the last corn row. Install the black airline in the fitting of the down pressure (larger) air bag & the blue airline in the fitting of the up pressure (smaller) air bag on the last corn row. Trace both airlines back to the first corn row installing tees in each airline at each corn row. Route & install blue airline from the up pressure air bag fitting to the tee in the up pressure (blue) circuit for that corn row. Route & install black airline from the down pressure air bag fitting to the tee in the down pressure (black) circuit for that corn row. When back to the first corn row, cut each airline to length & install each airline into the fitting of the matching air bag.

Step 2: S1 At the down pressure dump valve on corn rows 2 & 5, cut & install a tee into the T1 airline installed in step 1. Route & install black airline from the remaining open port in the tee to the outlet port of the down pressure dump valve & install. Route & install black airline from the RD port on the 2940-101 compressor housing to the nearest point on the frame that the seed units are mounted to and install a tee. Route and install black airline from each side of the tee to the inlet port of the dump valve on corn rows 2 & 5.

Step 3: S2 At the up pressure dump valve on corn rows 2 & 5, cut & install a tee into the T2 airline installed in step 1. Route blue airline from the remaining open port in each tee to the outlet port of the dump valve & install. Route & install blue airline from the RU port on the 2940-101 compressor housing to the nearest point on the frame that the seed units are mounted to & install a tee. Route & install blue airline from each side of the tee to the inlet port of the dump valve on corn rows 2 & 5.

Step 4: T3 & T4 Route black & blue airline from the first split row to the last split row. Install the black airline in the fitting of the down pressure (larger) air bag & the blue airline in the fitting of the up pressure (smaller) air bag on the last split row. Trace both airlines back to the first split row installing tees in each airline at each split row. Route & install blue airline from the up pressure air bag fitting to the tee in the up pressure (blue) circuit for that split row. Route & install black airline from the down pressure air bag fitting to the tee in the down pressure (black) circuit for that split row. When back to the first split row, cut each airline to length & install each airline into the fitting of the matching air bag.


Step 5: At the down pressure dump valve on corn rows 2 & 5, cut & install a tee into the T3 airline installed in step 4. At the up pressure dump valve on corn row 2 & 5, cut & install a tee into the T4 airline installed in step 4.

Step 6: Install a tee just downstream of the outlet port on the down pressure dump valve on corn rows 2 & 5. Install a 6 inch piece of black airline in the remaining port of each tee. Install a ball valve (2940-342) on the open end of each 6" piece of black airline. Route & install black airline from the open port on each ball valve to each tee in the T3 airline installed in step 5.


Step 7: Install a tee just downstream of the outlet port on the up pressure dump valve on corn rows 2 & 5. Install a 6 inch piece of blue airline in the remaining port of each tee. Install a ball valve on the open end of each 6" piece of blue airline. Route & install blue airline from the open port on each ball valve to each tee in the T4 airline installed in step 5.

Step 8: Install a plug (2940-352) provided in the spare fittings bag (2940-174) in the WT port on the 2940-101 compressor housing.




Up Pressure Blue Airline on corn rows

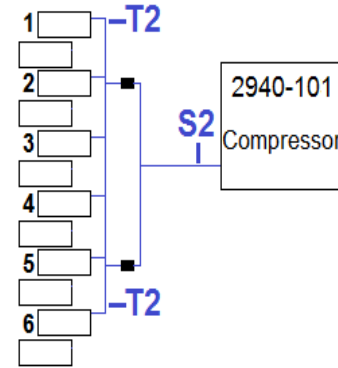


Up Pressure Blue Airline on split rows

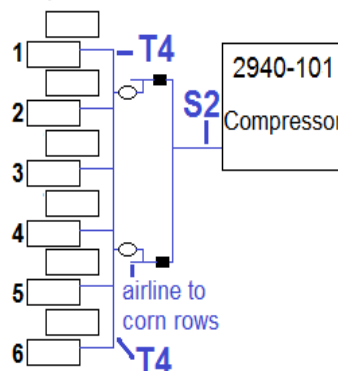

Down Pressure Black Airline on split rows

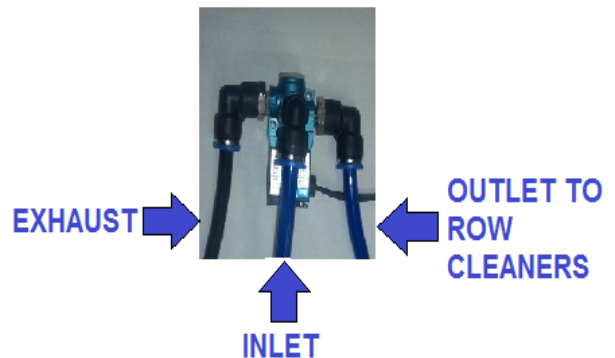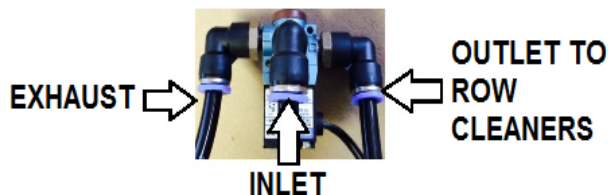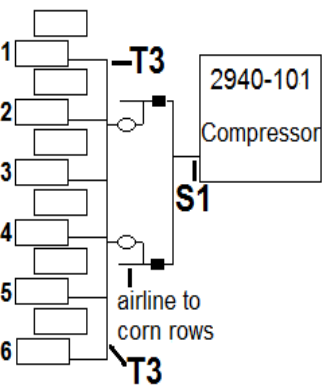


8 Row Dump Valve Diagram

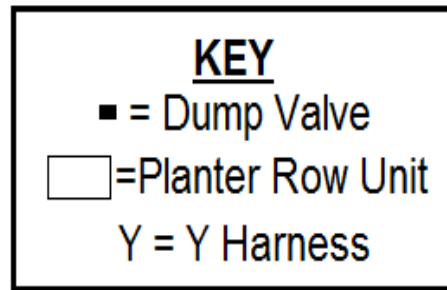


Down
Pressure
Dump Valve

Row



Routes to the 2
pin pigtail
labeled RM
DOWN DUMP

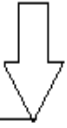


Step 1: Install 1 dump valve on row 4 & 1 dump valve on row 5.
Step 2: Install the male 12 pin Deutsch connector of the 2940-162 dump valve cable into the **GRAY** female connector on the 2940-101 compressor housing.

Step 3: Install the mating 2 pin connector of the 2940-156 black dump valve cable to the dump valve on row 5. Route the other end of the 2940-156 to the 2 pin connector labeled RM DOWN DUMP (orange/black wires) on the 2940-162 from step 2 & install.


Step 4: Install the mating 2 pin connector of the 2940-157 white dump valve cable to the dump valve on row 4. Route the other end of the 2940-157 to the 2 pin connector labeled RM UP DUMP (yellow/black wires) on the 2940-162 from step 2 & install.

Up
Pressure
Dump Valve

Row




Routes to the 2 pin
pigtail labeled RM
UP DUMP

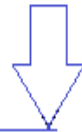

★ Aux 3 & Aux 4 on 2940-162 are not yet used ★

8 Row Airline Diagram

**Down
Pressure
Black Airline
Row**

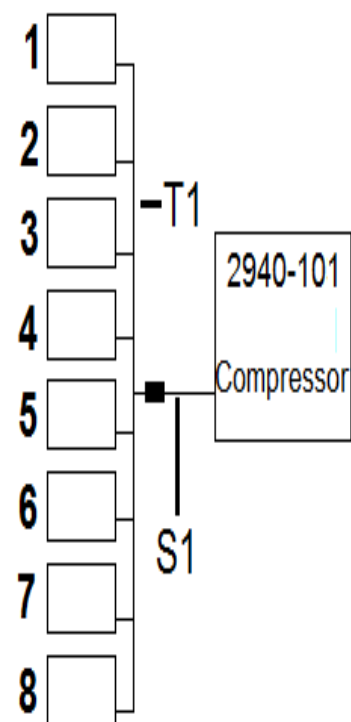

Step 1: T1 & T2 Route blue & black airline from row 1 to row 8. Install the black airline in the down pressure (larger) air bag & blue airline in the up pressure (smaller) air bag. Trace both airlines back to row 1 installing tees in each (blue and black) airline at each row unit. From each tee in the up pressure (blue airline) circuit, route blue airline to the up pressure air bag and install in the fitting. From each tee in the down pressure (black airline) circuit, route black airline to the down pressure air bag and install in the fitting. When back to row 1, cut each airline to length and install each airline to the matching air bag.

Step 2: On row 5 at the down pressure dump valve, install a tee in the black airline installed in step 1. Install black airline from the open port on the tee to the outlet port on the dump valve.



Step 3: On row 4 at the up pressure dump valve, install a tee in the blue airline installed in step 1. Install blue airline from the open port on the tee to the outlet port on the dump valve.

Step 4: S1 Route black airline from the RD port on the 2940-101 compressor housing to the inlet port on the down pressure dump valve on row 5 & install.

Step 5: S2 Route blue airline from the RU port on the 2940-101 compressor housing to the inlet port on the up pressure dump valve or row 4 & install.


Step 6: Install a plug (2940-352) into the WT port on the 2940-101 compressor housing to prevent air loss. Another way to do this is to cut a 6inch piece of black airline, install one end into the WT port, fold the airline over causing a kink, & zip tie the airline to stay like this. This circuit will not be used with this size of planter.

**Up
Pressure
Blue Airline
Row**

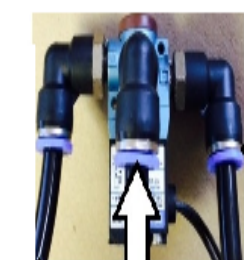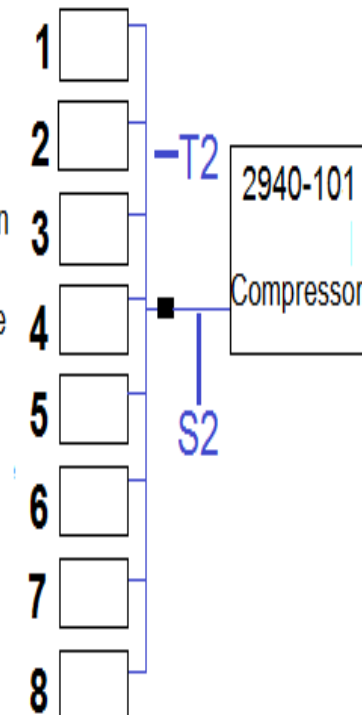

INLET
EXHAUST

**OUTLET TO
ROW
CLEANERS**

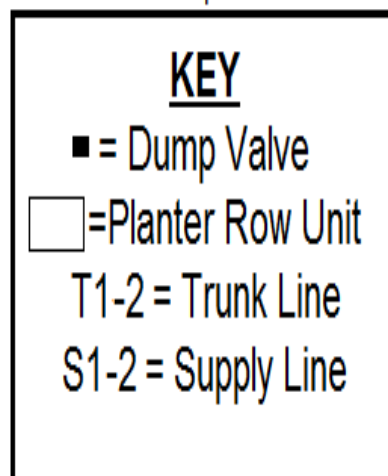

INLET
EXHAUST

**OUTLET TO
ROW
CLEANERS**

8/15 or 8/16 Split Row Dump Valve Diagram


KEY

■ = Dump Valve

□ = Planter Row Unit

Y = Y Harness

Down
Pressure
Dump Valve
Row

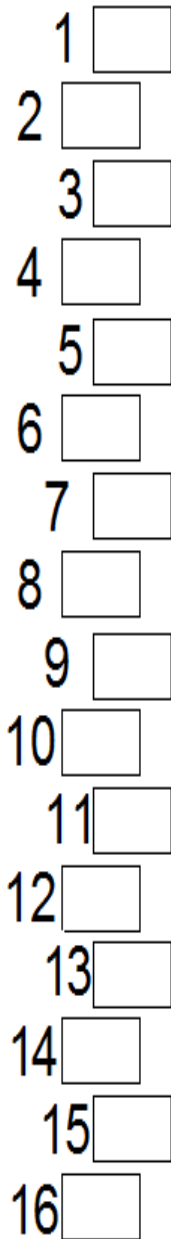


Step 1: Install 2 dump valves on each of the following rows: 5 & 11.

Step 2: Install the male 12 pin Deutsch connector of the 2940-162 dump valve cable into the **GRAY** female connector on the side of the 2940-101 compressor housing.

Step 3: Route & install 15 foot length of black dump valve cable (2940-156) from the 2 pin connector of 1 dump valve on row 5 to 1 dump valve on row 11. Use a black "Y" harness (2940-158) to connect the down pressure dump valve on row 11 to the 15 foot black dump valve cable routed from row 5's down pressure dump valve. From the remaining open connector on the black "Y" harness, route the necessary length of black dump valve cable to reach the 2 pin connector labeled RM DOWN DUMP (orange/black wires) on the 2940-162 harness installed in step 2.



Step 4: Route & install 15 foot length of white dump valve cable (2940-157) from the open 2 pin connector of the up pressure dump valve on row 5 to the up pressure dump valve on row 11. Use a white "Y" harness (2940-159) to connect the up pressure dump valve on row 11 to the 15 foot white dump valve cable routed from row 5. From the remaining open connector on the white "Y" harness, route the necessary length of white dump valve cable to reach the 2 pin connector labeled RM UP DUMP (yellow/black wires) on the 2940-162 harness installed in step 2.

Up
Pressure
Dump Valve
Row

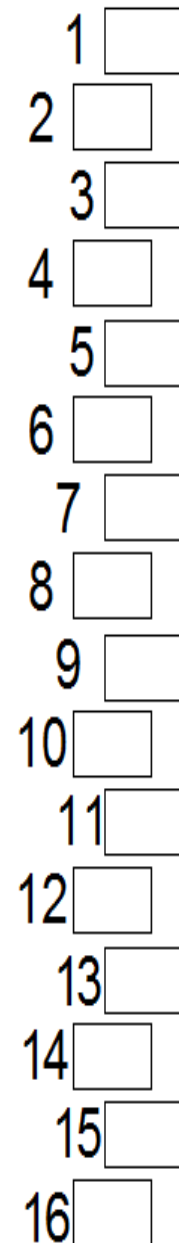

★ Aux 3 & Aux 4 on 2940-162 are not yet used ★

8/15 or 8/16 Split Row Airline Diagram

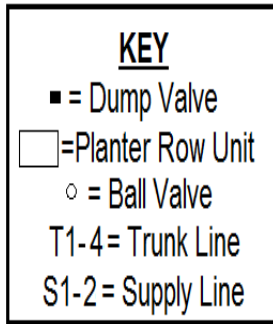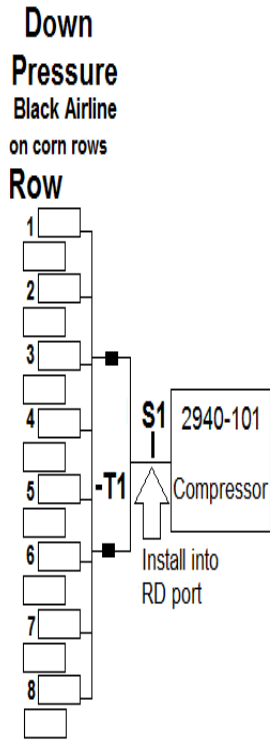

Step 1: T1 & T2 Route black & blue airline from the first corn row to the last corn row. Install the black airline in the fitting of the down pressure (larger) air bag & the blue airline in the fitting of the up pressure (smaller) air bag on the last corn row. Trace both airlines back to the first corn row installing tees in each airline at each corn row. Route & install blue airline from the up pressure air bag fitting to the tee in the up pressure (blue) circuit for that corn row. Route & install black airline from the down pressure air bag fitting to the tee in the down pressure (black) circuit for that corn row. When back to the first corn row, cut each airline to length & install each airline into the fitting of the matching air bag.

Step 2: S1 At the down pressure dump valve on corn rows 3 & 6, cut & install a tee into the T1 airline installed in step 1. Route & install black airline from the remaining open port in the tee to the outlet port of the down pressure dump valve & install. Route & install black airline from the RD port on the 2940-101 compressor housing to the nearest point on the frame that the seed units are mounted to and install a tee. Route & install black airline from each side of the tee to the inlet port of the dump valve on corn rows 3 & 6.

Step 3: S2 At the up pressure dump valve on corn rows 3 & 6, cut & install a tee into the T2 airline installed in step 1. Route blue airline from the remaining open port in each tee to the outlet port of the dump valve & install. Route & install blue airline from the RU port on the 2940-101 compressor housing to the nearest point on the frame that the seed units are mounted to & install a tee. Route & install blue airline from each side of the tee to the inlet port of the dump valve on corn rows 3 & 6.






Step 4: T3 & T4 Route black & blue airline from the first split row to the last split row. Install the black airline in the fitting of the down pressure (larger) air bag & the blue airline in the fitting of the up pressure (smaller) air bag on the last split row. Trace both airlines back to the first split row installing tees in each airline at each split row. Route & install blue airline from the up pressure air bag fitting to the tee in the up pressure (blue) circuit for that split row. Route & install black airline from the down pressure air bag fitting to the tee in the down pressure (black) circuit for that split row. When back to the first split row, cut each airline to length & install each airline into the fitting of the matching air bag.

Step 5: At the down pressure dump valve on corn rows 3 & 6, cut & install a tee into the T3 airline installed in step 4. At the up pressure dump valve on corn row 3 & 6, cut & install a tee into the T4 airline installed in step 4.


Step 6: Install a tee just downstream of the outlet port on the down pressure dump valve on corn rows 3 & 6. Install a 6 inch piece of black airline in the remaining port of each tee. Install a ball valve (2940-342) on the open end of each 6 inch piece of black airline. Route & install black airline from the open port on each ball valve to each tee in the T3 airline installed in step 5.

Step 7: Install a tee just downstream of the outlet port on the up pressure dump valve on corn rows 3 & 6. Install a 6 inch piece of blue airline in the remaining port of each tee. Install a ball valve on the open end of each 6 inch piece blue airline. Route & install blue airline from the open port on each ball valve to each tee in the T4 airline installed in step 5.

Step 8: Install a plug (2940-352) provided in the spare fittings bag (2940-174) in the WT port on the 2940-101 compressor housing.

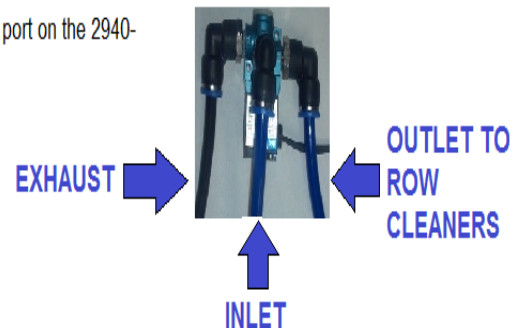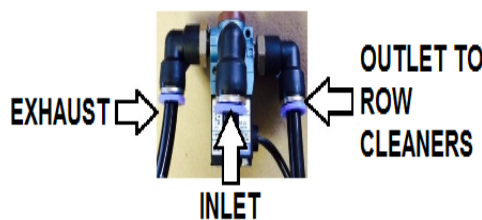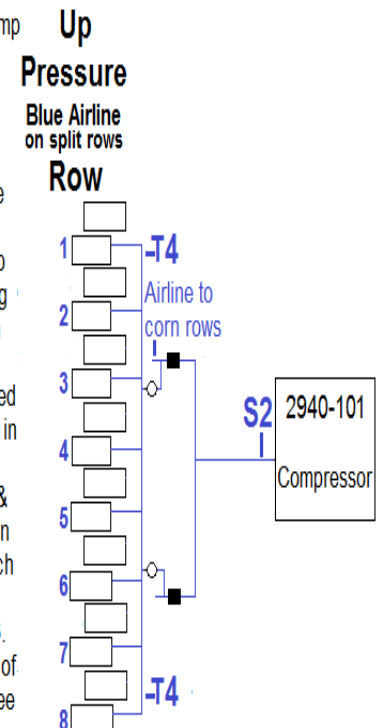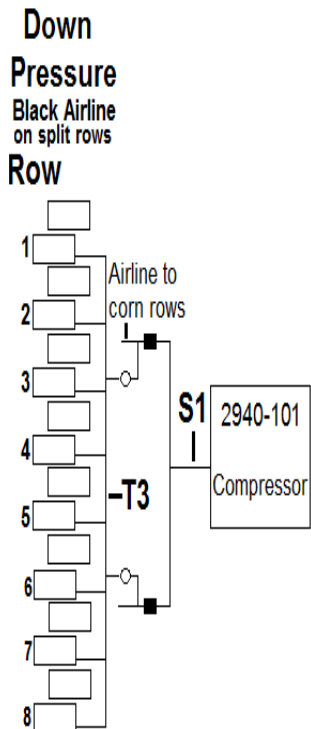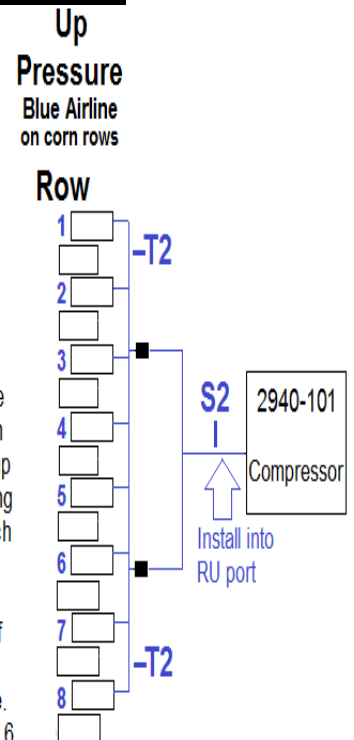

12 Row Dump Valve Diagram

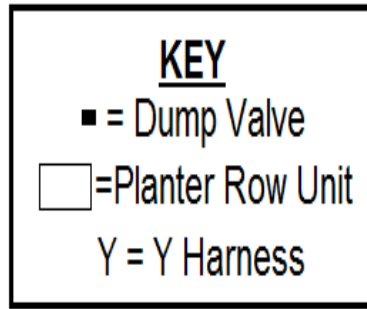

Step 1: Install 2 dump valves on each of the following rows: 2, 6, & 11.

Step 2: Install the male 12 pin Deutsch connector of the 2940-162 dump valve cable into the **GRAY** female connector on the side of the 2940-101 compressor housing.

Step 3: At row 2, install the mating 2 pin connector on the 2940-156 15ft black dump valve cable to the 2 pin cable on one dump valve and install the mating 2 pin connector on the 2940-157 15ft white dump valve cable to the 2 pin cable on the other dump valve. Route both cables to the dump valves on row 6 but do not install.

Step 4: At row 11, install the mating 2 pin connector on the 2940-156 15ft black dump valve cable to the 2 pin cable on one dump valve and install the mating 2 pin connector on the 2940-157 15ft white dump valve cable to the 2 pin cable on the other dump valve. . Route both cables to the dump valves on row 6 but do not install.

Step 5: At row 6, install a 2940-158 black Y harness connecting the black dump valve cables routed in steps 3 & 4.

Step 6: Install a second black Y harness connecting one dump valve on row 6 to the Y harness installed in step 5.


Step 7: Route the appropriate length of black dump valve cable(s) from the open 2 pin connector at row 6 (from step 6) to the 2 pin connector labeled RM DOWN DUMP (orange/black wires) on the 2940-162 from step 2.

Step 8: At row 6, install a 2940-159 white Y harness connecting the white dump valve cables routed in steps 3 & 4.


Step 9: Install a second white Y harness connecting the open dump valve on row 6 to the Y harness installed in step 8.

Step 10: Route appropriate length of white dump valve cable(s) from the open 2 pin connector at row 6 (from step 9) to the 2 pin connector labeled RM UP DUMP (yellow/black wires) on the 2940-162 from step 2.

**Down
Pressure
Dump Valve**

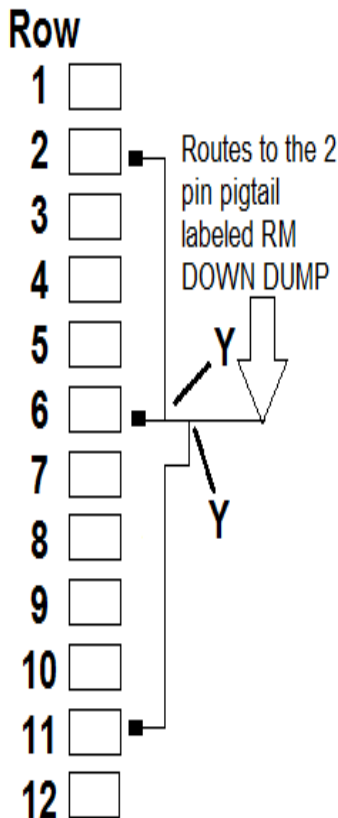

**Up
Pressure
Dump Valve**

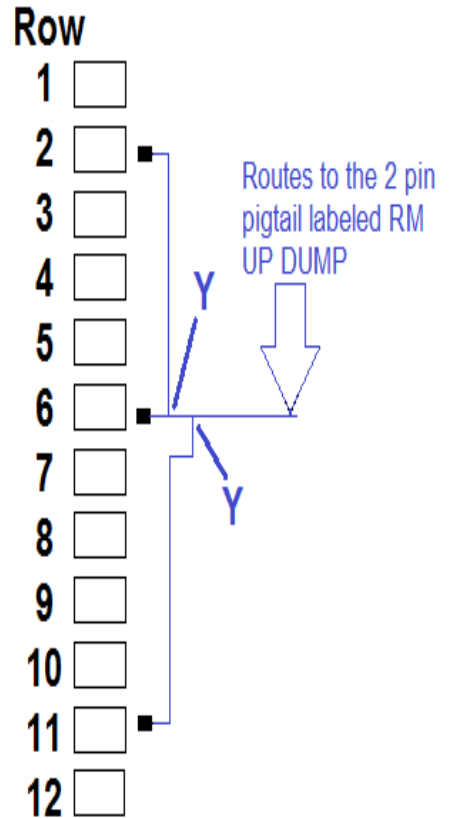

★ Aux 3 & Aux 4 on 2940-162 are not yet used ★

12 Row Airline Diagram

Step 1: T1 & T2 Route blue & black airline from row 1 to row 4. At row 4, install the black airline in the down pressure (larger) air bag fitting & blue airline in the up pressure (smaller) air bag fitting. Install a tee in each color of airline at rows 2 & 3. Install blue airline from the up pressure air bag to the tee in the blue airline & install black airline from the down pressure air bag to the tee in the black airline at each row. At row 1, cut both airlines to length & install each airline into the matching air bag fitting.

Step 2: Cut & tee T1 & T2 airline next to the matching dump valve on row 2. Route black airline from the tee in the T1 black airline into the outlet port of the down pressure dump valve (black cable) and route blue airline from the tee in the T2 blue airline to the outlet port of the up pressure dump valve (white cable).

Step 3: T5 & T6 Route blue and black airline from row 12 to row 9. At row 9, install each airline into the matching air bag's fitting. Install a tee in each color of airline at row 10 & 11. Install blue airline from the up pressure air bag fitting to the tee in the blue airline & black airline from the down pressure air bag fitting to the tee in the black airline at each row. At row 12, cut both airlines to length & install each airline into the matching air bag fitting.

Step 4: Cut & tee T5 & T6 airline next to the matching dump valve on row 11. Route black airline from the tee in the T5 black airline into the outlet port of the down pressure dump valve (black cable) and route blue airline from the tee in the T6 blue airline to the outlet port of the up pressure dump valve (white cable).






Step 5: T3 & T4 Route blue and black airline from row 5 to row 8. Install each airline at row 8 into the matching air bag's fitting. Trace both airlines back to row 5 installing a tee in each airline at rows 6 & 7. Install blue airline from the up pressure air bag fitting to the tee in blue airline on rows 6 & 7. Install black airline from the down pressure air bag fitting to the tee in the black airline on rows 6 & 7. At row 5, cut both airlines to length & install into the matching air bag.

Step 6: Cut & tee the T3 & T4 airline next to the matching dump valve on row 6. Route & install black airline from the tee in T3 black airline into the outlet port of the down pressure dump valve on row 6 & route blue airline from the tee in the T4 blue airline to the outlet port of the up pressure dump valve on row 6.


Step 7: S1 Route black airline from RD port of the 2940-101 compressor housing to the nearest point on the main frame that the seed units are mounted to & install a tee. From each side of the tee, route black airline to the inlet port on the down pressure dump valve on each wing/side of the planter. (Rows 2 and 11) (follow the same routing path as the trunk lines)

Step 8: S2 Route blue airline from the RU port of the 2940-101 compressor housing to the nearest point on the main frame that the seed units are mounted to and install a tee. Install a 6 inch piece of blue line into one port of tee. Install a second tee on the open end of the 6 inch piece of blue airline. This will give you 3 open ports on this circuit to use. Route blue airline from 2 of those ports to each inlet port on the up pressure dump valve on the wings/sides of the planter on row 2 and row 11 & install. Route blue airline from remaining port of the tee to the inlet port on the up pressure dump valve on row 6 & install.

Step 9: S3 Route black airline from the WT port of the 2940-101 compressor housing to the inlet port of the down pressure dump valve on row 6.

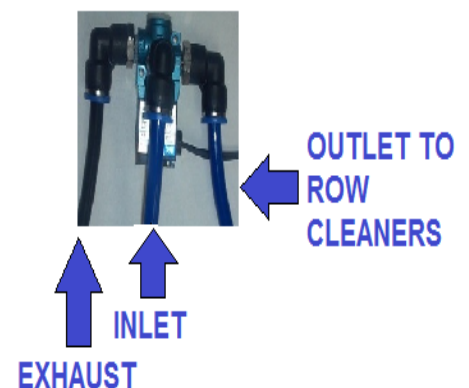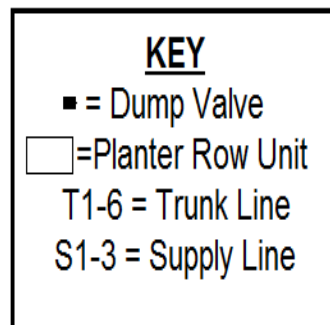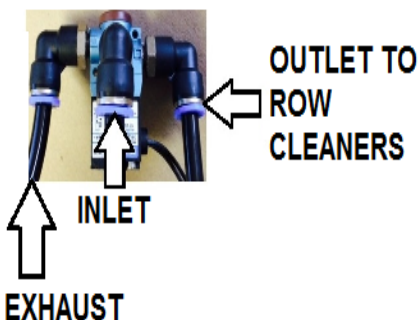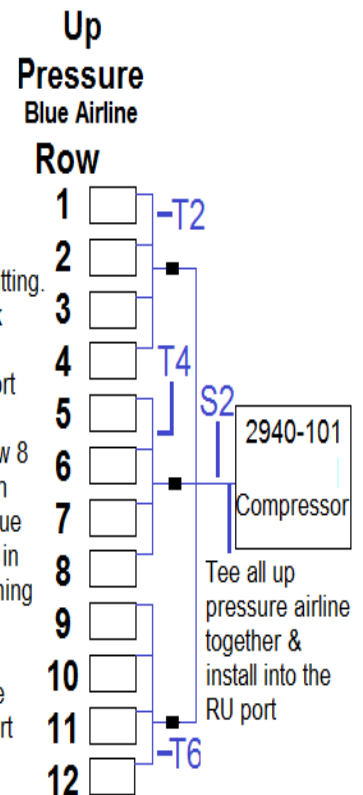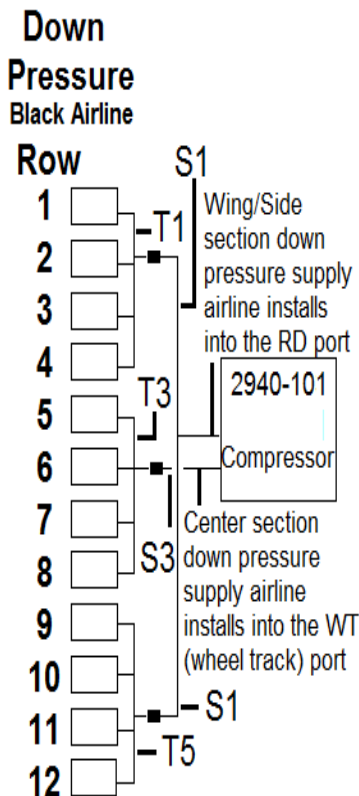


16 Row Dump Valve Diagram

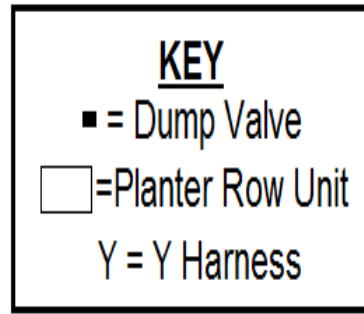

**Down
Pressure
Dump Valve**

Row

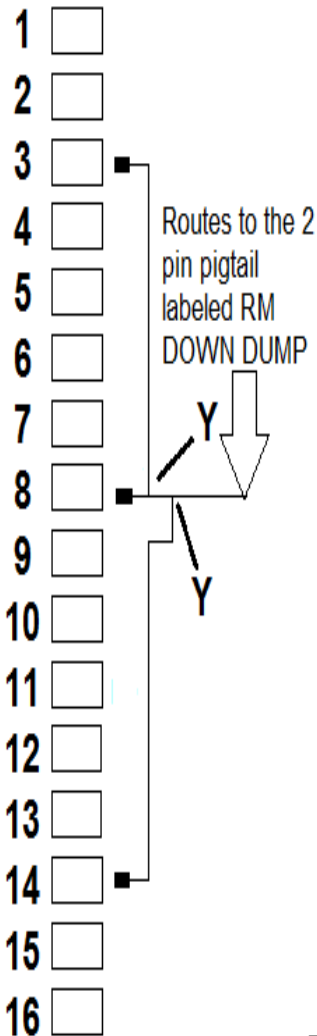

Step 1: Install 2 dump valves on each of the following rows: 3, 8, & 14.

Step 2: Install the male 12 pin Deutsch connector of the 2940-162 dump valve cable into the **GRAY** female connector on the side of the 2940-101 compressor housing.

Step 3: At row 3, install the mating 2 pin connector on the 2940-156 15ft black dump valve cable to the 2 pin cable on one dump valve and install the mating 2 pin connector on the 2940-157 15ft white dump valve cable to the 2 pin cable on the other dump valve. Route both cables to the dump valves on row 8 but do not install.

Step 4: At row 14, install the mating 2 pin connector on the 2940-156 15ft black dump valve cable to the 2 pin cable on one dump valve and install the mating 2 pin connector on the 2940-157 15ft white dump valve cable to the 2 pin cable on the other dump valve. Route both cables to the dump valves on row 8 but do not install.

Step 5: At row 8, install a 2940-158 black Y harness connecting the black dump valve cables routed in steps 3 & 4.

Step 6: Install a second black Y harness connecting one dump valve on row 8 to the Y harness installed in step 5.

Step 7: Route the appropriate length of black dump valve cable(s) from the open 2 pin connector at row 6 (from step 6) to the 2 pin connector labeled RM DOWN DUMP (orange/black wires) on the 2940-162 from step 2.


Step 8: At row 8, install a 2940-159 white Y harness connecting the white dump valve cables routed in steps 3 & 4.

Step 9: Install a second white Y harness connecting the open dump valve on row 8 to the Y harness installed in step 8.

Step 10: Route appropriate length of white dump valve cable(s) from the open 2 pin connector at row 6 (from step 9) to the 2 pin connector labeled RM UP DUMP (yellow/black wires) on the 2940-162 from step 2.


**Up
Pressure
Dump Valve**

Row

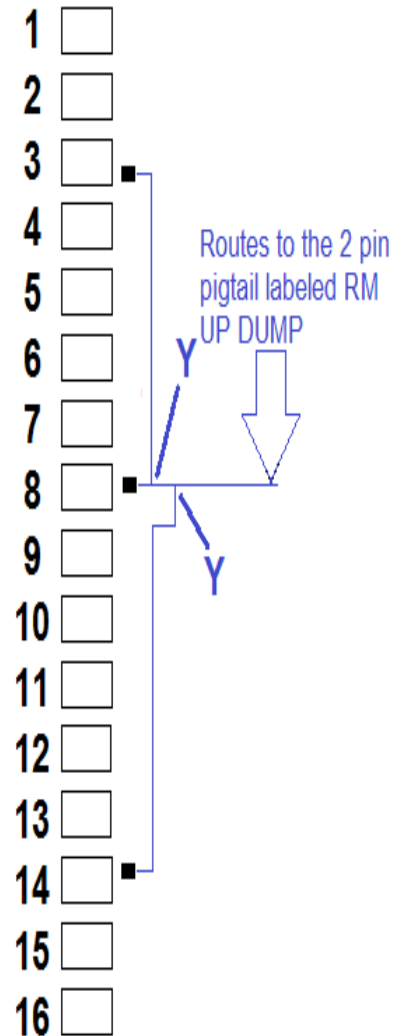

★ Aux 3 & Aux 4 on 2940-162 are not yet used ★

16 Row Airline Diagram

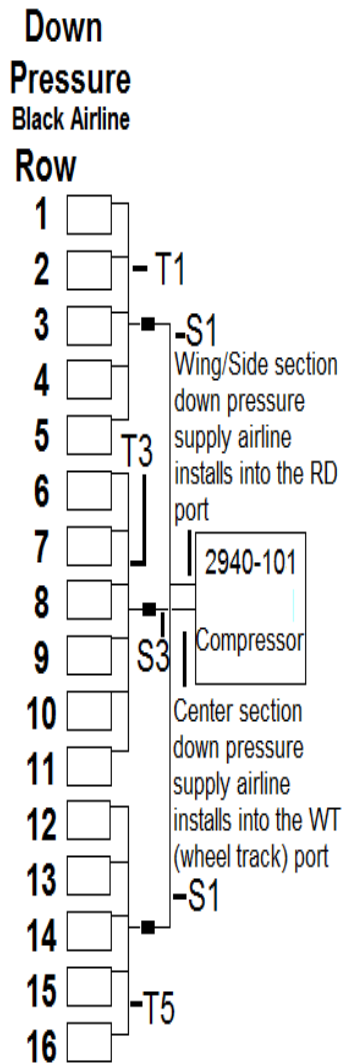

Step 1: T1 & T2 Route blue & black airline from row 1 to row 5. At row 5, install the black airline in the down pressure (larger) air bag fitting & blue airline in the up pressure (smaller) air bag fitting. Install a tee in each color of airline at rows 2-4. Install blue airline from the up pressure air bag to the tee in the blue airline & install black airline from the down pressure air bag to the tee in the black airline. At row 1, cut both airlines to length & install each airline into the matching air bag fitting.

Step 2: Cut & tee the T1 & T2 airline next to the matching dump valve on row 3. Route black airline from the tee in the T1 black airline into the outlet port of the down pressure dump valve (black cable) and route blue airline from the tee in the T2 blue airline to the outlet port of the up pressure dump valve (white cable).

Step 3: T5 & T6 Route blue and black airline from row 16 to row 12. At row 12, install each airline into the matching air bag's fitting. Install a tee in each color of airline at rows 13-15. Install blue airline from the up pressure air bag fitting to the tee in the blue airline & black airline from the down pressure air bag fitting to the tee in the black airline. At row 12, cut both airlines to length and install each airline into the matching air bag fitting.

Step 4: Cut & tee T5 & T6 airline next to the matching dump valve on row 14. Route black airline from the tee in the T5 black airline into the outlet port of the down pressure dump valve (black cable) and route blue airline from the tee in the T6 blue airline to the outlet port of the up pressure dump valve (white cable).




Step 5: T3 & T4 Route blue and black airline from row 6 to row 11. Install each airline at row 11 into the matching air bag's fitting. Trace both airlines back to row 6 installing a tee in each airline at each row (rows 5-8). Install blue airline from the up pressure air bag fitting to the tee in blue airline on rows 7-10. Install black airline from the down pressure air bag fitting to the tee in the black airline on rows 7-10. At row 6, cut both airlines to length and install into the matching air bag.

Step 6: Cut & tee the T3 & T4 airline next to the matching dump valve on row 8. Route & install black airline from the tee in T3 black airline into the outlet port of the down pressure dump valve on row 8 & route blue airline from the tee in the T4 blue airline to the outlet port of the up pressure dump valve on row 8.


Step 7: S1 Route black airline from RD port of the 2940-101 compressor housing to the nearest point on the main frame that the seed units are mounted to & install a tee. From each side of the tee, route & install black airline to the inlet port on the down pressure dump valve on each wing/side of the planter. (Rows 3 and 14) (follow the same routing path as the trunk airlines)

Step 8: S2 Route blue airline from the RU port of the 2940-101 compressor housing to the nearest point on the main frame that the seed units are mounted to and install a tee. Install a 6 inch piece of blue line into one port of tee. Install a second tee on the open end 6 inch piece of blue airline. This will give you 3 open ports on this circuit to use. Route blue airline from 2 of those ports to each inlet port on the up pressure dump valve on the wings/sides of the planter on row 3 and row 14 & install. Route blue airline from remaining port of the tee to the inlet port on the up pressure dump valve on row 8 & install.

Step 9: S3 Route black airline from the WT port of the 2940-101 compressor housing to the inlet port of the down pressure dump valve on row 8.

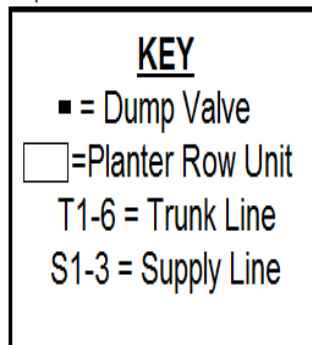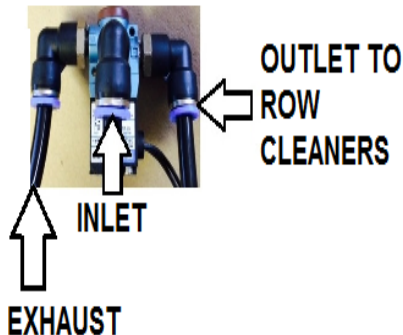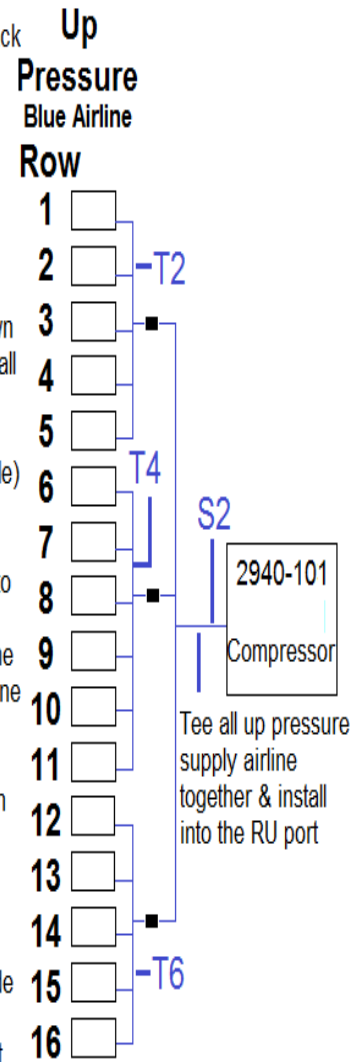

Cab Controller Operation

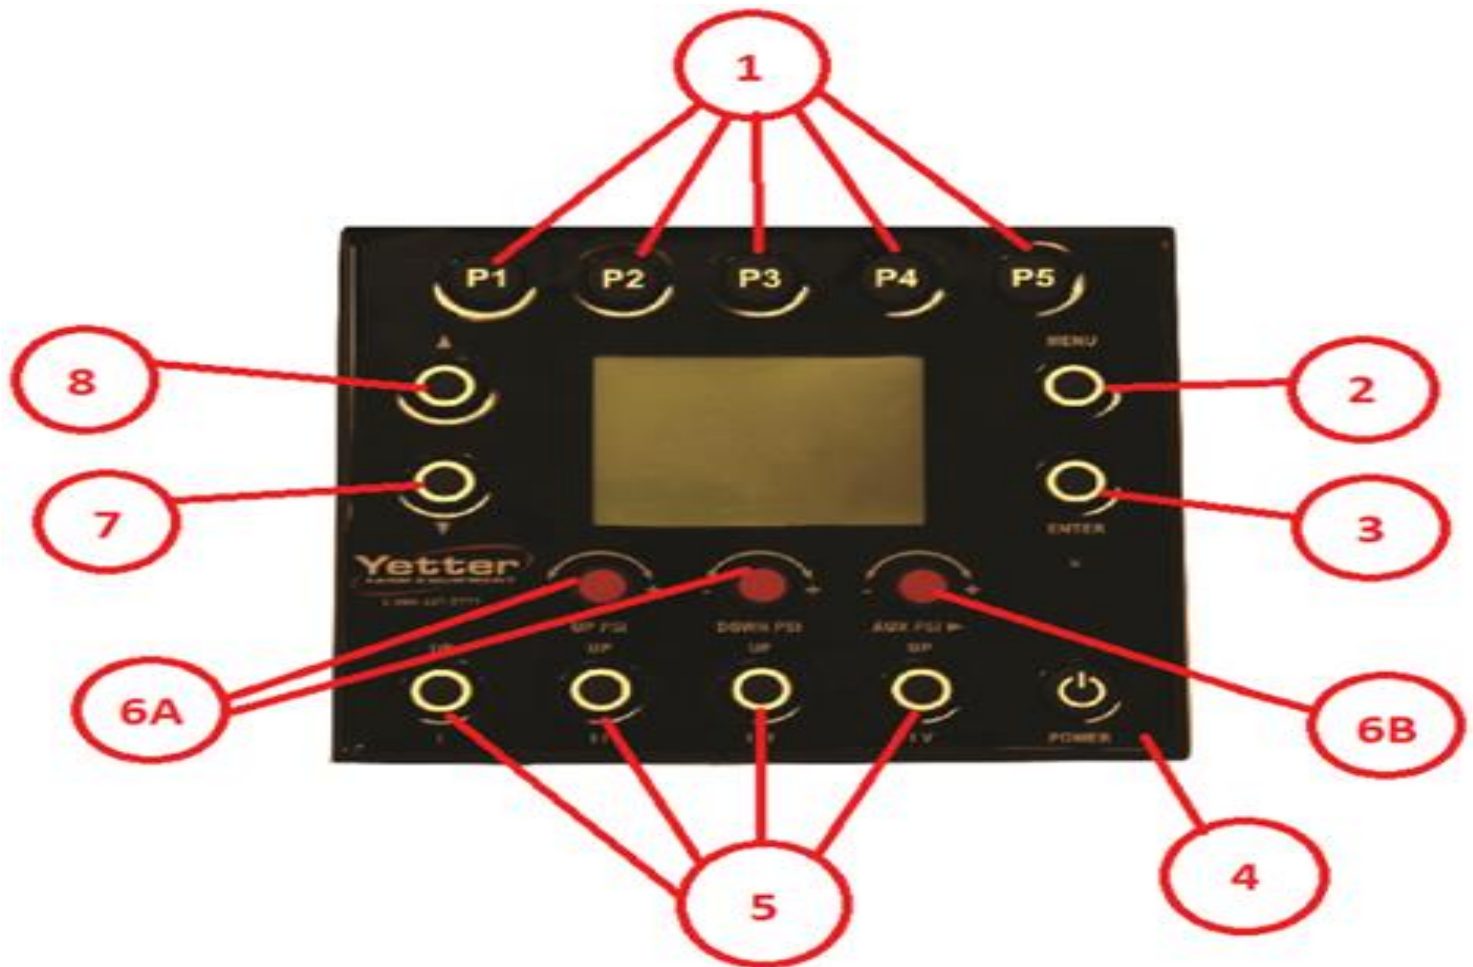


1. **PRESET 1 – 5-** Use Presets to change air pressure to row cleaner air bags quickly. Hold (approximately 5 seconds) to store the commanded pressure settings as a new preset.
2. **MENU-** Press to display Menu Options. If in Menu Options, pressing Menu will take the operator back one screen and eventually returning to the main operating screen.
3. **ENTER-** Press to activate/deactivate the system, also used in Menu options to make selections.
4. **POWER-** Press & **HOLD** (approximately 5 – 7 seconds) to turn Cab Controller Display (2940-100) ON/OFF.
5. **UP I-IV-** Press I to raise all row cleaners max travel. Pressing again lowers all row cleaners to preset setting. **Up II-IV is not used!**
6. A **PSI UP Encoder (RU)**-rotate to INCREASE/DECREASE Up Air Pressure on the attachment.
PSI DOWN Encoder (RD) -Rotate to INCREASE/DECREASE Down Air Pressure on the attachment.
6. B **PSI Aux Encoder (WT, A1, A2, A3)** - Push to scroll the curser. ROTATE to INCREASE/DECREASE air pressure on the curser selected circuit. (WT, A1, A2, and A3) WT circuit is the only circuit used. A1, A2, & A3 are not utilized at this time.
- ▼ 7. Push to scroll DOWN in the MENU display. Hold this down for 10 seconds to manually dump the water separator, Valve remains open for as long as button is pressed. **It is recommended to hold the DOWN scroll button for 20 seconds at the end of each planting day to drain moisture.**
- ▲ 8. Push to scroll UP in the MENU display.

2940 Air Adjust Cab Controller Operation

Screen Control and Navigation:

1. **Screen Navigation:** Unless otherwise noted, MENU button will always take you back one screen at a time until you are arrive at the main menu.
2. To navigate to other screens from the main menu use the scroll arrow buttons to select the page you would like to go to and then press ENTER to navigate there.
3. **Splash Screen (Screen 0):** This screen will be presented after the POWER button has been pressed. This screen will show the project number and software V/R. It will be displayed for 5 seconds. After that the system will navigate to screen 1.
4. **Main Operating Screen (Screen 1, Pictured below):** This screen is where the air system is monitored and controlled.

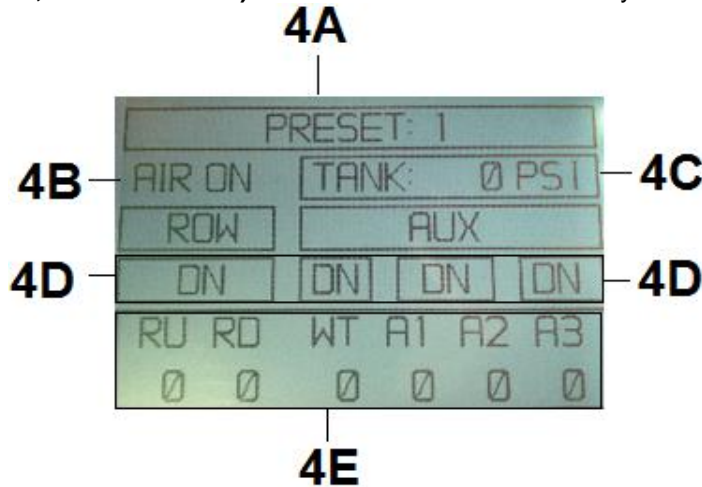

- 4A** The top of the screen shows what preset you are currently using (1-5), if a manual adjustment is made it will display "PRESET (X) MANUAL" until the preset is saved, then it will display PRESET X.
- 4B** This will display "AIR ON" or "AIR OFF" depending on the status of the air system. Pressing ENTER will activate or deactivate the AIR ON/OFF. "AIR ON" signifies that the air system is operational & supplying air to the attachment. If AIR ON is displayed with sufficient tank pressure & there is no air in the air bag of the attachment, check the 40A breaker at the battery.
- 4C** There is a field which will display the tank pressure in psi "TANK PSI".
- 4D** There are (4) fields which will indicate "UP" or "DN" (DOWN) depending on the state of the dump valves that are being controlled. If the Roman Numeral I indicator light is on, UP (under ROW) will be displayed & all residue managers will be in the up position. The UP/DN function under AUX & Roman Numerals II, III, & IV are not used.
- 4E** There are (6) fields which define the tools on the system and their pressures. The pressures shown at the bottom of this screen have two modes. In normal operation mode the real pressure feedback from the air system is shown, but if a manual adjustment is made it will show the commanded value for 7.5 seconds, after that delay it will return to displaying the feedback values. Yetter Electric Compressor systems only use RU, RD, & WT.

Operation Settings:

"How much Down/Lift Pressure should I be running?"

The amount of Down/Lift Pressure will vary greatly across soil types, tillage practices, soil moisture, row unit weight & many other variables. Manage the pressure in the down and/or lift circuits in order to maintain 90%+ Ground Contact while keeping the pressure between 20-60 psi. The cab controller will display the tank pressure in psi & the down/lift circuits in psi. A typical starting range for residue managers (RM) would be 35psi up, 30psi down, and 32psi WT. A typical starting range for RM/coulter combo would be 40psi up, 35 psi down, 37psi WT. When an ideal pressure setting is found for a certain field condition, press & hold a preset to store the desired setting. If the residue managers aren't removing enough residue, add more down pressure or subtract some up pressure. If the residue managers are being too aggressive, subtract down pressure or add up pressure.

Normal operating ranges:

- Down Pressure Bags: 20-60psi
- Lift Pressure Bags: 20-60psi
- Tank Pressure: On 2012-2015 systems, tank pressure on cab controller is only way to know what tank pressure is, compressor will shut off around 95psi & start to recover at 85psi. On 2016 & newer systems, compressor will shut off at 145psi & start back up when tank psi reaches 120psi. The reading from cab controller comes from transducer (2940-441) & relays psi to VDM which communicates that pressure to cab controller. If tank pressure reads zero & you are sure there is tank pressure, a transducer needs ordered. The tank has a safety relief valve that automatically triggers if tank psi reaches 175psi.

2940 Air Adjust Cab Controller Operation

Main Menu: This screen will allow you to navigate to setup & service screens. Selecting EXIT will return you to main operating screen.

Setup: Currently this screen has one option, to select & edit the Dump Valve Delay.

- **Dump Valve Delay:** This screen allows you to adjust the dump valve delay time. Press the ENTER button to go into the edit mode & then adjust the time with the SCROLL UP/DOWN buttons. The time value will have .25 second resolution & will be adjustable from 0-60 seconds. Pressing ENTER again will exit the edit mode. Generally, no more than 2.5 seconds is needed. **(see page 44 for proper setting)**
- **Setting the Dump Valve Delay:**
 - Ensure all dump valves & harnesses are plugged in securely & that dump valves are functioning properly
 - Adjustments will be made in increments of .25 seconds.
 - When the dump valve delay is properly set, the residue managers should react as follows: with sufficient tank pressure, AIR ON displayed, command RU to 30psi, RD to 35psi, & WT to 37psi. Press the Roman numeral I button & all residue managers will raise. Press the Roman numeral I button again & all residue managers should drop to half travel & then settle into position. If the residue managers don't go to half travel, more dump valve delay is needed. If the residue managers go further than half travel, less dump valve delay is needed. It is best to have a second person looking as well.
 - Access the dump valve delay screen on your cab controller.
 - Adjust the dump valve delay by .25 seconds at a time in the desired direction (more or less), revert to home screen.
 - Press the Roman numeral I button & observe residue managers to see if more adjustment is needed.
 - Keep adjusting as needed

SEE PAGE 44 TO SEE WHAT SETTING THE DUMP VALVE DELAY SHOULD BE FOR YOUR SITUATION

Service: This screen has (3) selections to choose from, HOUR METERS, MAINTENANCE, and FAULT STATUS.

- **Hour Meters:** This screen will contain (2) hour meters, air compressor hours, which only increments if the compressor is on, & total system hours, which only increments if the air system is enabled (AIR ON). There will also be a field that shows duty cycle; this is a cumulative value calculated by dividing compressor hours by system hours which equals the percentage of time the compressor has run in reference to how many hours the system has been enabled. The percentage shown by the duty cycle should be less than 20%. **If not, perform the leak check.** **(See pages 44)**
- **Maintenance:** This screen is static & has a text description indicating basic maintenance info.
- **Fault Status: J1:** This screen contains real time read outs of command & feedback voltage readings for each pin present in the connector labeled J1.
- **Fault Status: J2:** This screen contains real time read outs of command & feedback voltage readings for each pin present in the connector labeled J2
- **Fault Status: J3:** This screen contains real time read outs of command & feedback voltage readings for each pin present in the connector labeled J3
- **Fault Status: J4:** This screen contains real time read outs of command & feedback voltage readings for each pin present in the connector labeled J4

Warning – Compressor Run Time: This screen will be displayed if the compressor has been running continuously for 15 minutes. **Evaluate the system for leaks or other issues before continuing.** When all issues are fixed, press ENTER to clear the screen & resume normal operation.


Warning – Check Fault Screens: If a fault is detected, this screen will be displayed. Contact a service representative at Yetter, & have the fault screens ready, to review voltage readouts for diagnostics. This warning will remain displayed until the ENTER button is pressed.

Air System On: The state of this displayed text tells the operator if the system is operating or not. The Air System will be ON if the ENTER button is pressed on the main operating screen (screen 1). At this point the indicator will turn from red to green. It will maintain ON until ENTER is pressed again, turning the indicator back to its original color. Remember to switch the air system off, before removing power to the controller. The system is ON when the indicator is green; also the text on the screen will read “AIR ON” (vs. “AIR OFF”).

Compressor Sump Dump: This dumps any water that has built up in the compressor tank or water separator. This function is programmed to open the valve for 5 seconds every hour to dump the moisture. The Compressor Sump Dump valve can also be activated by holding the “Scroll Down” button while on the Main Operating Screen for 8 seconds. The valve will remain open as long as the button is pressed, releasing the button will close the valve.

2940 Air Adjust Cab Controller Operation

Appendix

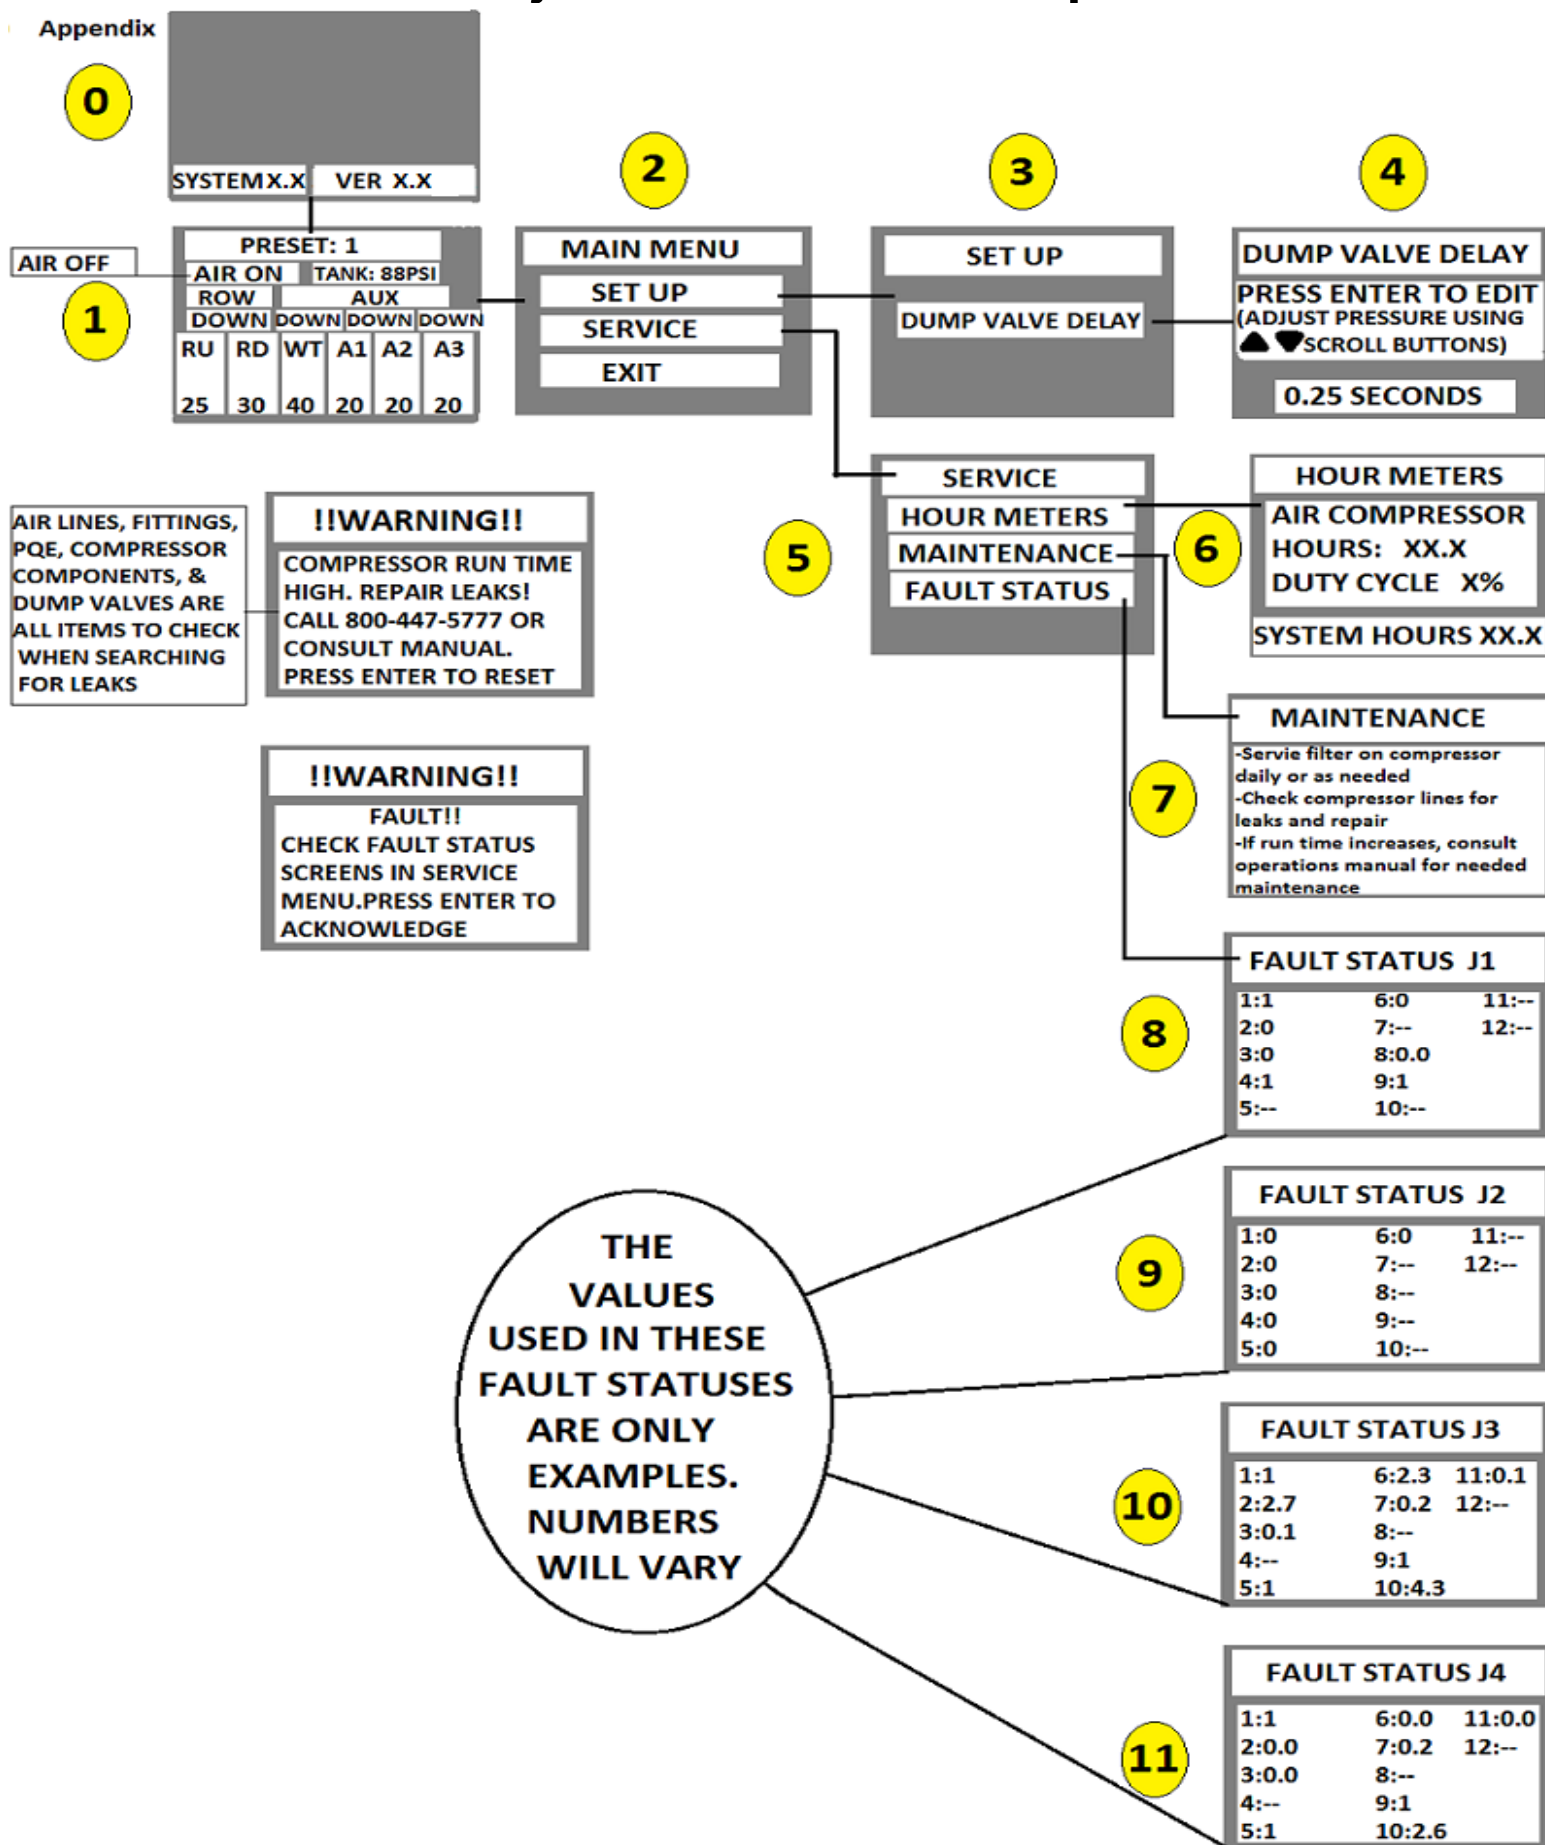

2940 Operation Guide

System Start Up Procedure

Below is the 2940 system startup procedure that should be followed every time the 2940-100 Cab Controller is turned on. This will ensure that component parts of the system are working correctly.

If this is the first start up procedure after installation, make sure to set the dump valve delay and familiarize yourself with cab controller operation. Before activating the system, save P1 at 35 RU, 30 RD, & 32 WT. Save P2 at 35 RU, 33 RD, & 35 WT.

Step 1: Supply power to the cab controller (start the tractor) & hold the Power button until the cab controller turns on.

Step 2: Turn all pressures (RU, RD, & WT) to 0psi.

Step 3: Press Enter to activate the system. AIR: ON will be displayed. The Yetter compressor will turn on (if it is below 85psi) & should build to 95psi & shut off. If the Yetter compressor doesn't run & is below 80psi, check the 40A & 80 amp breaker on the tractor battery. Trip the breakers and reset the breaker arm firmly back into the pocket.

Step 4: When the compressor has shut off, press a preset (P1 – P5) to apply air to the air bags of the residue managers.

Step 5: Press the UP 1 button (lowest left button) while watching all the residue managers. When this button is pressed and the indicator light next to UP is lit, the residue managers should all raise.

Step 6: Press the UP 1 button while watching all the residue managers. All the residue managers should drop to half travel and then settle into position. (change dump valve delay if necessary, [see page 44](#))

ROW CLEANER DO'S AND DON'TS

1. **DO NOT** use as a tillage tool; Residue Managers are designed to move crop residue & to break up clods & crust.
2. **DO NOT** operate planter at slow speeds. Ground speed affects how aggressive the residue manager wheels are. Operate at sufficient speed (refer to you OEM planter manufacturer manual) to maintain good residue flow.
3. **DO NOT** expect 100% of crop residue to be cleared, it is not necessary and would necessitate engaging the soil. The width of path cleared depends on ground conditions, depth setting, and ground speed.
4. **DO** expect to see wheels occasionally quit turning, indicating ideal (shallow) setting which is not moving soil.
5. **DO** adjust toolbar frame height 20"-22" and drawbar correctly. It is very important to ensure planter opener will follow ground contours properly. [See Page 43 for the planter levelness and height.](#)
6. **DO NOT** run air pressure below 20psi or above 60psi. Full range of travel can be achieved between these settings.
7. **DO** grease the hub cavity of the bearings regularly. Even though the bearings are sealed, filling the hub keeps moisture, dirt, & debris from entering the hub and ruining the seal. [See page 46 for greasing intervals.](#)
8. **DO NOT** run the coulter, if equipped, deeper than the disc opener blades. Coulter should be set to run even or slightly above disc opening blades depth.

IMPORTANT: For proper operation, the planter frame must operate level (fore, aft and side to side) and at the correct height, typically 20"-22". Regularly inspect the residue manager for loose or worn bolts & hardware. Repair or replace as needed.



Overview:

This electronic control system works with a pneumatic system that controls pressure in the air bags as well as other air valves in the system on an agricultural application. The air bags provide independent up **AND** down pressure to the mechanical devices that are used on an agricultural implement.

System Layout:

There are (2) main parts to the control system. The first being a VDM (Valve Drive Module), the role of the VDM is to provide Outputs to control functions of the pneumatic system. The VDM will also provide Inputs to monitor the pneumatic system as well as provide feedback to the operator. The second part is an in-cab switch panel/display (Cab Controller) that allows the operator to control the pneumatic system and monitor its performance.



CAUTION

OPERATION PRECAUTIONS

MACHINE OPERATION

Read this before field operation of the Yetter product.

IMPORTANT: Failure to properly set the planter frame height & levelness can result in less than successful operation of the planter & the Yetter product. This may result in damaged equipment. All operators should read & thoroughly understand the instructions given prior to using the Yetter product.

NOTE: DO NOT use this product if the planter is not adjusted properly!

Leveling the planter: On a level planting surface, lower the planter frame to an operation height of **20"-22"**. Make adjustments to the planter as necessary. Read the planter operator's manual for recommended setting. Check to be sure the toolbar & row unit parallel arms are level fore & aft. Re-Check when the planter is in the field & has been fully loaded with seed, fertilizer, etc. Also, a field check with a bubble level on the frame should be made of the hitch height to ensure level operation front to back. It is important for the planter to operate level laterally. Tire pressure must be maintained at pressures specified by the manufacturer. Field & actual planting conditions change & will dictate planter frame heights. You must ensure that the row unit parallel arms are approximately parallel with the ground.

IMPORTANT: For proper operation of the planter attachments & row units, it is imperative that the planter toolbars and row unit parallel arms be level side-to-side & front-to-rear. The toolbar frame should operate at a 20"-22" height from the planting surface. Check the manufacturer's operator's manual for instructions on how to adjust the frame height & levelness. The decal below pertains to 2940 coulters combo units!

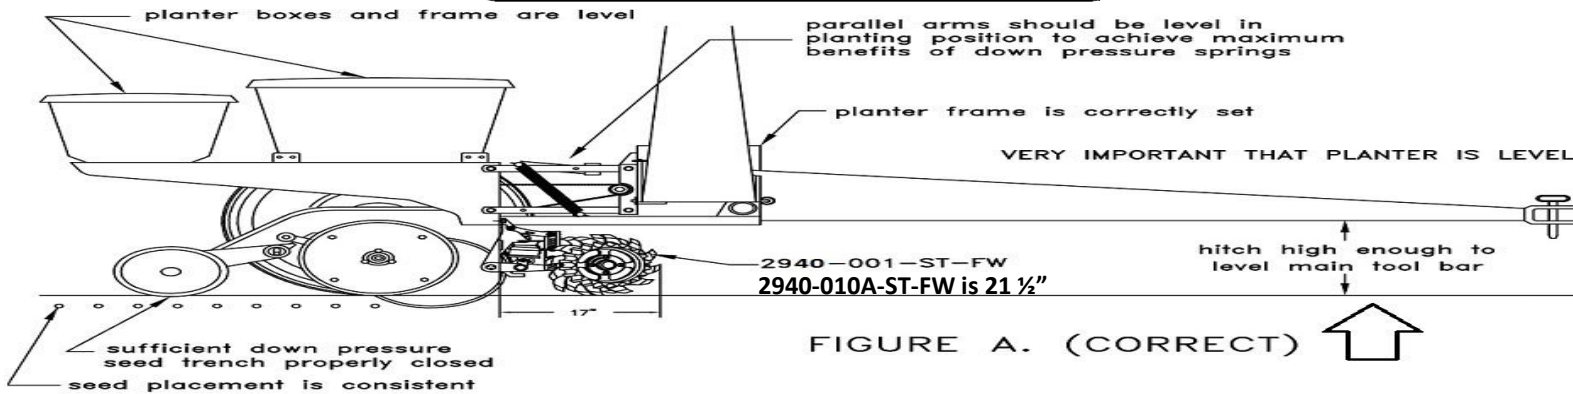
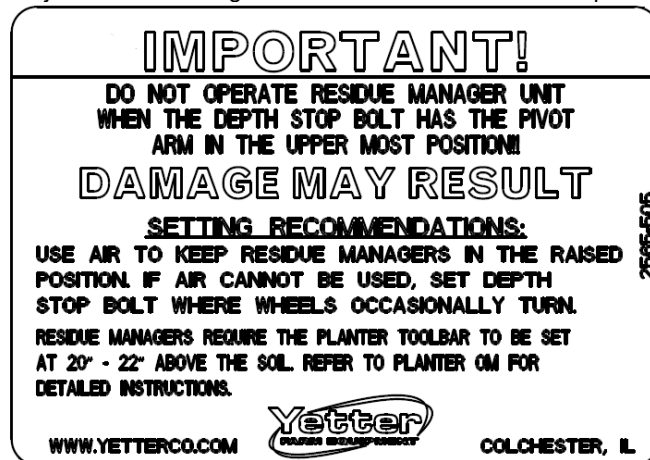


FIGURE A. (CORRECT)

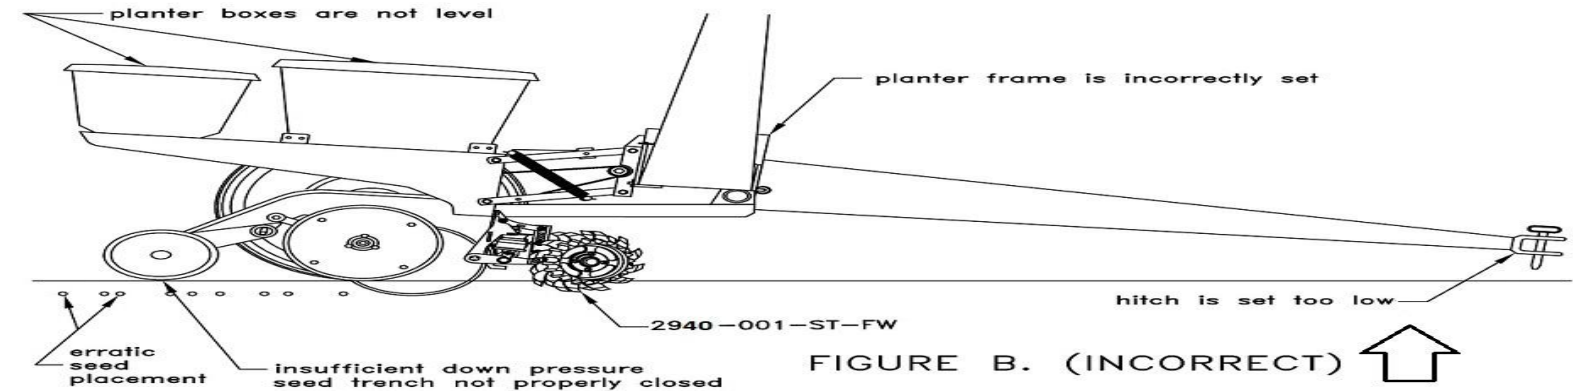


FIGURE B. (INCORRECT)

Pre-Field Operation Guide

SYSTEM LEAK TESTING:

A leak testing procedure should be performed after set-up of the 2940 Air Adjust system is complete. This procedure shall be performed at the beginning of each planting season and every 20 hours of in season use. **In addition, it should be performed if the user notices a lack of air pressure availability or if the compressor is running an abnormally high duty cycle or run time.** It will help keep the duty cycle in check, thus extending the life of the compressor. The most efficient way to perform a leak test is to use shop air, if available, to allow for a quieter environment to detect an air leak better. A 2940-382 shop air adaptor is provided in the 2940-174 spare fittings bag. The shop air adaptor is equipped with a shut off valve. Attach your matching male coupler to the open 1/4"NPT & install airline between the 3/8PTC fitting & the water separator inlet port. Wrap the male threads of the shop air fitting with Teflon tape.



- Step 1:** Power the cab controller, turn all pressures (RU, RD, and WT) to 0psi, and press ENTER to activate the system. Make sure the Yetter Electric Compressor has operates correctly, has built around 145psi, & shut off.
- Step 2:** Check the compressor, water separator assembly, and all compressor housing components for leaks. Start a stopwatch & after 5 Minutes, note the tank pressure. If the tank pressure drops more than 2psi, there is a leak. Repair as needed.
- Step 3:** Turn up pressure (RU) to 30psi, exit the tractor cab, & start at the compressor housing checking all blue airline on the RU circuit for leaks. Check all fittings, tees, and dump valves on the RU circuit. Repair leaks as needed & then turn up pressure back to 0psi.
- Step 4:** Turn down pressure (RD) & wheel track (WT) pressure to 30psi, exit the tractor cab, & start at the compressor housing checking all black airlines on the RD & WT circuit for leaks. Check all fittings, tees, & dump valves on the RD & WT circuit. Repair leaks as needed.
- Step 5:** With tank pressure around 145psi, compressor not running, & 0psi commanded in all circuits, note tank psi. Start a stop watch & after 5 minutes, note tank pressure. If tank pressure drops more then 2psi, check for leaks around/inside the compressor housing & control box. Repair as needed.
- Step 6:** With tank pressure around 145psi, compressor not running, and 30psi commanded in all circuits, no the tank psi. Start a stop watch & after 5 minutes, note the tank pressure. If tank pressure drops more the 2psi, check for leaks on the row cleaner fittings, tees, and dump valves. Repair as needed.

AIR COMPRESSOR PRE-OPERATING TEST PROCEDURE:

Before beginning this test, run compressor system leak test & ensure it passes. There should be virtually no leaks in tank circuit before performing this test. Use a stop watch to time compressor's recovery time. Start time when tank gauge reaches 85psi & compressor turns on. Stop time when compressor shuts off at 145psi. If time is greater than 4 minutes, there is a leak, low battery power, or the compressor is worn. Repair as needed.

Proper Operation Settings

Dump Valve Delay

To set dump valve delay, start at operating screen, press **Menu**, select **Set Up**, press **Enter** to edit, & use following guide to set to planter size:

Non Split Row Planters

- 6-12 row planters - .5 seconds 16 row planters - .75-1.0 seconds

Split Row Planters

- 6/11, 6/12, 8/15, or 8/16 planters - .5 – .75 seconds using only corn rows, .75 – 1.5 seconds when using all rows

Note: When the dump valve delay is set properly, the action of the residue managers (RM) will be as follows:

- Pressing the Roman numeral I button (up indicator light on) should raise all RMs
- Pressing the Roman numeral I button (up indicator light off) will lower RMs to half travel & then settle into position

Air Pressure Settings

The following are recommended starting pressures to save for each preset, these go from light (P1) to very aggressive (P5)

P1 – RU40, RD25, WT27 P2 – RU35, RD30, WT32 P3 – RU30, RD35, WT37 P4 RU35, RD45, WT45 P5 – RU30, RD50, WT50

Residue Managers Only

A common question is "What pressures should I start out at?" A good starting pressure setting would be 35psi Up Pressure (RU), 30psi Down Pressure (RD), & 32psi Wheel Track (WT). This particular setting will give each row cleaner a nice, sturdy float. If this pressure setting doesn't remove enough residue or trenches/digs furrows, adjust settings accordingly until row cleaner is doing exactly what you want it to do. If row cleaner is trenching, lessen down pressure or increase up pressure. If not enough residue is removed, lesson up pressure or increase down pressure. Once a setting is found, hold the desired preset button (P1-P5) until saved. Each field may require a different setting even though field conditions seem the same. For example, if you use a setting for one no-till field planting corn in soybean residue, you may find that the setting used for the next field planting corn in soybean residue in no-till conditions may be different. The reason may be the amount of residue, soil types, moisture amounts, etc.

Residue managers/Coulter Combos

A common question is "What pressures should I start out at?" A good starting pressure setting would be 40psi Up Pressure (RU), 35psi Down Pressure (RD), & 37psi Wheel Track (WT). This particular setting will give each row cleaner a nice sturdy float. If this pressure setting doesn't remove enough residue or trenches/digs furrows, adjust settings accordingly until row cleaner is doing exactly what you want it to do. If row cleaner is trenching, lessen down pressure or increase up pressure. If not enough residue is removed, lesson up pressure or increase down pressure. Once a setting is found, hold the desired preset button (P1-P5) until saved. Each field may require a different setting even though field conditions seem the same. For example, if you use a setting for one no-till field planting corn in soybean residue, you may find that the setting used for the next field planting corn in soybean residue in no-till conditions may be different. The reason may be the amount of residue, soil types, moisture amounts, etc.

Maintenance


2940 SYSTEM MAINTENANCE

- Step 1:** Remove the pre-cleaner (if equipped) from filter cover.
Remove the filter cap by turning the cap clockwise.
- Step 2:** Clean the pre-cleaner & filter.
- Step 3:** Install filter & filter cap, placing tab in the slots & turning cap counter clockwise. Make sure breather hole on filter cap is facing down. Install the pre-cleaner.



DAILY

- Check air filter cleanliness, clean/replace as needed.
- Check airlines for air leaks and repair as needed.
- Check component parts of the compressor for damage (pressure switch, cooling fan, gauge, etc)
- Open Tank Drain Valve (10 seconds) (see illustration to the right) to allow moisture to drain----->
- Clean the interior of the control box & compressor

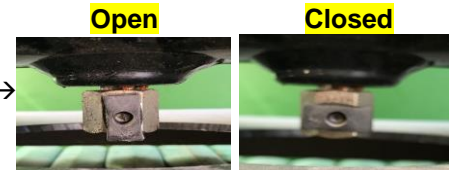

SEASONALLY/200 COMPRESSOR HOURS


- Replace air filter element (Part number for filter is 2940-395, part number for filter pre-cleaner is 2940-396)
- Check/Clean the all connectors, inspect harness/cables for damage

BEARING ASSEMBLY AND LUBRICATION


Practice Safety

Understand & practice safe service procedures before doing work. Follow ALL the operating, maintenance & safety information in the equipment operator manual. Clear the area of bystanders, especially small children, when performing any maintenance or adjustments. Keep work area clean & dry. Use adequate lighting for the job. Use only tools, jacks & hoists of sufficient capacity for the job. Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, & clothing from power-driven moving & rotating parts. Disengage all power & operate controls to relieve pressure. Lower equipment to the ground and stop the engine. Remove the key. Wait for all moving parts to stop before servicing, adjusting, repairing or unplugging. Securely support any machine elements with blocks or safety stands that must be raised for service work. Keep all parts in good condition and properly installed. Fix damaged equipment immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris. Make sure all guards are in place and properly secured when maintenance work is completed.

Assembly

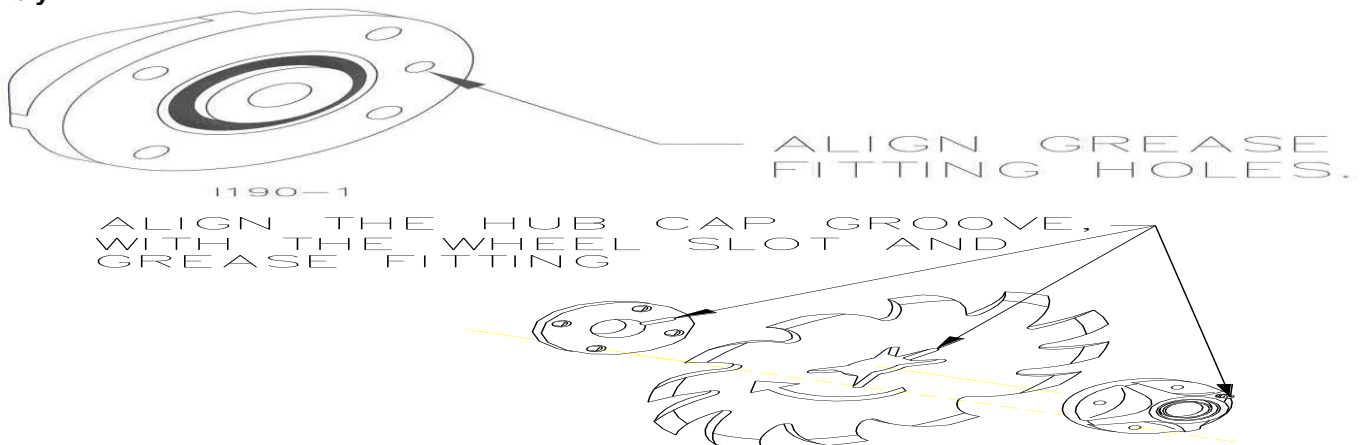

NOTE: Be certain to align the grease fitting with the slot in the wheel and the hubcap so that the grease can flow freely to the cavity. The bearing is sealed but the cavity must be filled so that dirt, moisture, & debris do not enter the cavity & ruin the seal.

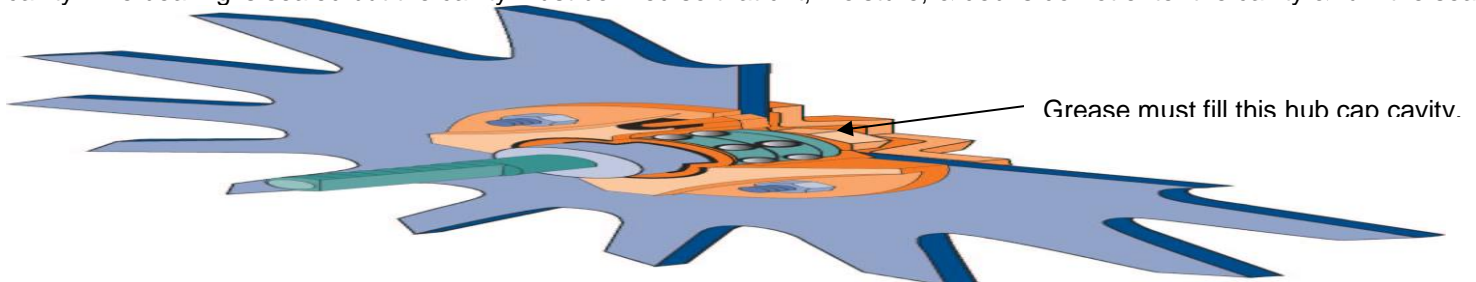

MAINTENANCE

Lubrication



CAUTION: To help prevent serious injury or death to you or others caused by unexpected movement, service machine on a level surface. Lower machine to ground or sufficiently lock or block raised machine before servicing. If machine is connected to tractor, engage parking brake & place transmission in "PARK", shut off engine and remove key. If machine is detached from tractor, block wheels & use shop stands to prevent movement.



CAUTION: Use grease based on NLGI consistency numbers and the expected air temperature range during the service interval. Use a multi-purpose lithium, water resistant, moderate speed, & NLGI grade #2 grease. Other greases may be used if they meet the following NLGI Performance Classification: GC-LB.

IMPORTANT: Some types of grease thickener are not compatible with others. Consult your grease supplier before mixing different types of grease.

Alternative Lubricants

Conditions in certain geographical areas may require special lubricants and lubrication practices which do not appear in the operator's manual. If there are any questions, consult Yetter Manufacturing Co. to obtain latest information and recommendation.

PART #	DESCRIPTION	OUNCES OF GREASE
2967-404	13" TAPER TOOTH R.M. WHEEL	1.12 OZ
2967-602	13" SHARK TOOTH R.M. WHEEL	1.12 OZ
2967-186	FLOATER WHEEL KIT W/R.M. WHEEL	2.08 OZ
2967-596	HEAVY DUTY OR BEVEL R.M. WHEEL W/ FLOATER WHEEL KIT	2.40 OZ

Storing Lubricants

Your machine can operate at top efficiency only if clean lubricants are used.
Use clean containers to handle all lubricants.
Store them in an area protected from dust, moisture and other contaminants.

Lubrication Symbols




Lubricate with grease at hourly interval indicated on symbol.

Lubrication Intervals


ONLY ON 2020-OLDER MODEL RM & RM/CC, 2021-NEWER HUBS DON'T HAVE GREASE ZERKS

Residue Manager

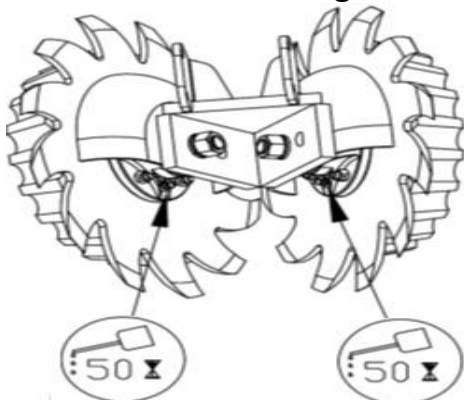


Grease Zerk on Hub

Residue Manager/Coulter Combo

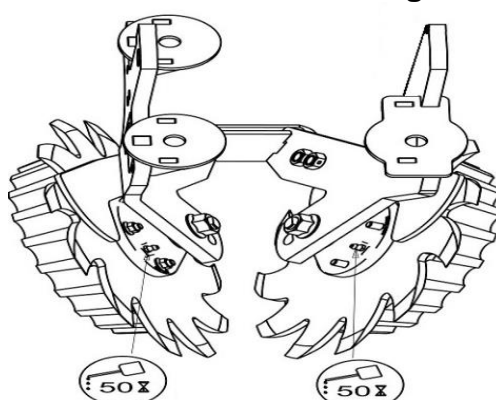

Grease Zerk on Hub

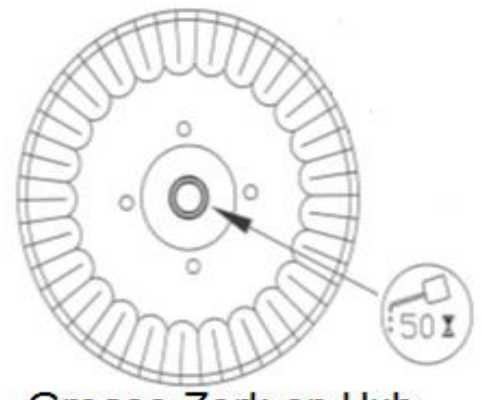

Grease Zerk on Hub

The recommended service intervals are based on normal conditions; severe or unusual conditions may require more frequent lubrication.

MAINTENANCE

- Perform each lubrication and service procedure at the beginning and end of each season.
- Clean grease fittings before using grease gun, to avoid injecting dirt and grit into the bearing.
- Replace any lost or broken fittings immediately. If a fitting fails to take grease, remove and clean thoroughly,
- Replace fitting if necessary. Also check for failure of adjoining parts.

BEARING REPLACEMENT INSTALLATION

1. When assembling the spoke wheels, bearing assembly and hubcap, be sure to align the grease transfer hole in the spoke wheel with the groove in the hubcap and hole in the hub to allow grease passage.
2. Assemble the wheels, hubs and caps.
3. Grease the wheel/hub/bearing assembly.


Storing the Equipment

Store the machine in an area away from human activity
 Store the machine in RAISED position.
 Install service locks on all wheel cylinders.

At end of season, machine should be thoroughly inspected & prepared for storage. Repair or replace any worn or damaged components to prevent down time at start of next season. Store machine under cover with all parts in operating condition.

- Clean machine thoroughly to remove all dirt, debris, and crop residue, which would hold moisture and cause rusting.
- Inspect machine for worn or broken parts. See your Yetter Farm Equipment dealer during the off-season so that parts or service can be acquired when machine is not needed in the field.
- Lubricate bearings as outlined in the Lubrication section.
- Paint all parts which are chipped or worn and require repainting.
- Store machine in a clean, dry place with the planting unit out of the sun.
- If the machine cannot be stored inside, cover with a waterproof tarpaulin and tie securely in place.
- Do not allow children to play on or around the machine.

AIR BAG REPLACEMENT

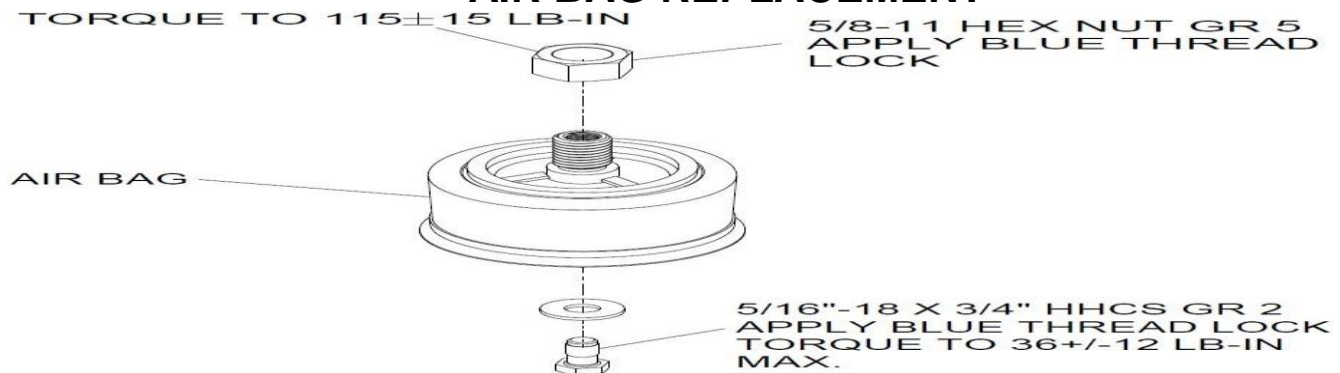

2940-386


6" AIR BAG

2940-388

8" AIR BAG

2940-049A PARTS IDENTIFICATION


MANUFACTURED 06/2017 – PRESENT

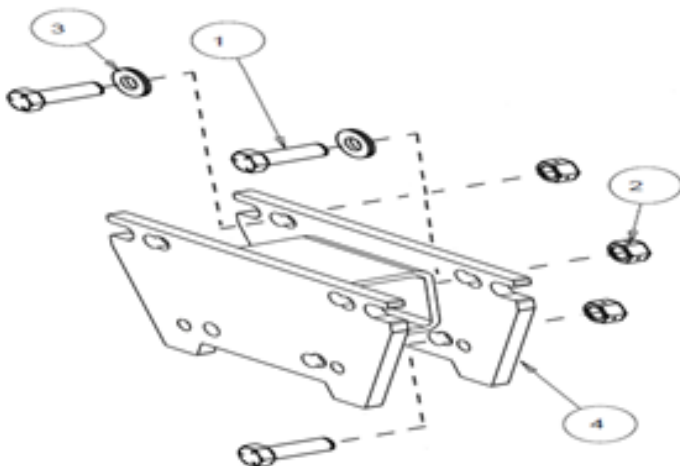

Item	Part #	Description	Qty
1	2502-294	1/2-13 x 1-1/2 HHCS GR 5 ZP	3
2	2520-357	1/2-13 HEX LOCK NUT ZP	3
3	2526-355	1/2 FLAT WASHER HARDENED ZP	2
4	2940-220	MOUNT EXTENSION W.A.	1

2940-190A PARTS IDENTIFICATION


MANUFACTURED 07/17 – PRESENT

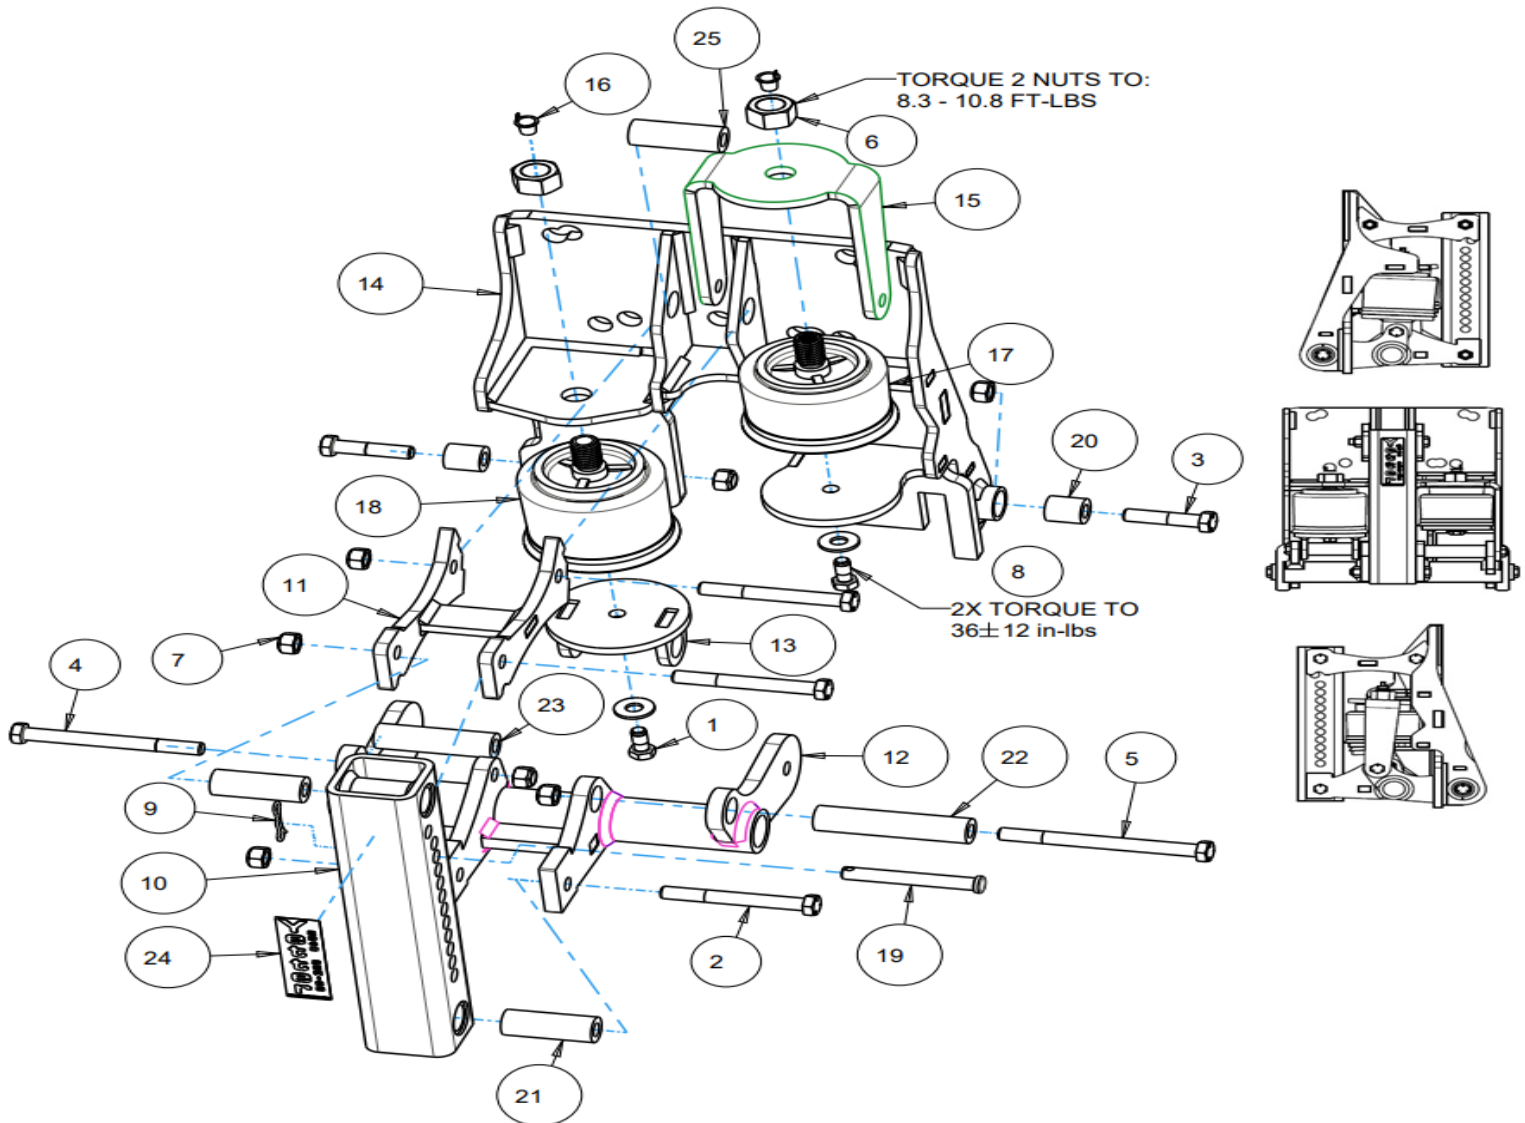

Item	Part Number	Description	Qty
1	2502-200	5/16 – 18 X 3 ¼ HHCS W/ THREAD LOCK GR 2 ZP	2
2	2502-233	3/8 – 16 X 3 ¼ HHCS GR 5 ZP	3
3	2502-245	3/8 – 16 X 1 ¼ HHCS GR 5 ZP	2
4	2502-254	3/8 – 16 X 4 HHCS GR 5 ZP	1
5	2502-260	3/8 – 16 X 4 ½ HHCS GR 5 ZP	1
6	2520-455	5/8 – 11 HEX NUT ZP PATCH LOC GR 5	2
7	2520-601	3/8 – 16 HEX TOP LOCK GR C ZP	7
8	2526-201	5/16 STANDARD FLAT WASHER	2
9	2570-445	HAIRPIN COTTER, ZP	1
10	2940-210	ADJUSTMENT TUBE	1
11	2940-211A	UPPER LINK W.A.	1
12	2940-213	LOWER PARALLEL	1
13	2940-214	AIR BAG BRACKET W.A.	1
14	2940-222A	R.M. MOUNT PLATE W.A.	1
15	2940-309	UPFORCE TOP MOUNT	1
16	2940-340	AIR BAG CAP PLUG	2
17	2940-386	SHORTER AIR BAG	1
18	2940-388	LARGER AIR BAG	1
19	2940-399	PIN, ZP	1
20	2940-472	BUSHING	2
21	2940-473	BUSHING	2
22	2940-474	BUSHING	1
23	2940-478	.750" OD X .406" ID X 2.630" BUSHING	1
24	2940-590	YETTER VERTICAL DECAL	1
25	2940-677	PIVOT BUSHING	1


2940-192A PARTS IDENTIFICATION

MANUFACTURED 07/17 – PRESENT

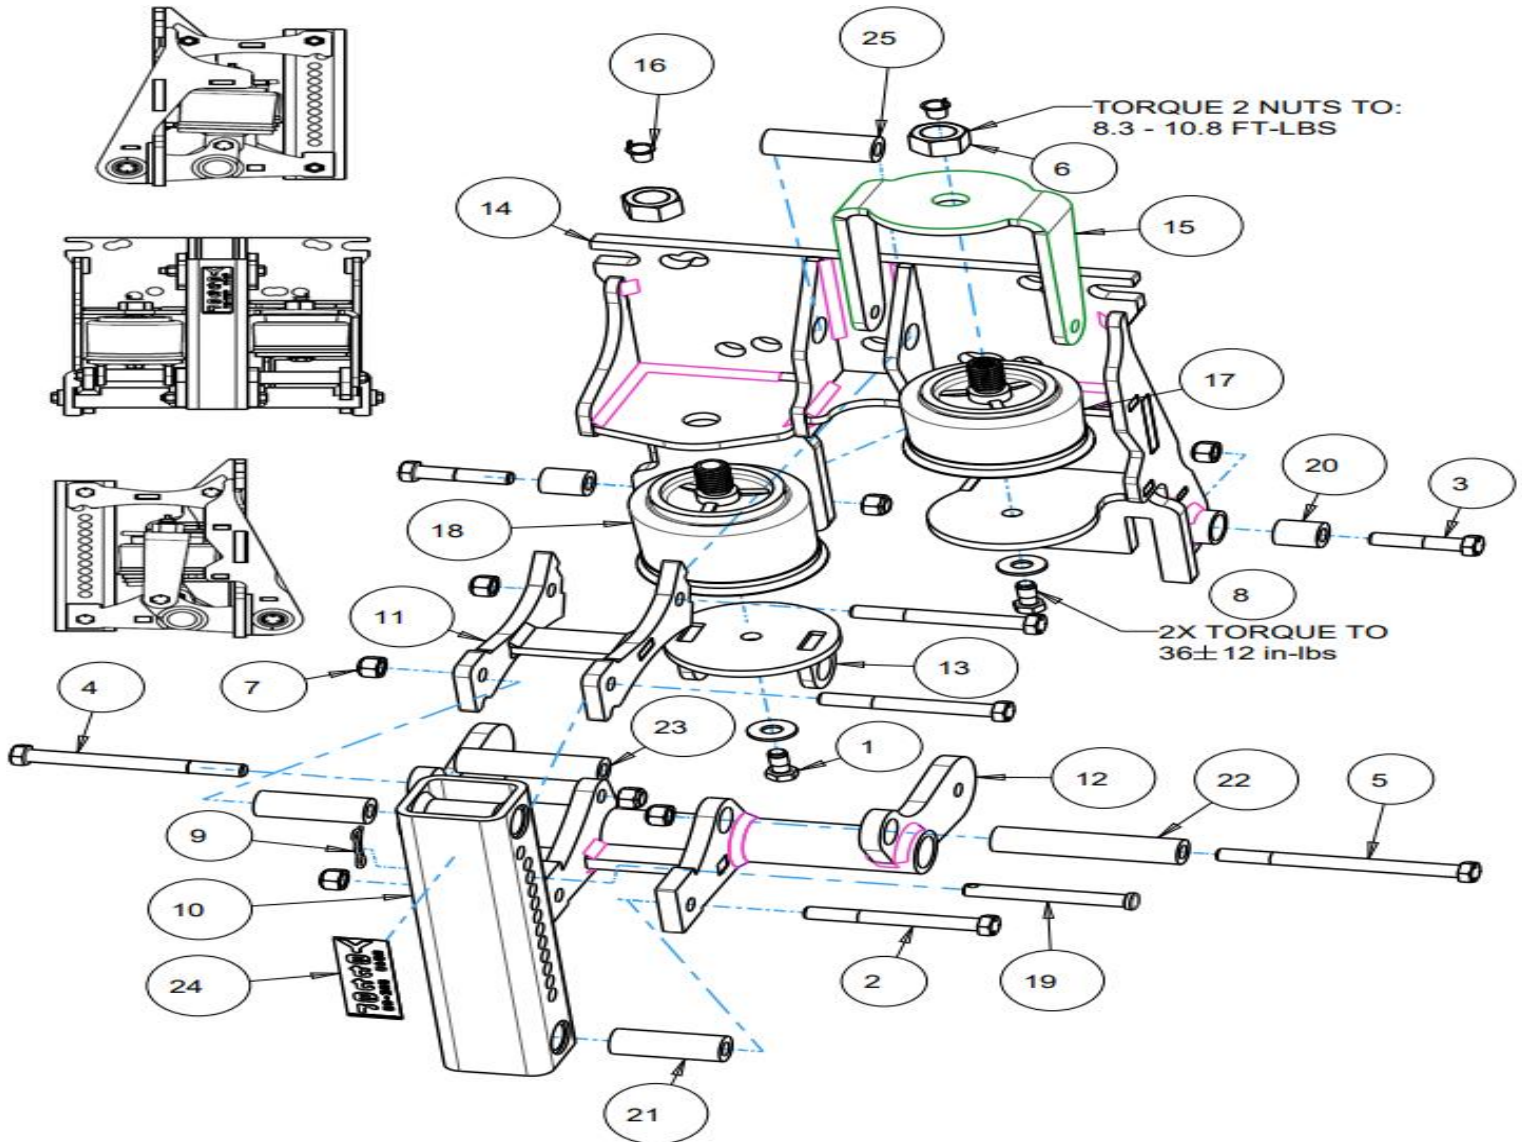


Item	Part Number	Description	Qty
1	2502-200	5/16 – 18 X 3/4 HHCS W/ THREAD LOCK GR 2 ZP	2
2	2502-233	3/8 – 16 X 3 1/4 HHCS GR 5 ZP	3
3	2502-245	3/8 – 16 X 1 1/4 HHCS GR 5 ZP	2
4	2502-254	3/8 – 16 X 4 HHCS GR 5 ZP	1
5	2502-260	3/8 – 16 X 4 1/2 HHCS GR 5 ZP	1
6	2520-455	5/8 – 11 HEX NUT ZP PATCH LOC GR 5	2
7	2520-601	3/8 – 16 HEX TOP LOCK GR C ZP	7
8	2526-201	5/16 STANDARD FLAT WASHER	2
9	2570-445	HAIRPIN COTTER, ZP	1
10	2940-210	ADJUSTMENT TUBE	1
11	2940-211A	UPPER LINK W.A.	1
12	2940-213	LOWER PARALLEL	1
13	2940-214	AIR BAG BRACKET W.A.	1
14	2940-223A	R.M. MOUNT PLATE W.A.	1
15	2940-309	UPFORCE TOP MOUNT	1
16	2940-340	AIR BAG CAP PLUG	2
17	2940-386	SHORTER AIR BAG	1
18	2940-388	LARGER AIR BAG	1
19	2940-399	PIN, ZP	1
20	2940-472	BUSHING	2
21	2940-473	BUSHING	2
22	2940-474	BUSHING	1
23	2940-478	.750" OD X .406" ID X 2.630" BUSHING	1
24	2940-590	YETTER VERTICAL DECAL	1
25	2940-677	PIVOT BUSHING	1

2940-001B & 2940-002B PARTS IDENTIFICATION

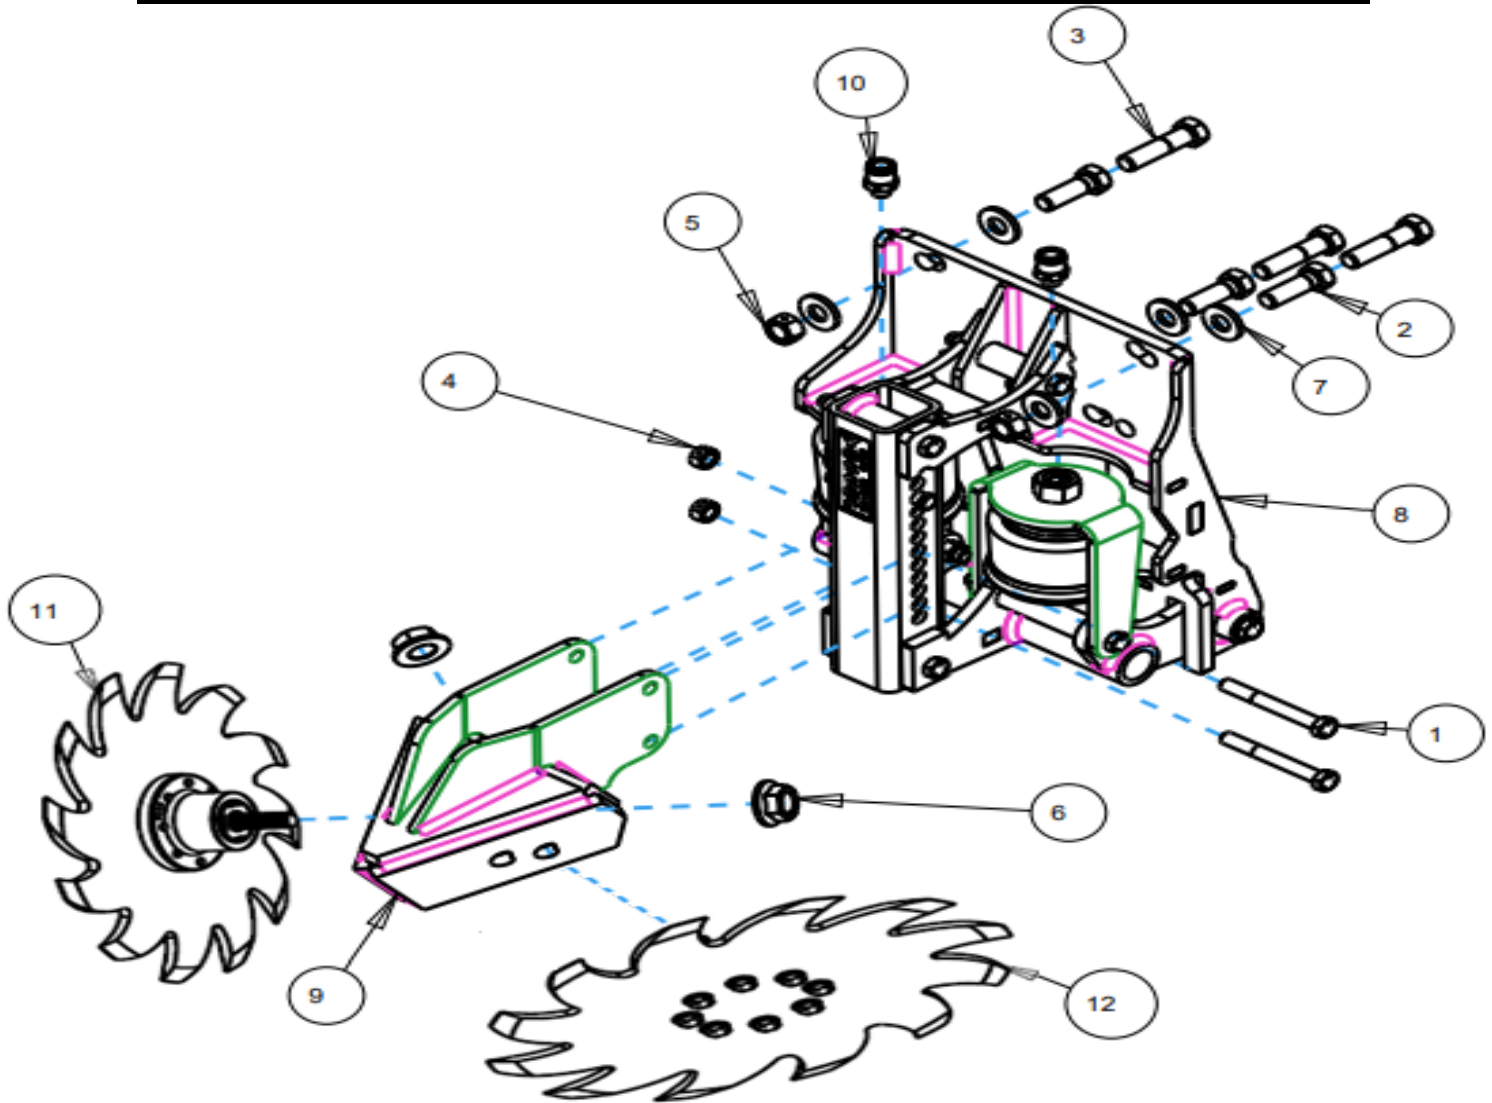


Item	Part Number	Description	Qty
1	2502-246	3/8-16 X 3 HHCS GR5 ZP	2
2	2502-294	1/2-13 X 1 1/2 HHCS GR5 ZP	3
3	2502-351	1/2-13 X 2 HHCS GR 5 ZP (MOUNTING TO AGCO 9000)	3
4	2520-255	3/8-16 LOCK HEX NUT, GR A, ZP	2
5	2520-357	1/2-13 LOCK HEX NUT, GR A, ZP	3
6	2520-465	5/8-11 SERRATED FLANGE HEX NUT, GR 8, ZP	2
7	2526-355	1/2 FLAT WASHER HARDENED ZP	6
8	2940-190A	PNEUMATIC R.M. MOUNT ASSEMBLY	1
9	2940-215	AIR ADJUST WIDE STEM W.A. (2940-001B)	1
	2940-216	AIR ADJUST NARROW STEM W.A. (2940-002B)	1
10	2940-380	3/8 PC X 1/8 BSPP O-RING STRAIGHT FITTING	2
11	2966-140	SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-BW	BEVEL WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-BW-FW	BEVEL WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-FW	SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-HD	HD SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-HD-FW	HD SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-ST	SHARKTOOTH ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-ST-FW	SHARKTOOTH ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-STF	SHARKTOOTH FINGER ASSEMBLY, RH, 3" D-BOLT	1
	2966-141-STF-PFW	SHARKTOOTH FINGER ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
12	2966-141	SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-BW	BEVEL WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-BW-FW	BEVEL WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-FW	SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-HD	HD SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-HD-FW	HD SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-ST	SHARKTOOTH ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-ST-FW	SHARKTOOTH ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-STF	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-STF-PFW	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
NA	2967-392	SHIELD, RM-PAINTED (BEVEL & TAPER TOOTH WHEELS ONLY)	2

2940-003B & 2940-004B PARTS IDENTIFICATION

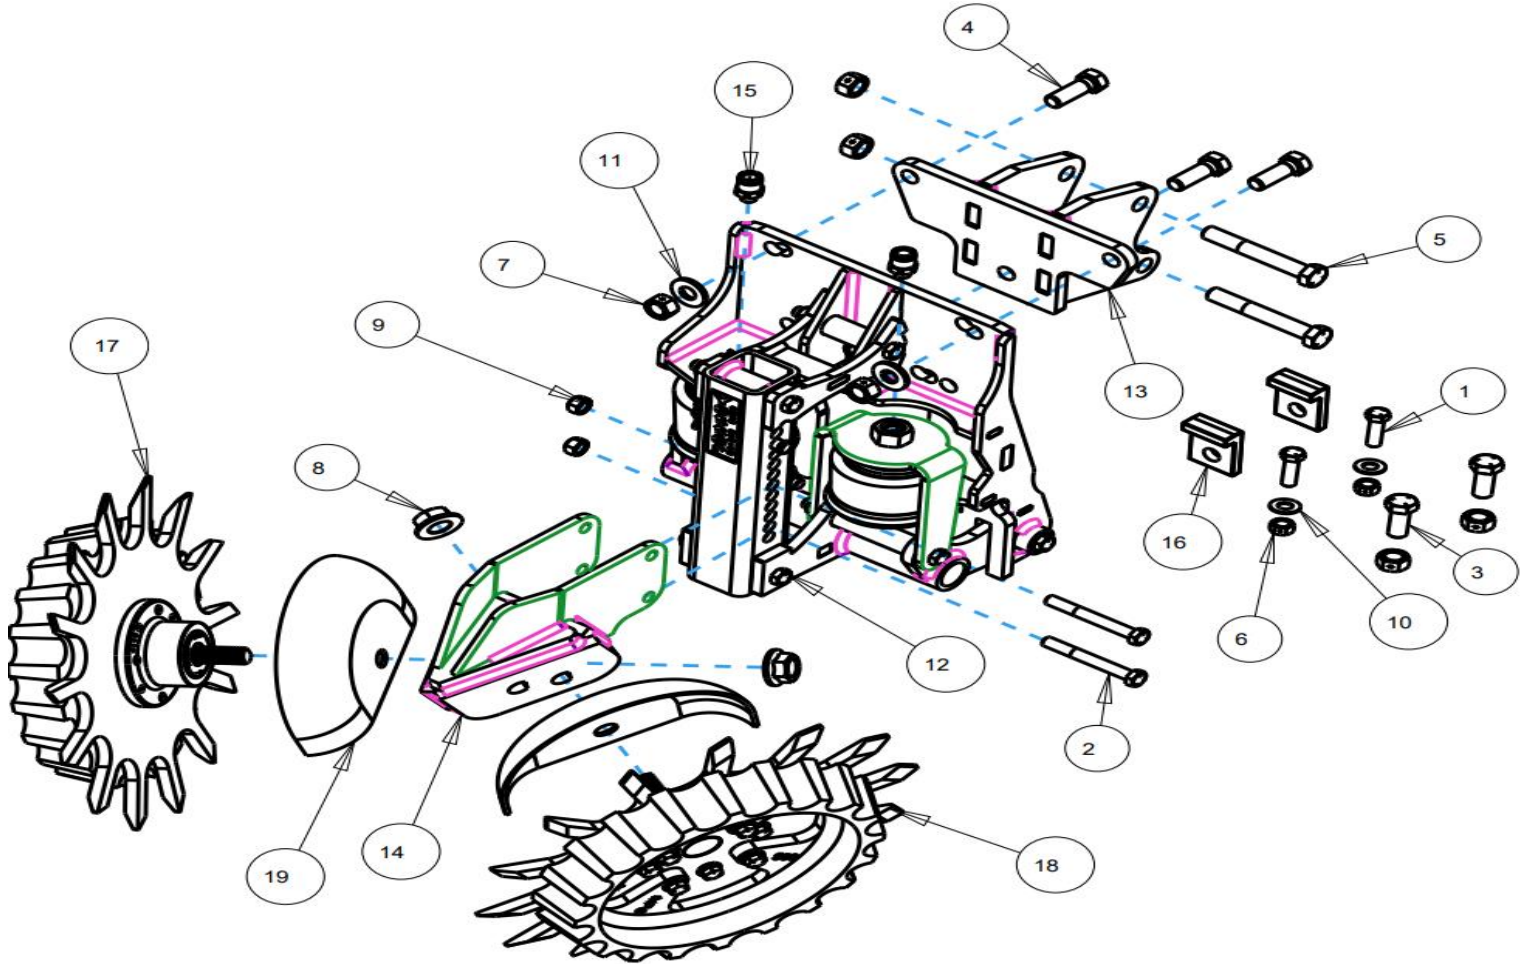

Item	Part Number	Description	Qty
1	2502-244	3/8 - 16 X 1 - 1/4 HHCS GR 5 ZP (FOR CYCLO STOP CASTING)	2
2	2502-246	3/8-16 X 3 HHCS GR5 ZP	2
3	2502-293	1/2-13 X 1 1/4 HHCS GR5	2
4	2502-294	1/2-13 X 1 1/2 HHCS GR5 ZP	3
5	2502-316	1/2-13 X 3-1/2 HHCS GR5 ZP	2
6	2520-255	3/8-16 LOCK HEX NUT. GR A, ZP (FOR CYCLO STOP CASTING)	2
7	2520-357	1/2-13 LOCK HEX NUT, GR A, ZP	7
8	2520-465	5/8-11 SERRATED FLANGE HEX NUT, GR 8, ZP	2
9	2520-601	3/8 - 16 HEX TOP LOCK NUT, GR C, ZP	2
10	2526-253	3/8 SAE FLAT WASHER ZP (FOR CYCLO STOP CASTING)	2
11	2526-355	1/2 FLAT WASHER HARDENED ZP	3
12	2940-190A	PNEUMATIC R.M. MOUNT ASSEMBLY	1
13	2940-209	CNH ADAPTOR BRACKET	1
	2966-293	CNH ADAPTOR BRACKET	1
14	2940-215	AIR ADJUST WIDE STEM W.A. (2940-003B)	1
	2940-216	AIR ADJUST NARROW STEM W.A. (2940-004B)	1
15	2940-380	3/8 PC X 1/8 BSPP O-RING STRAIGHT FITTING	2
16	2960-411	CYCLO STOP CASTING, LARGE HOLE	2
17	2966-140	SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-BW	BEVEL WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-BW-FW	BEVEL WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-FW	SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-HD	HD SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-HD-FW	HD SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-ST	SHARKTOOTH ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-ST-FW	SHARKTOOTH ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-STF	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT L	1
	2966-140-STF-PFW	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
18	2966-141	SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-BW	BEVEL WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-BW-FW	BEVEL WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-FW	SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-HD	HD SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-HD-FW	HD SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-ST	SHARKTOOTH ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-ST-FW	SHARKTOOTH ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-STF	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT L	1
	2966-141-STF-PFW	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
19	2967-392	SHIELD (BEVEL& TAPER TOOTH WHEELS ONLY)	2


2940-005B & 006B PARTS IDENTIFICATION

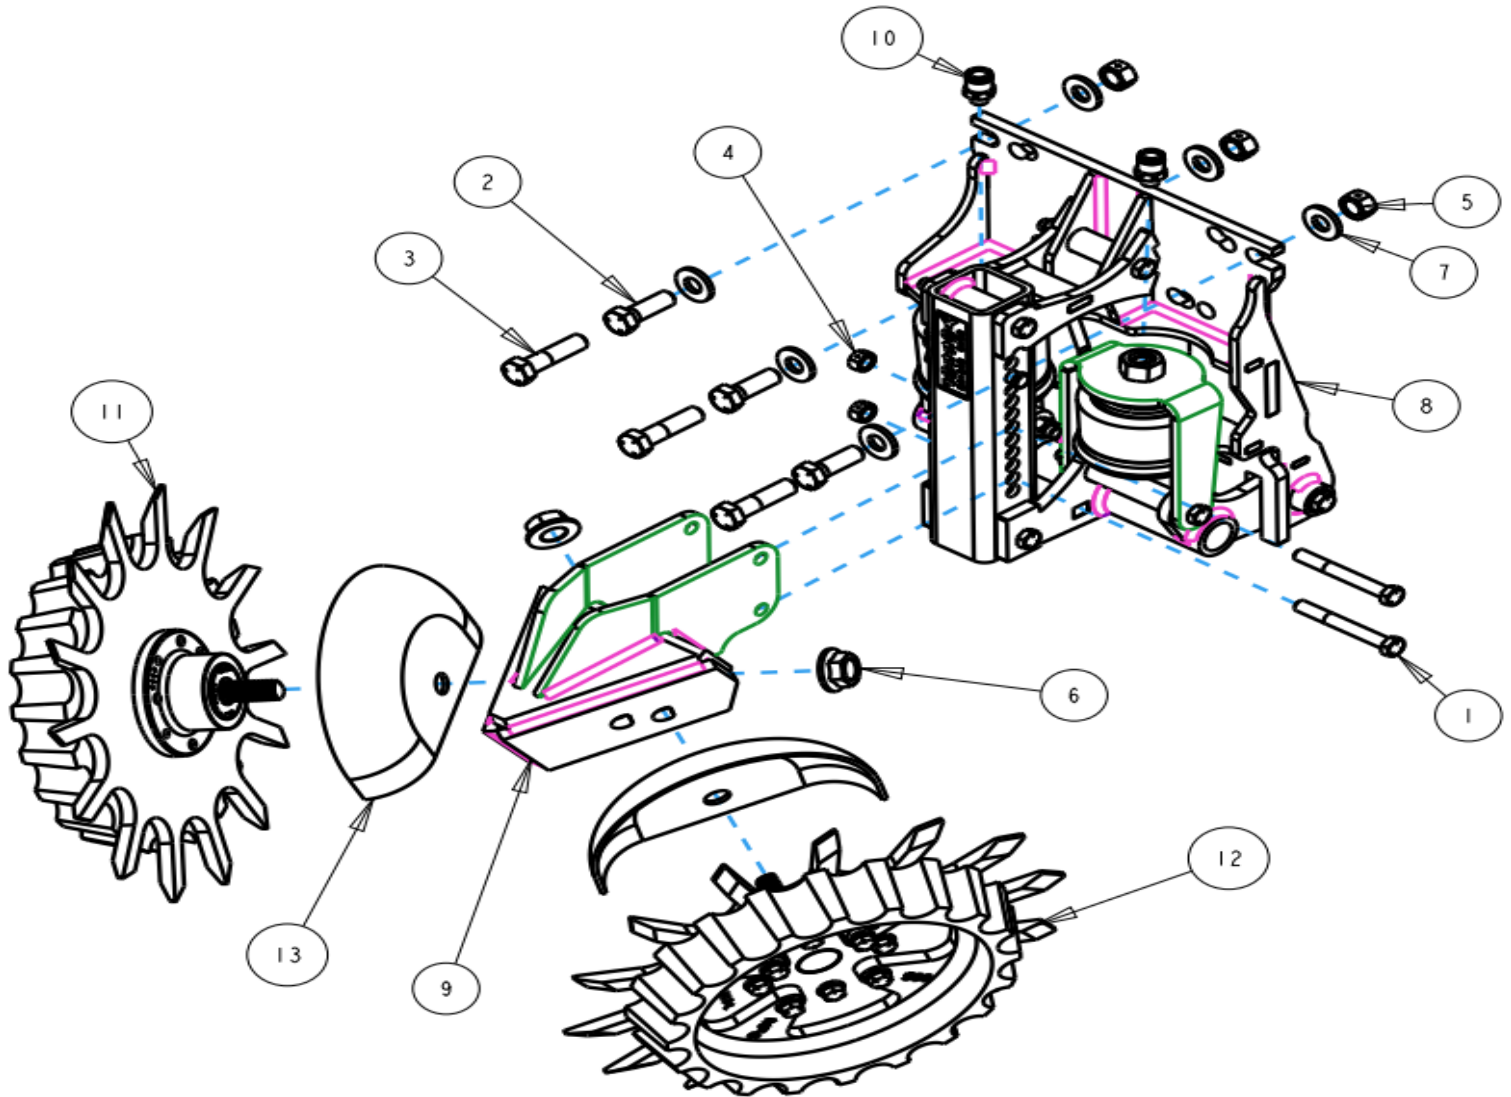

Item	Part Number	Description	Qty
1	2502-246	3/8-16 X 3 HHCS GR5 ZP	2
2	2502-294	1/2-13 X 1 1/2 HHCS GR5 ZP	3
3	2502-351	1/2-13 X 2 HHCS GR5 ZP	3
4	2520-255	3/8-16 LOCK NUT, GR A, ZP	2
5	2520-357	1/2-13 LOCK HEX NUT, GR A, ZP	3
6	2520-465	5/8-11 SERRATED FLANGE NUT, GR 8, ZP	2
7	2526-355	1/2 FLAT WASHER HARDENED ZP	6
8	2940-192A	PNEUMATIC R.M. MOUNT ASSEMBLY	1
9	2940-215	AIR ADJUST WIDE STEM W.A. (2940-005B)	1
	2940-216	AIR ADJUST NARROW STEM W.A. (2940-006B)	1
10	2940-380	3/8 PC X 1/8 BSPP O-RING STRAIGHT FITTING	2
11	2966-140	SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-BW	BEVEL WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-BW-FW	BEVEL WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-FW	SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-HD	HD SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-HD-FW	HD SPOKE WHEEL ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-ST	SHARKTOOTH ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-ST-FW	SHARKTOOTH ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-140-STF	SHARKTOOTH FINGER ASSEMBLY, RH, 3" D-BOLT	1
	2966-140-STF-PFW	SHARKTOOTH FINGER ASSEMBLY, RH, 3" D-BOLT WITH FLOATER WHEEL	1
12	2966-141	SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-BW	BEVEL WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-BW-FW	BEVEL WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-FW	SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-HD	HD SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-HD-FW	HD SPOKE WHEEL ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-ST	SHARKTOOTH ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-ST-FW	SHARKTOOTH ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
	2966-141-STF	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT	1
	2966-141-STF-PFW	SHARKTOOTH FINGER ASSEMBLY, LH, 3" D-BOLT WITH FLOATER WHEEL	1
13	2967-392	SHIELD (BEVEL & TAPER TOOTH WHEEL ONLY)	2

PARTS IDENTIFICATION

MANUFACTURED

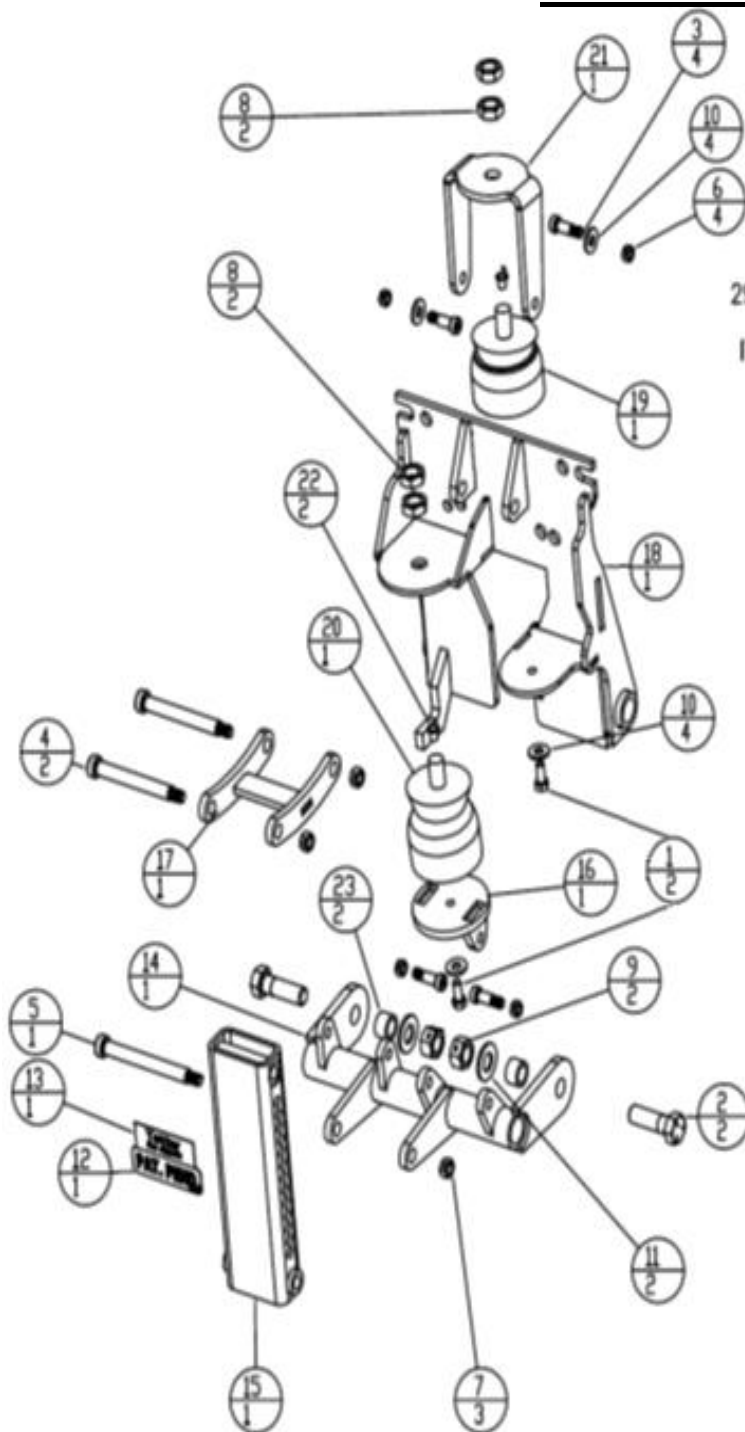

2940-140 RESIDUE MANAGER AIR BAG/MOUNT BRACKET ASSEMBLY

ITEM	QTY	PART NO.	DESCRIPTION
1	2	2502-200	5/16-18 X 3/4 HHCS GR 2 ZP
2	2	2502-391	5/8-11 X 2 HHCS GR 5 ZP
3	4	2510-310	3/8 X 3/4 SHOULDER BOLT ALLOY
4	2	2510-320	1/2 X 3-3/4 SHOULDER BOLT ALLOY
5	1	2510-321	1/2 X 4-1/4 SHOULDER BOLT ALLOY
6	4	2520-205	5/16-18 LOCK HEX NUT ZP
7	3	2520-255	3/8-16 LOCK HEX NUT ZP
8	4	2520-454	5/8-11 BRASS JAM NUT
9	2	2520-459	5/8-11 LOCK HEX NUT ZP
10	4	2526-201	5/16STANDARD FLATWASHER ZP
11	2	2526-453	5/8 SAE FLATWASHER ZP
12	1	2565-071	PATENT PENDING DECAL
13	1	2565-179	YETTER DECAL, 1 X 3
14	1	2940-202	SHORT LOWER RACK W.A.
15	1	2940-203	STEM TUE W.A.
16	1	2940-204	AIR BAG LOWER W.A.
17	1	2940-205	UPPER LINK W.A.
18	1	2940-206	UNIVERSAL MOUNT PLATE W.A.
19	1	2940-306	FPE SK-37-6" SMALLER AIR BAG
20	1	2940-308	FPE SK-37-8 INCH LARGER AIR BAG
21	1	2940-309	UPFORCE TOP MOUNT
22	2	2940-340	CAP PLUG - 171201HB L-2 PE-LD01R
23	2	6000-335	9/16" BUSHING

02/2013-09/2013

MOST PARTS ARE UNAVAILABLE, ORDER PARTS BELOW TO UPGRADE:


FOR JD 7200/1700, AGCO 9000, HORSCH:
2940-001A-LB (WIDE ROW) OR 2940-002A-LB (NARROW ROW)

FOR CNH: 2940-003A-LB (WIDE ROW) OR 2940-004A-LB (NARROW ROW)


FOR AGCO 6000/8000, KINZE, & JD 7000: 2940-005A-LB (WIDE ROW) & 2940-006A-LB (NARROW ROW)

2940-126A PARTS IDENTIFICATION

MANUFACTURED 07/17 – PRESENT

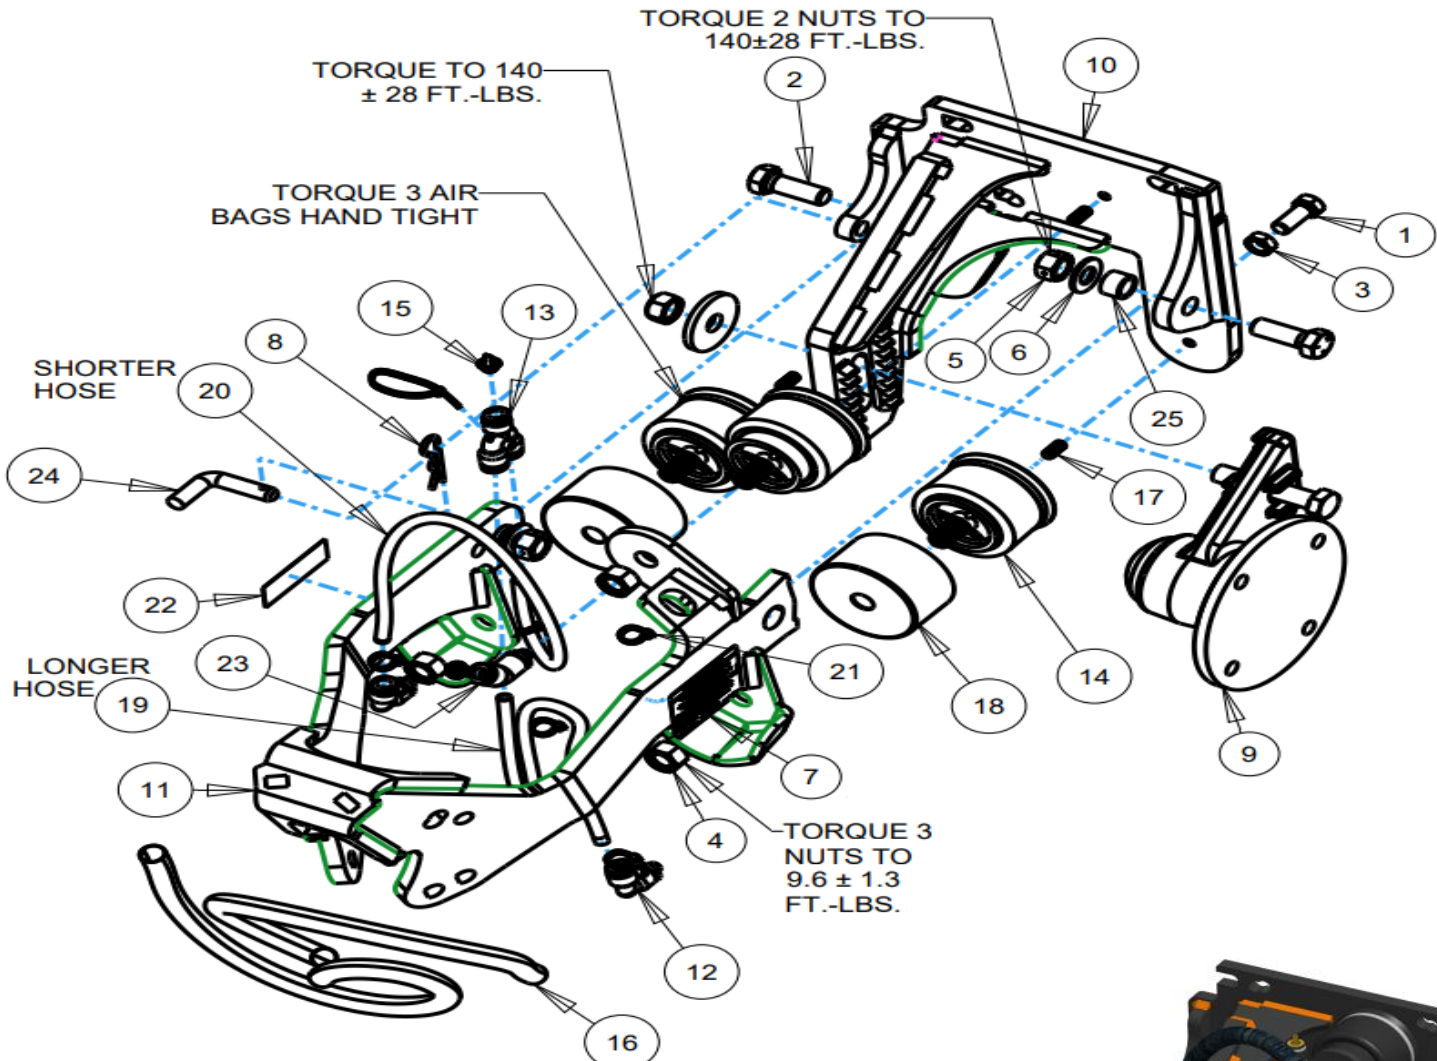


Item	Part #	Description	Qty
1	2502-293	½-13 X 1 ¼ HHCS GR 5 ZP	1
2	2502-331	5/8-11 X 1 ¼ HHCS GR 5 ZP	2
3	2520-356	½-13 JAM HEX NUT ZP	1
4	2520-455	5/8-11 HEX NUT WITH PATCH LOC, GR 5 ZP	3
5	2520-459	5/8-11 HEX LOCK NUT ZP	2
6	2526-454	5/8 SAE FLATWASHER HARDENED ZP	2
7	2565-505	FRAME HEIGHT DECAL	1
8	2570-446	.125 HAIRPIN COTTER ZP	1
9	2940-121	ASSEMBLY, COULTER HUB	1
10	2940-230	FACEPLATE W.A. JD 1700,7200, AGCO 9000	1
11	2940-231	COMBO ARM W.A.	1
12	2940-381	3/8 PC X 1/8 BSPP O-RING 90 DEGREE	2
13	2940-383	3/8 PC WYE FITTING	1
14	2940-386	SHORTER AIR BAG	3
15	2940-389	RUBBER AIR BAG PLUG	2
16	2940-508	HOSE SLEEVE	2
17	2940-560	SET SCREW, .313-18 X .750 W/ THREAD LOCK	3
18	2940-569	AIR BAG SHIELD	2
19	2940-571	HOSE, LH COMBO 2940 AIR SYSTEMS	1
20	2940-572	HOSE, RH COMBO 2940 AIR SYSTEMS	1
21	2940-577	ZIP TIE	5
22	2940-589	YETTER HORIZONTAL DECAL 1" X 3"	1
23	2940-609	3/8 PC X 1/8 BSPP O-RING	1
24	2967-613	TITAN PIN, JD ZP	1
25	6000-335	9/16" BUSHING	2
NOT SHOWN	2967-630	SCRAPER, RH (SOLD AS OPTION 2024-PRESENT)	1
NOT SHOWN	2967-631	SCRAPER, LH (SOLD AS OPTION 2024-PRESENT)	1

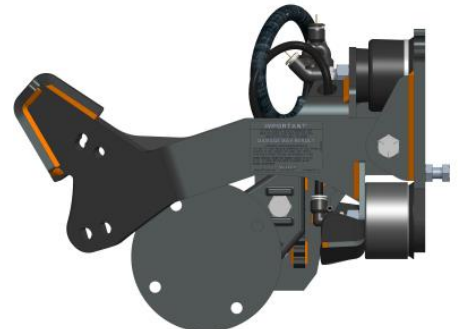


2940-130A PARTS IDENTIFICATION

MANUFACTURED 07/17 – PRESENT

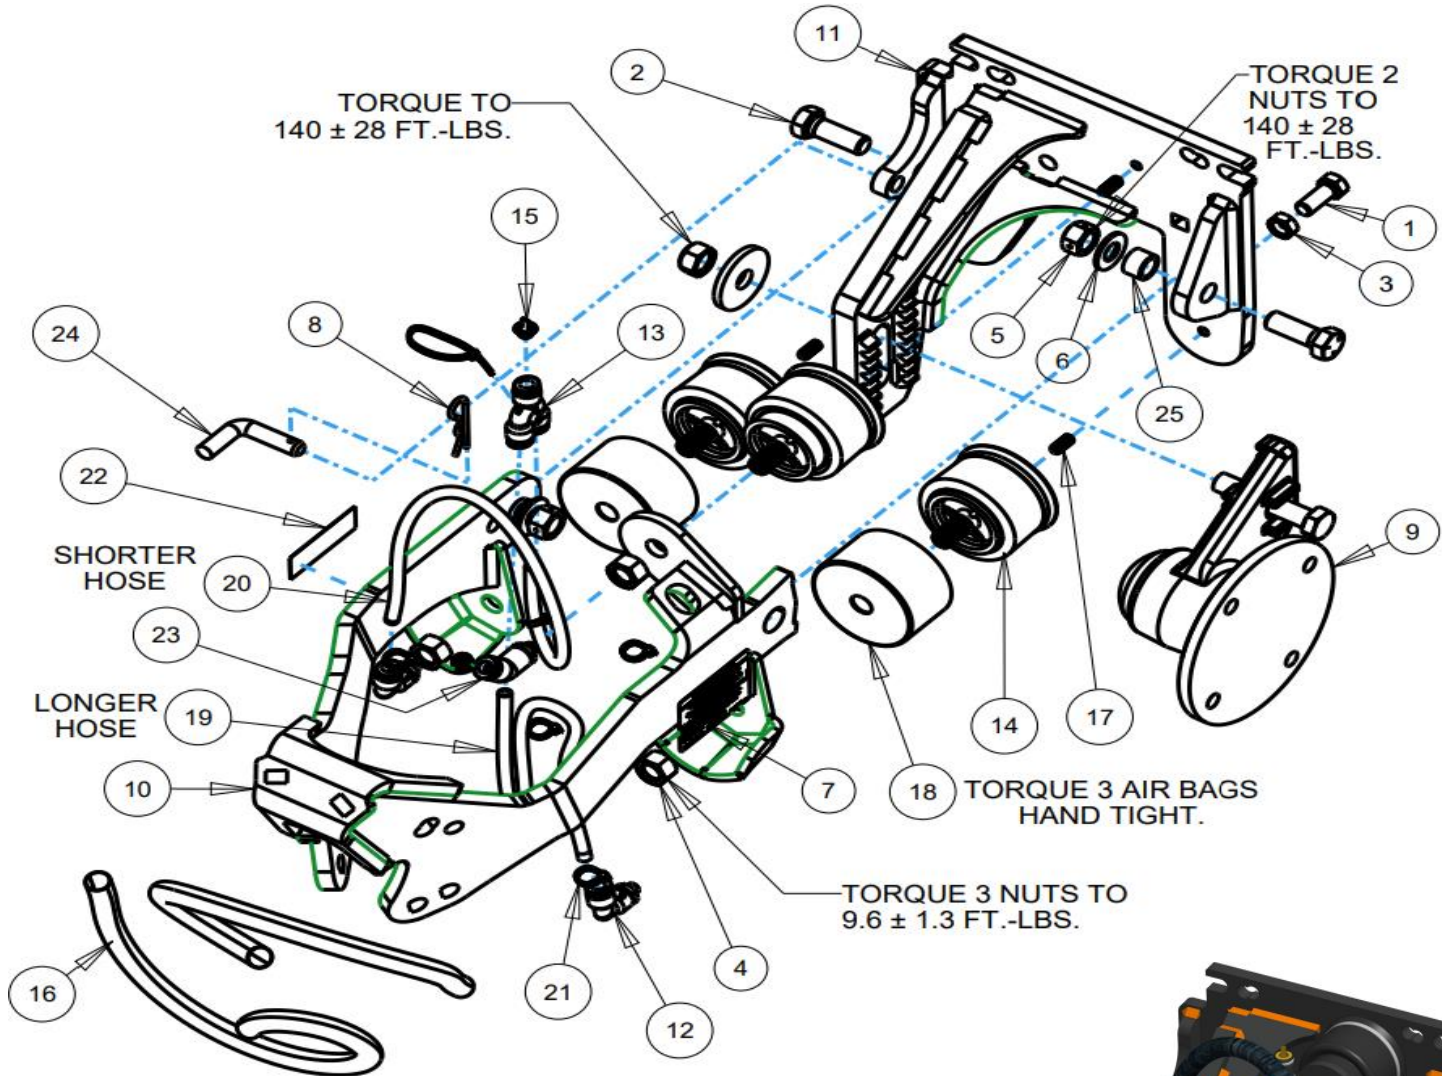


Item	Part #	Description	Qty
1	2502-293	½-13 X 1 ¼ HHCS GR 5 ZP	1
2	2502-331	5/8-11 X 1 ¾ HHCS GR 5 ZP	2
3	2520-356	½-13 JAM HEX NUT ZP	1
4	2520-455	5/8-11 HEX NUT WITH PATCH LOC, GR 5 ZP	3
5	2520-459	5/8-11 HEX LOCK NUT ZP	2
6	2526-454	5/8 SAE FLATWASHER HARDENED ZP	2
7	2565-505	FRAME HEIGHT DECAL	1
8	2570-446	.125 HAIRPIN COTTER ZP	1
9	2940-121	ASSEMBLY, COULTER HUB	1
10	2940-231	COMBO ARM W.A.	1
11	2940-232	FACEPLATE W.A. AGCO 6000 & 8000, JD 7000, KINZE	1
12	2940-381	3/8 PC X 1/8 BSPP O-RING 90 DEGREE	2
13	2940-383	3/8 PC WYE FITTING	1
14	2940-386	SHORTER AIR BAG	3
15	2940-389	RUBBER AIR BAG PLUG	2
16	2940-508	HOSE SLEEVE	2
17	2940-560	SET SCREW, .313-18 X .750 W/ THREAD LOCK	3
18	2940-569	AIR BAG SHIELD	2
19	2940-571	HOSE, LH COMBO 2940 AIR SYSTEMS	1
20	2940-572	HOSE, RH COMBO 2940 AIR SYSTEMS	1
21	2940-577	ZIP TIE	5
22	2940-589	YETTER HORIZONTAL DECAL 1" X 3"	1
23	2940-609	3/8 PC X 1/8 BSPP O-RING	1
24	2967-613	TITAN PIN, JD ZP	1
25	6000-335	9/16" BUSHING	2
NOT SHOWN	2967-630	SCRAPER, RH (SOLD AS OPTION 2024-PRESENT)	1
NOT SHOWN	2967-631	SCRAPER, LH (SOLD AS OPTION 2024-PRESENT)	1

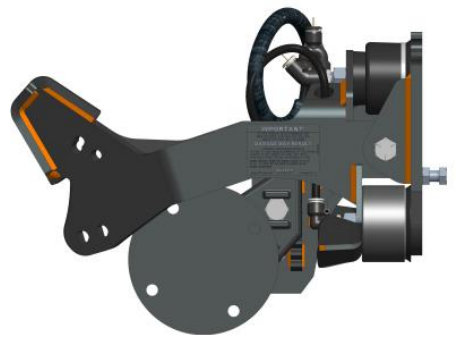


2940-007C & 2940-010C PARTS IDENTIFICATION

MANUFACTURED 07/17 – PRESENT

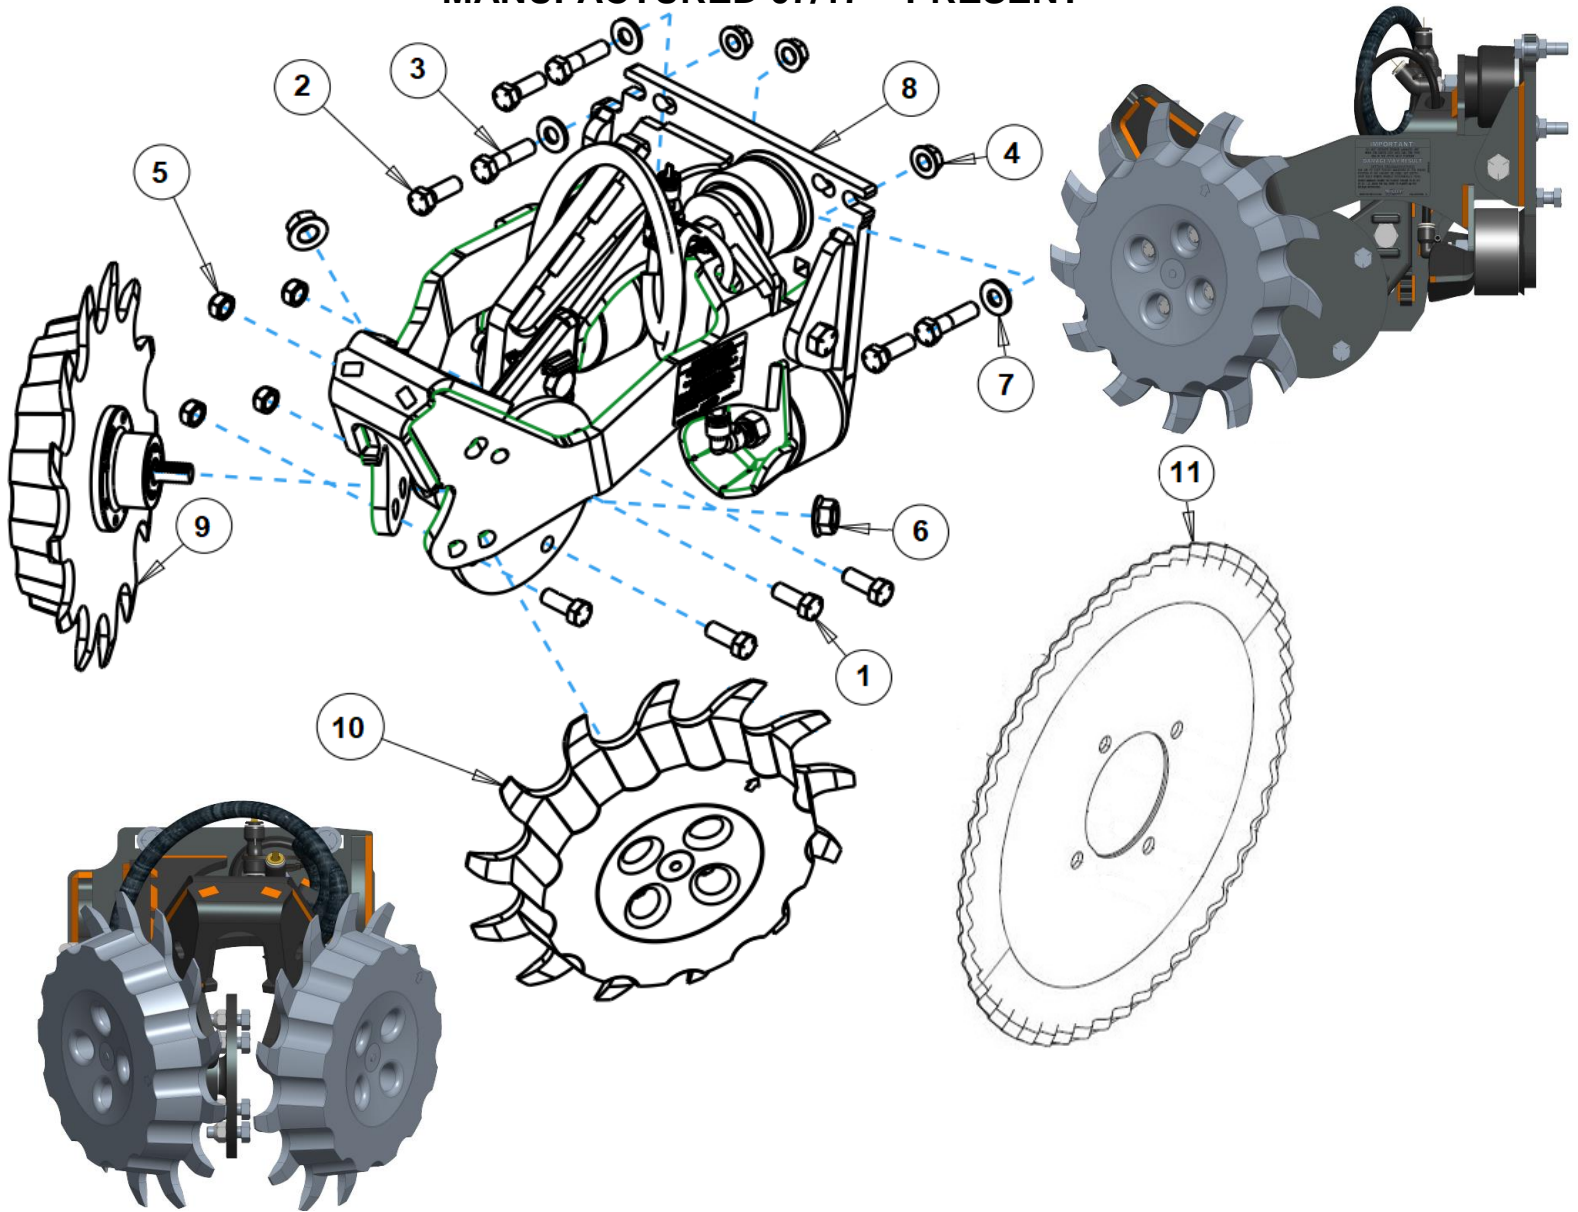


Item	Part Number	Description	Qty
1	2502-293	½-13 X 1 ¼ HHCS GR 5 ZP	4
2	2502-294	½-13 X 1 ½ HHCS GR 5 ZP	3
3	2502-351	½-13 X 2 HHCS GR 5 ZP (FOR MOUNTING TO AGCO 9000)	3
4	2520-361	½-13 FLANGE WHIZLOCK HEX NUT GR 5 ZP	3
5	2520-362	½-13 HEX LOCK NUT GR C ZP	4
6	2520-465	5/8-11 WHIZLOCK HEX NUT GR 8 ZP	2
7	2526-355	½ FLAT WASHER HARDENED ZP	3
8	2940-126A	PNEUMATIC COMBO SUBASSEMBLY FOR JD 1700 & 7200, AGCO 9000	1
	2940-130A	PNEUMATIC COMBO SUBASSEMBLY FOR JD 7000, AGCO 6000/8000, KINZE	1
9	2966-116-FW	SPOKE WHEEL ASSEMBLY, RH, 2 3/4" D-BOLT WITH FLOATER WHEEL	1
	2966-116-ST-FW	SHARK TOOTH WHEEL ASSEMBLY, RH, 2 3/4" D-BOLT WITH FLOATER WHEEL	1
	2966-116-ST-PFW	SHARK TOOTH WHEEL ASSEMBLY, RH, 2 3/4" D-BOLT WITH POLY FLOATER WHEEL	1
	2966-116-BW-FW	BEVEL WHEEL ASSEMBLY, RH, 2 3/4" D-BOLT WITH FLOATER WHEEL	1
	2966-116-STF-PFW	SHARKTOOTH FINGER WHEEL ASSEMBLY, RH, 2 3/4" D-BOLT WITH POLY FLOATER WHEEL	1
10	2966-117-FW	SPOKE WHEEL ASSEMBLY, LH, 2 3/4" D-BOLT WITH FLOATER WHEEL	1
	2966-117-ST-FW	SHARK TOOTH WHEEL ASSEMBLY, LH, 2 3/4" D-BOLT WITH FLOATER WHEEL	1
	2966-117-ST-PFW	SHARK TOOTH WHEEL ASSEMBLY, RH, 2 3/4" D-BOLT WITH POLY FLOATER WHEEL	1
	2966-117-BW-FW	BEVEL WHEEL ASSEMBLY, LH, 2 3/4" D-BOLT WITH FLOATER WHEEL	1
	2966-117-STF-PFW	SHARKTOOTH FINGER WHEEL ASSEMBLY, LH, 2 3/4" D-BOLT WITH POLY FLOATER WHEEL	1
11	2571-161	16 INCH RIPPLE BLADE OPTION (ORDERED SEPARATELY)	1
	2571-162	13 WAVE 16INCH BLADE OPTION (ORDERED SEPARATELY)	1
	2571-172	25 WAVE 16INCH BLADE OPTION (ORDERED SEPARATELY)	1



PARTS IDENTIFICATION (2021-NEWER HUB)

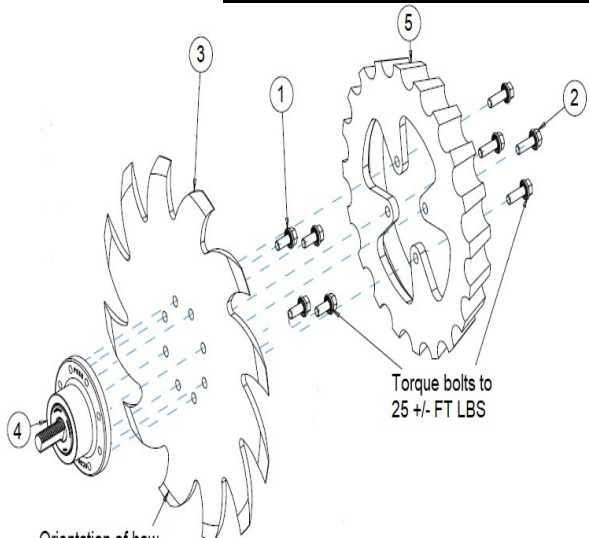

Item	Part #	Description	Qty
1	2502-220	5/16-18 X ¾ HHFS GR5 ZP	4
2	2502-221	5/16-18 X 1 HHFS GR5 ZP	4
3	2571-286	SHARKTOOTH WHEEL, 8 BOLT	1
4	2965-500	HUB ASSEMBLY, 1.406 SPINDLE	1
5	2967-560	FLOATER WHEEL	1

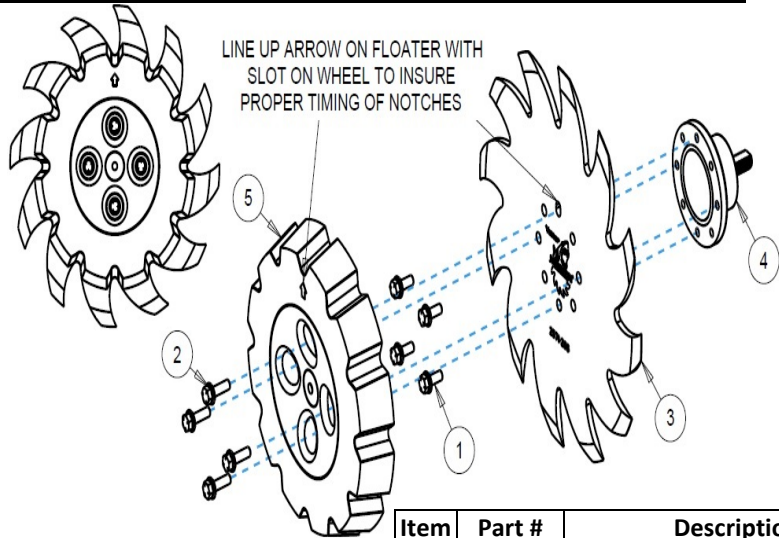


Item	Part #	Description	Qty
1	2502-220	5/16-18 X ¾ HHFS GR5 ZP	4
2	2502-221	5/16-18 X 1 HHFS GR5 ZP	4
3	2571-286	SHARKTOOTH WHEEL, 8 BOLT	1
4	2965-500	HUB ASSEMBLY, 1.406 SPINDLE	1
5	2967-957	ST TIMED FLOATER WHEEL	1

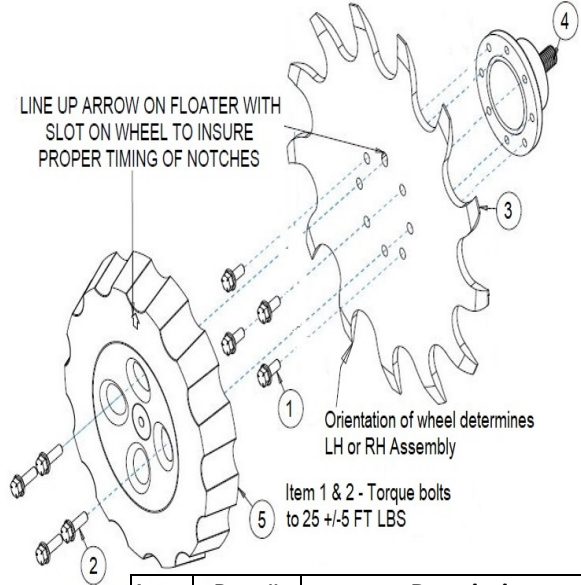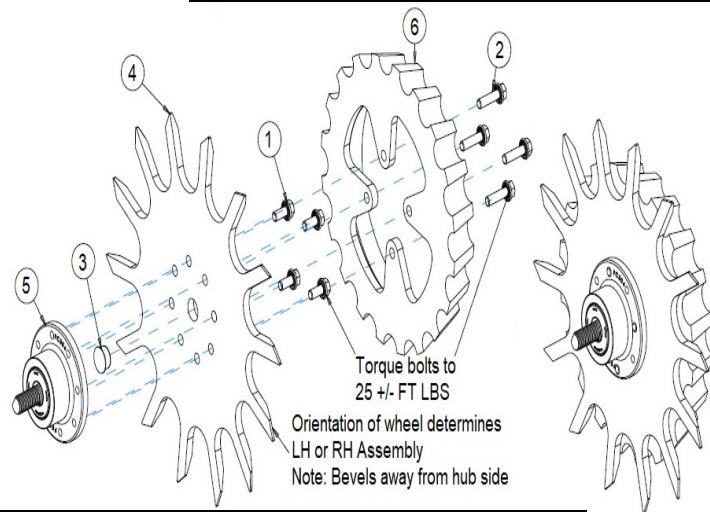

Item	Part #	Description	Qty
1	2502-220	5/16-18 X ¾ HHFS GR5 ZP	4
2	2502-221	5/16-18 X 1 HHFS GR5 ZP	4
3	2571-600	SHARKTOOTH FINGER WHEEL	1
4	2965-500	HUB ASSEMBLY, 1.406 SPINDLE	1
5	2967-955	STF TIMED FLOATER WHEEL	1

Item	Part #	Description	Qty
1	2502-220	5/16-18 X ¾ HHFS GR5 ZP	4
2	2502-222	5/16-18 X 1 ¼ HHFS GR5 ZP	4
3	2571-286	SHARKTOOTH WHEEL, 8 BOLT	1
4	2571-287-R	13" BEVEL WHEEL, 8 BOLT, RH	1
	2571-287-L	13" BEVEL WHEEL, 8 BOLT, LH	1
5	2965-500	HUB ASSEMBLY, 1.406 SPINDLE	1
6	2967-560	FLOATER WHEEL	1

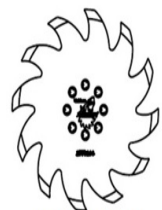


SHARKTOOTH
WHEEL ASSEMBLY
RH - 2966-140-ST (SHOWN)
LH - 2966-141-ST



SHARKTOOTH WITH FLOATER
WHEEL ASSEMBLY
RH - 2966-140-ST-FW (SHOWN)
LH - 2966-141-ST-FW




SHARKTOOTH WITH POLY
FLOATER WHEEL ASSEMBLY
RH - 2966-140-ST-PFW (SHOWN)
LH - 2966-141-ST-PFW

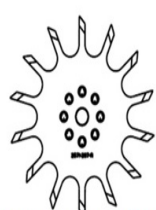

BEVEL WHEEL ASSEMBLY
RH - 2966-140-BW (SHOWN)
LH - 2966-141-BW



BEVEL WHEEL W/ FLOATER
WHEEL ASSEMBLY
RH - 2966-140-BW-FW (SHOWN)
LH - 2966-141-BW-FW

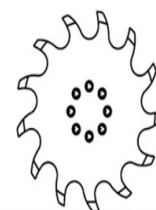

SHARKTOOTH FINGER
WHEEL ASSEMBLY
RH - 2966-140-STF (SHOWN)
LH - 2966-140-STF




SHARKTOOTH FINGER W/
FLOATER WHEEL ASSEMBLY
RH - 2966-140-STF-FW (SHOWN)
LH - 2966-141-STF-FW

PARTS IDENTIFICATION

(OLD 4 BOLT WHEELS USING NEW HUB/BEARING)

FIELD SERVICE KITS

2965-119 - SERVICE KIT FOR 2570-740-2.812 D-BOLT
 2965-120 - SERVICE KIT FOR 2570-742-3.812 D-BOLT
 2965-121 - SERVICE KIT FOR 2570-766-2.562 D-BOLT

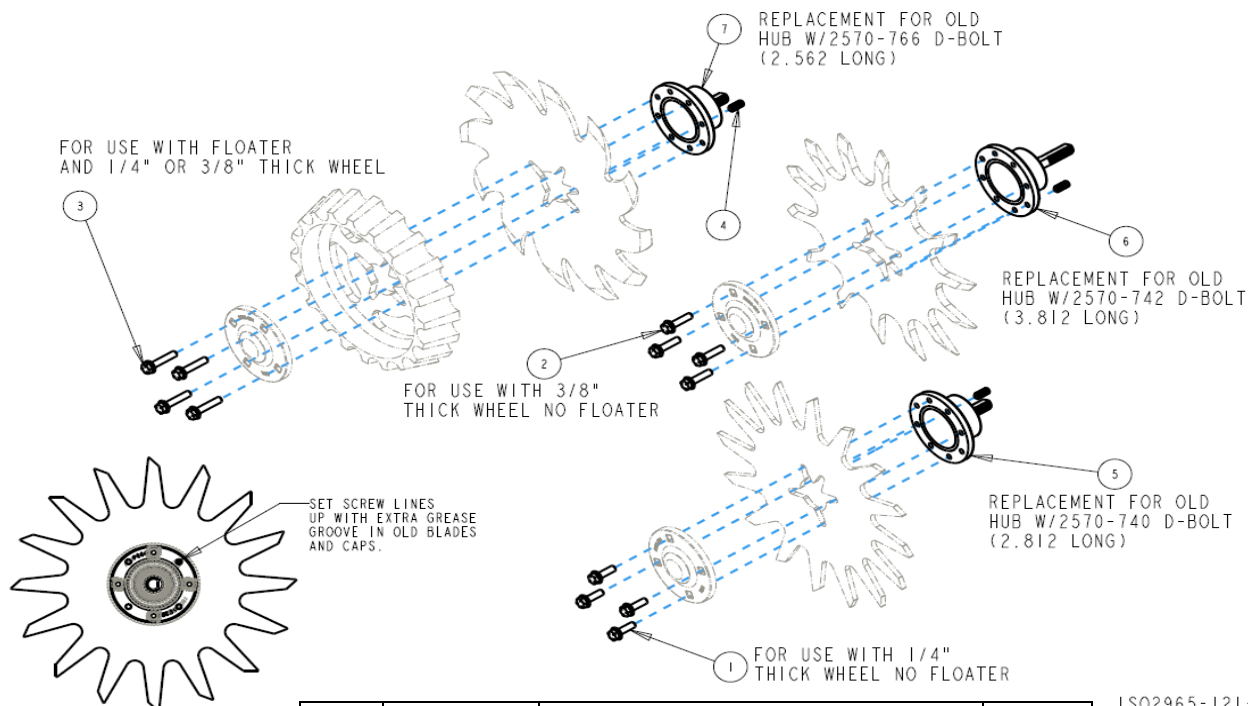


ITEM	PART NO	DESCRIPTION	QTY
1	2502-221	5/16-18 X 1 HHFS GRADE 5	4
2	2502-222	5/16-18 X 1-1/4 HHFS GRADE 5	4
3	2502-225	5/16-18 X 1-1/2 HHFS GRADE 5	4
4	2940-560	SET SCREW	1
5	2965-500	HUB ASSEMBLY 1.406 SPINDLE	1
6	2965-501	HUB ASSEMBLY 2.406 SPINDLE	1
7	2965-502	HUB ASSEMBLY 1.157 SPINDLE	1

ISO2965-121-2

2020-OLDER WHEEL & HUB/BEARING ASSEMBLY


ORIENTATION OF TOOTHED WHEEL DETERMINES LH/RH

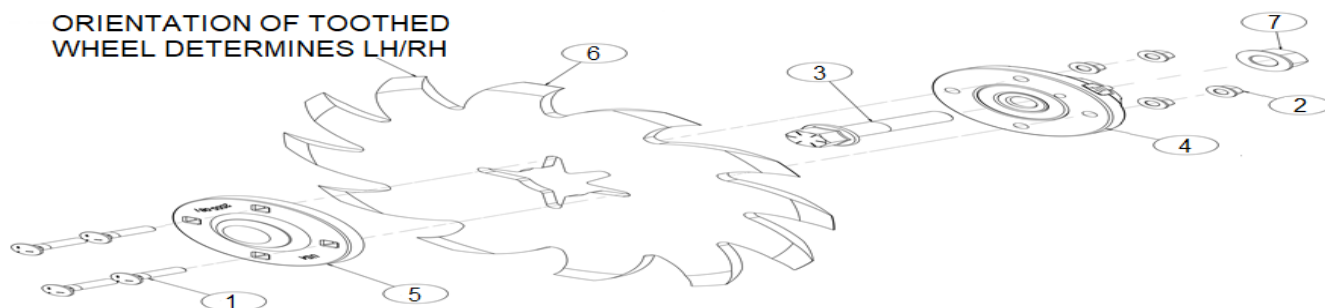

ITEM	PART NO	DESCRIPTION	QTY
1	2505-207	5/16-18 X 1-1/4 CARRIAGE HEAD BOLT GRADE 5	4
2	2520-206	5/16-18 FLANGE LOCK NUT	4
3	2570-740	D-BOLT FLANGE HEAD 5/8-11 X 2.812 GRADE 8	1
4	2965-128	HUB/BEARING ASSEMBLY	1
	2550-069	SEAL	1
	2570-594	BEARING	1
	2570-715	INSERT	1
	2965-351	HUB	1
	2533-110	GREASE FITTING	1
5	2965-352	HUB CAP	1
6	2967-602	SHARK TOOTH WHEEL	1
7	2520-465	5/8-11 FLANGE LOCK NUT GRADE 8	1


PARTS IDENTIFICATION

2940-116
COULTER SUBASSEMBLY FOR
JD 7000, AGCO 6000, 8000, KINZE 2000, 3000, 4900

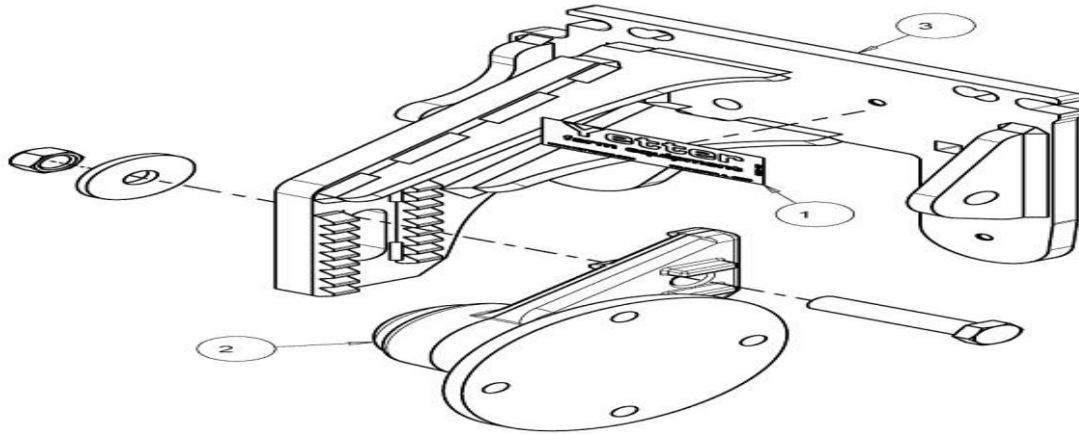


Item	Part Number	Description	Qty
1	2565-162	YETTER DECAL, 1 1/2 X 4 1/2	1
2	2940-121	ASSEMBLY, COULTER HUB	1
3	2940-232	FACEPLATE W.A., JD 7000, AGCO 6000 & 8000, KINZE	1

2940-116
COULTER SUBASSEMBLY FOR
JD 1700, 7200, AGCO 9000

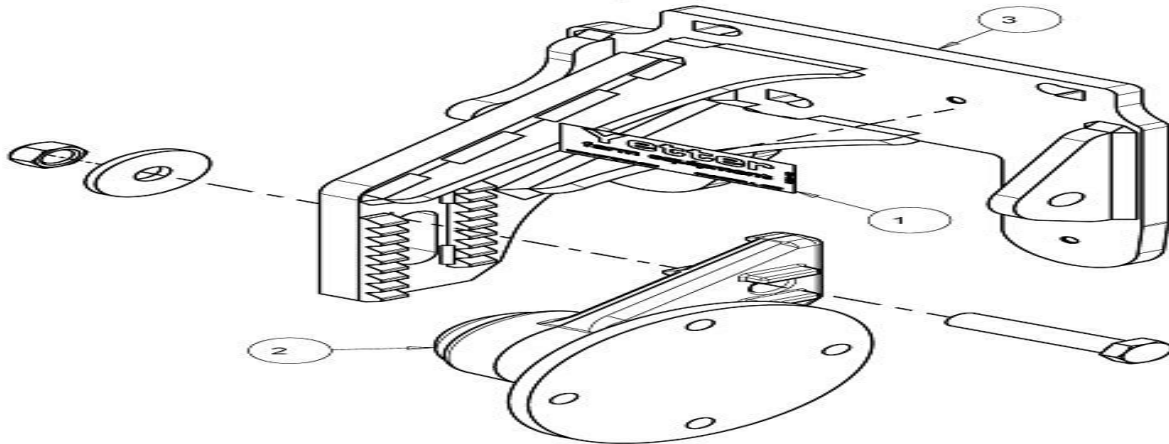

Item	Part Number	Description	Qty
1	2565-162	YETTER DECAL, 1 1/2 X 4 1/2	1
2	2940-121	ASSEMBLY, COULTER HUB	1
3	2940-230	FACEPLATE W.A., JD 1700 & 7200, AGCO 9000	1


2940-121 Coulter Hub

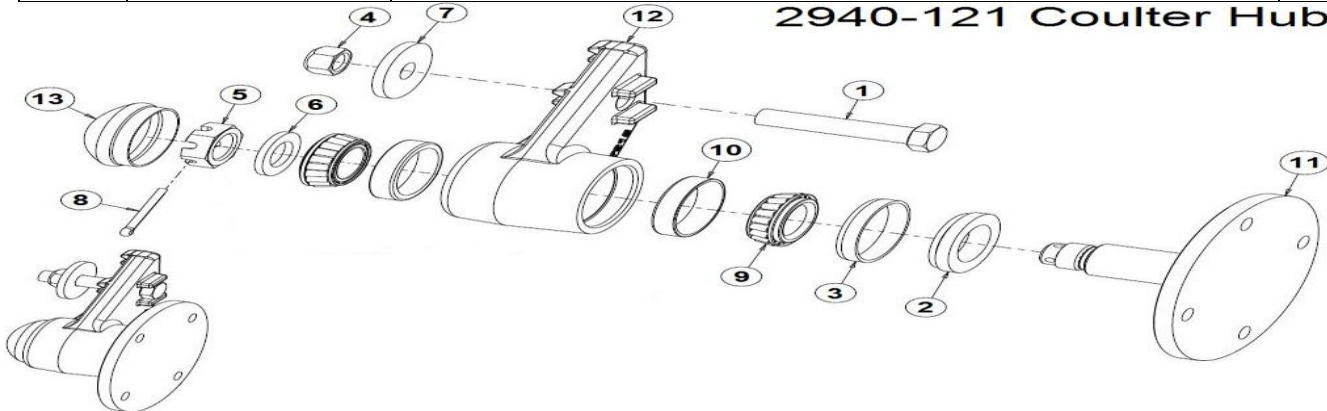

Item	Part Number	Description	Qty
1	2502-383	M16 X 2 X 80 HEX HEAD BOLT	1
2	2515-839	SEAL, COULTER	1
3	2515-840	SEAL, WHELL BEARING CUP	1
4	2520-475	M16 X 2 - 6H LOCK NUT CLASS 10.9 ZP	1
5	2520-569	1" - 14 CASTLE NUT	1
6	2526-581	M26 X 44 X 4 ROUND WASHER ZN	1
7	2526-583	SPECIAL FLAT WASHER	1
8	2531-177	M5 X 40 COTTER PIN ZP	1
9	2550-027-D	CONE, LM67010, KOYO	2
10	2550-029-D	CUP, LM67010, KOYO	2
11	2940-578	COULTER SPINDLE	1
12	2940-579	MACHINED HUB CASTING	1
13	6010-440	HUB CAP BLACK	


PARTS IDENTIFICATION

2940-082 5X7 & 7X7 BAR MOUNT KIT

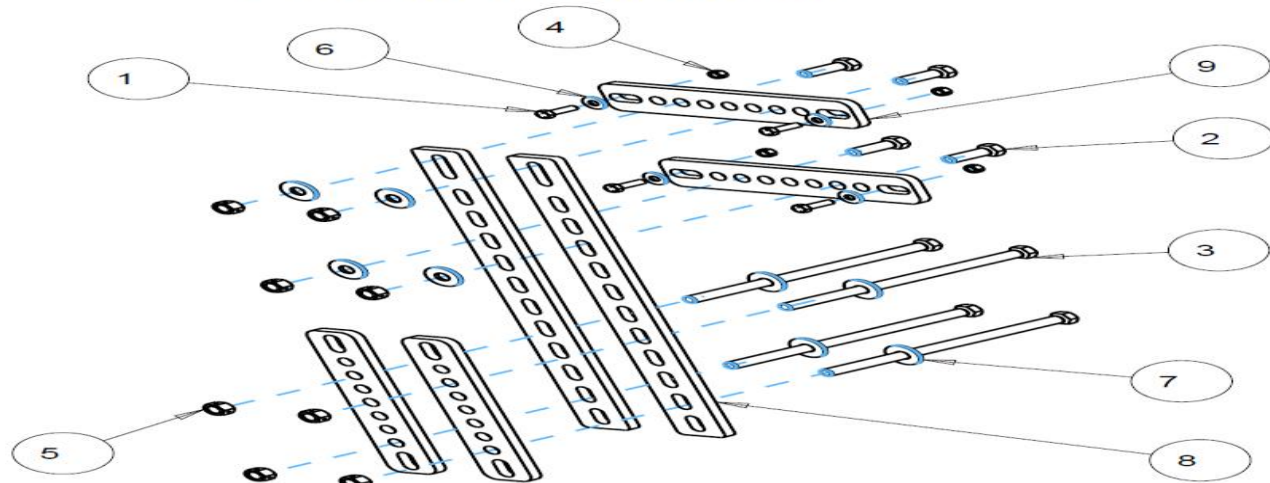


Item	Part Number	Description	Qty
1	2502-198	5/16-18 X 1 HHCS GR 5 ZP	4
2	2502-294	1/2-13 X 1-1/2 HHCS GR 5 ZP	4
3	2502-372	1/2-13 X 6 1/2 HHCS GR5 ZP	4
	2502-374	1/2-13 X 9 HHCS GR 5 ZP	4
4	2520-205	5/16-18 LOCK HEX NUT ZP	4
5	2520-357	1/2-13 LOCK HEX NUT ZP	8
6	2526-201	5/16 STANDARD FLAT WASHER ZP	4
7	2526-351	1/2 STANDARD FLAT WASHER ZP	8
8	2940-344	MOUNT STRAP (LONG)	2
9	2940-355	MOUNT STRAP (SHORT)	4

2940-083 8X16 & 8X12 BAR MOUNT KIT

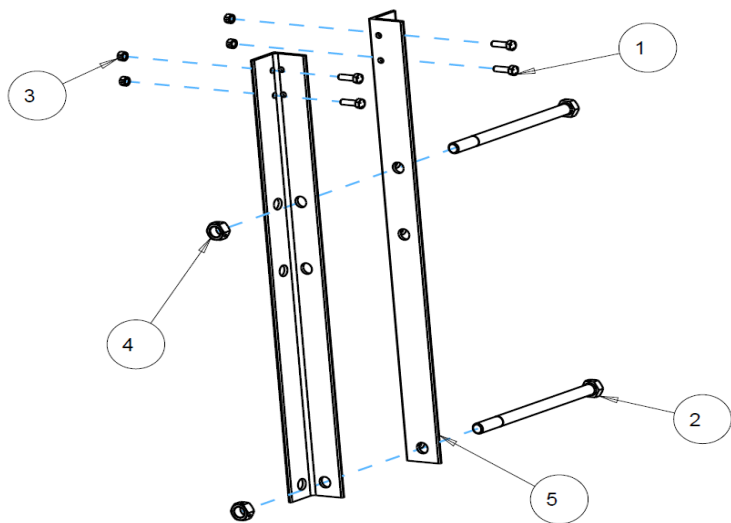

Item	Part Number	Description	Qty
1	2502-198	5/16-18 X 1 HHCS GR 5 ZP	4
2	2502-398	X 9 1/2 HHCS GR 5 ZP	2
3	2520-205	5/16-18 LOCK HEX NUT ZP	4
4	2520-459	5/8-11 LOCK HEX NUT ZP	2
5	2940-479	ANGLE MOUNT BRACKET	2


2940-084 UNIVERSAL HAND RAIL MOUNT KIT

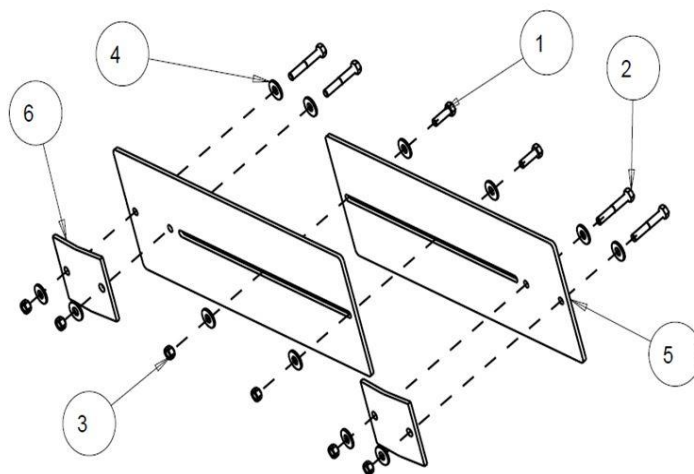

Item	Part Number	Description	Qty
1	2502-198	5/16-18 X 1 HHCS GR 5 ZP	7
2	2502-207	5/16-18 X 2 HHCS GR 5 ZP	4
	2502-212	5/16-18 X 2 1/2 HHCS GR5 ZP	4
3	2520-205	5/16-18 LOCK HEX NUT ZP	11
4	2526-201	5/16 STANDARD FLAT WASHER ZP	18
5	2940-480	HAND RAIL TELESOPING PLATE	2
6	2940-481	HAND RAIL CLAMP	2

PARTS IDENTIFICATION


2940-085 2 PT/UNIVERSAL
COMPRESSOR MOUNT KIT

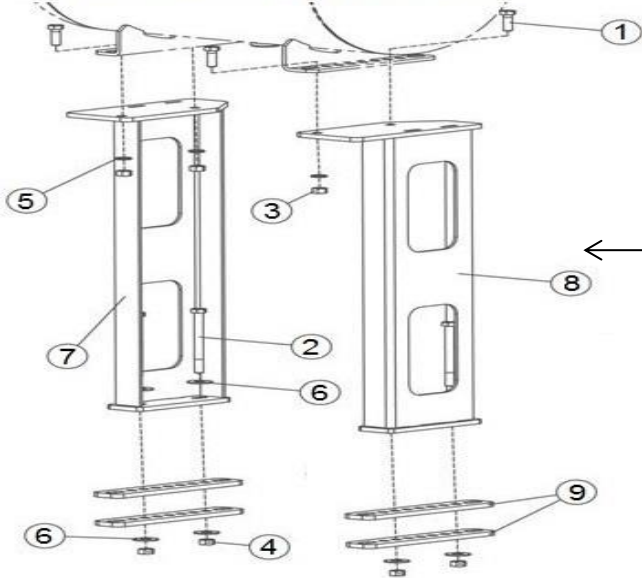


Item	Part Number	Description	Qty
1	2502-294	½-13 X 1 ½ HHCS GR 5 ZP	4
2	2502-373	½-13 X 6 HHCS GR 5 ZP	4
3	2520-352	½-13 HEX NUT ZP	4
4	2520-357	½-13 LOCK HEX NUT ZP	4
5	2525-352	½ MED LOCK WASHER ZP	4
6	2526-352	½ SAE FLAT WASHER ZP	8
7	2940-207	COMPRESSOR MOUNT W.A., LH	1
8	2940-208	COMPRESSOR MOUNT W.A., RH	1
9	2940-355	MOUNT STRAP	4

Item	Part #	Description	Qty
1	2502-294	11½-13 X 1 ½ HHCS GR 5 ZP	8
2	2502-349	11½-13 X 5 FLTHD HHCS GR 5 ZP	4
3	2520-352	½½-13 HEX NUT ZP	12
4	2525-352	½ MED LOCK WASHER ZP	12
5	2526-351	½ STANDARD FLAT WASHER ZP	24
6	2940-344	COMPRESSOR STRAP	2
7	2940-351	COMPRESSOR MOUNT BRACKET	4

2940-086 DRAFT TUBE/UNIVERSAL
COMPRESSOR MOUNT KIT

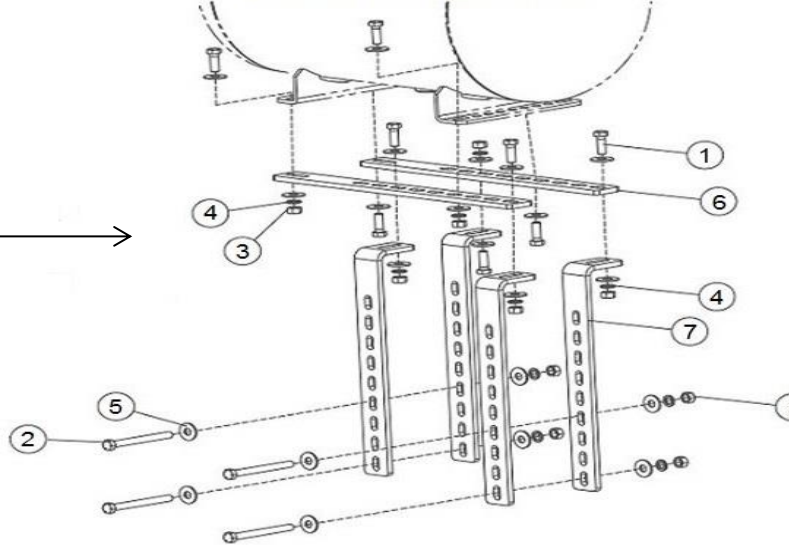


2940-090 8x12 & 2940-091 8x16 HYD COMP MOUNT KIT

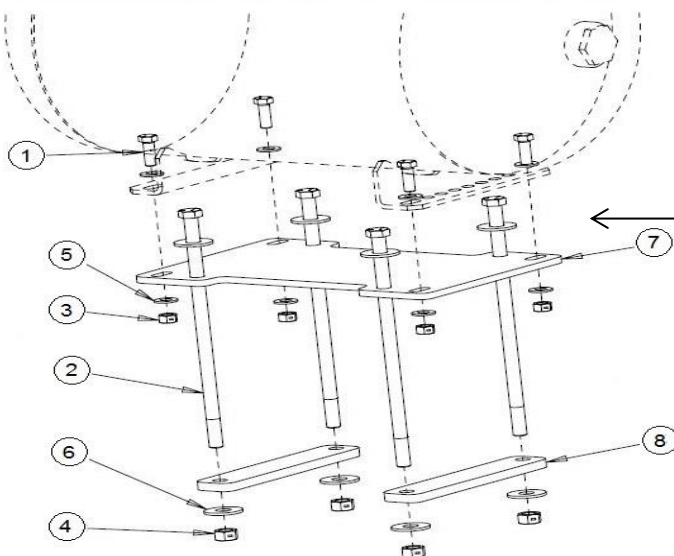


Item	Part #	Description	Qty
1	2502-294	½-13 X 1 ½ HHCS GR 5 ZP	4
2	2502-388	5/8-11 X 14 HHCS GR 5 ZP (IN THE 2940-090 KIT)	4
	2502-389	5/8-11 X 18 HHCS GR 5 ZP (IN THE 2940-091 KIT)	4
3	2520-357	½-13 HEX LOCK NUT ZP	4
4	2520-459	5/8-11 HEX LOCK NUT ZP	4
5	2526-352	½ STANDARD FLAT WASHER ZP	8
6	2526-451	5/8 STANDARD FLAT WASHER ZP	8
7	2940-372	HYDRAULIC COMPRESSOR MOUNT PLATE	1
8	2940-373	MOUNT STRAP	2

2940-103 PARTS IDENTIFICATION

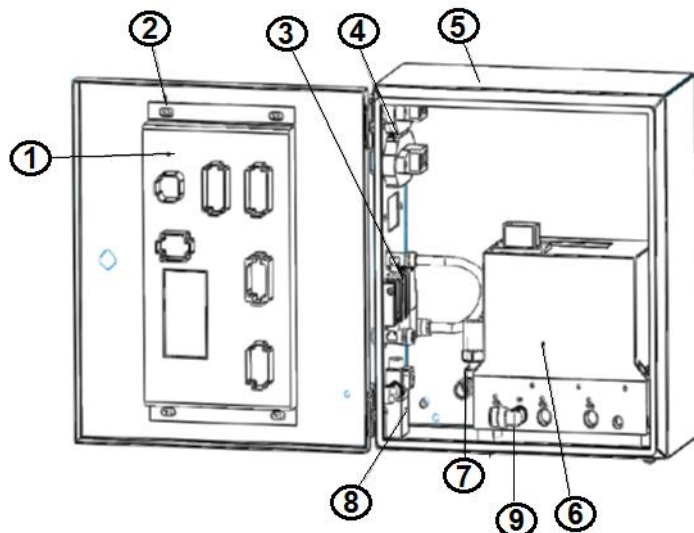


Item	Part #	Description	Qty
1	2940-112	VDM	1
2	2940-442	SPACERS	4
3	2940-135	PRESSURE ON VALVE (DISCONTINUED 10/17/17)	1
4	N/A	HARNESSING	2
5	N/A	ENCLOSURE	1
6	2940-402	PQE	1
7	2940-441	PRESSURE TRANSDUCER	1
8	2940-376	WATER SEPARATOR DUMP VALVE	1
9	2940-379	PQE INLET FITTING, 1/4NPT X 3/8PC ELBOW	1

2940-136 Dump Valve Kit

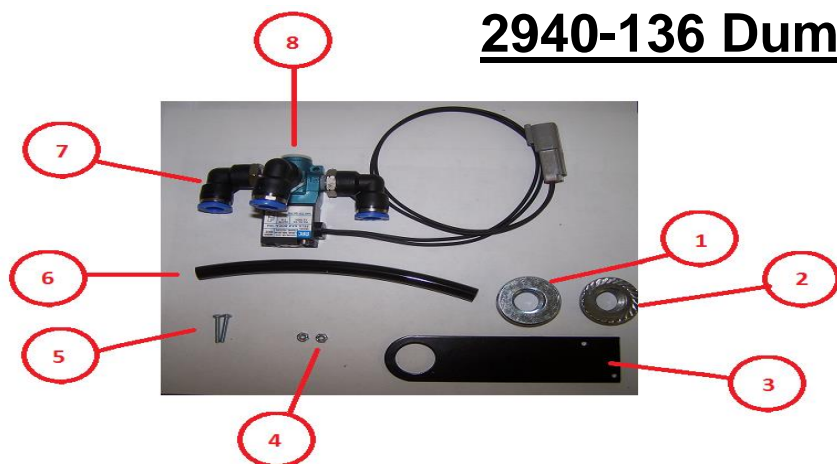

Item	Part Number	Description	Qty
1	14m7291	METRIC FLANGE HEX NUT	1
2	2520-464	5/8-11 SERRATED FLANGE NUT	1
3	2940-335	DUMP VALVE MOUNT TAB	1
4	2520-110	M5 HEX LOCK NUT	2
5	N/A	PHILIPS HEAD BOLT	2
6	2940-138	6" 3/8 DRAIN AIRLINE	1
7	2940-337	3/8 PTC ELBOW 1/8NPT	3
8	2940-336	MAC VALVE	1

2940-415 PARTS IDENTIFICATION

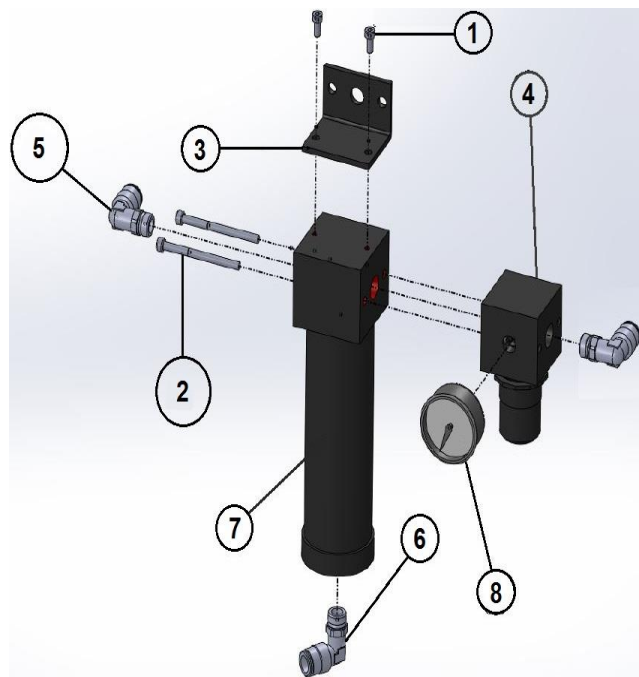


Item	Part #	Description	Qty
1	N/A	SCREW, SEPARATOR TO MOUNTING BRACKET	2
2	N/A	SCREW, WATER SEPARATOR TO REGULATOR	2
3	N/A	MOUNTING BRACKET	1
4	2940-404	REGULATOR	1
5	2940-408	3/8PTC X 1/4NPT ELBOW AIR FITTING	2
6	2940-423	1/4PTC X 1/8NPT ELBOW AIR FITTING	1
7	2940-438	WATER SEPARATOR	1
8	2940-667	0-160PSI PRESSURE GAUGE, 1/8NPT	1

Troubleshooting Guide

Problem	Cause	Corrective Action
Tank pressure drops when compressor shuts off	<ol style="list-style-type: none"> 1. check valve is leaking 2. loose pneumatic connections 3. water separator drain valve or head pressure relief valve leak 	<ol style="list-style-type: none"> 1. replace check valve 2. perform leak test & fix as needed (Page 44) 3. replace water separator drain valve or head pressure relief valve
Compressor runs continuously & air flow lower than normal	<ol style="list-style-type: none"> 1. excessive air usage 2. loose pneumatic connections 3. worn piston or inlet valve 4. clogged air filter element 5. pressure switch failure 6. defective safety valve 7. pressure On Valve leaking 	<ol style="list-style-type: none"> 1. decrease air usage 2. perform leak test & fix as needed (Page 44) 3. replace/rebuild compressor 4. replace/clean air filter element 5. replace pressure switch 6. replace safety valve 7. deactivate the system, turn all pressures to 0psi, reactivate the system
Excessive moisture in discharge	<ol style="list-style-type: none"> 1. excessive water in the air tank 2. high humidity 	<ol style="list-style-type: none"> 1. manually drain tank holding down the down arrow on the cab controller 2. move compressor to low humidity area
Compressor will not run	<ol style="list-style-type: none"> 1. no power/breaker tripped 2. system deactivated 3. motor overheats 4. pressure switch failure 5. on/off solenoid failure 6. VDM failure 7. compressor failure 	<ol style="list-style-type: none"> 1. check power connections/breaker 2. press ENTER – AIR ON displayed 3. let compressor cool, replace if needed 4. replace pressure switch 5. replace solenoid 6. replace VDM 7. replace compressor
Excessive knocking or rattling	<ol style="list-style-type: none"> 1. loose mounting bolts 2. worn bearing 3. cylinder or piston is worn 	<ol style="list-style-type: none"> 1. tighten bolts 2. replace compressor 3. rebuild compressor
No air output from the RU, RD, and WT ports even though pressure is commanded and tank pressure reads 60psi or greater	<ol style="list-style-type: none"> 1. no power/40A breaker tripped 2. system deactivated 3. J3 connector on VDM plugged in upside down 4. improperly functioning PQE 5. communication harness connection issue 	<ol style="list-style-type: none"> 1. check power connections/breaker 2. press ENTER – AIR ON displayed 3. unplug J3 connector, check tab/slot sizes, reinstall J3 connector properly 4. replace PQE 5. check all communication harness connections, be sure all internal pins seated
No ECU/VDM present displays on Cab Controller	<ol style="list-style-type: none"> 1. improper communication harness connection between Cab Controller and VDM 2. VDM failure 	<ol style="list-style-type: none"> 1. start at the 6 pin connector on the back of the Cab Controller and inspect all connectors and connections to the VDM 2. Replace VDM
The 2940-162 Dump Valve Harness is not labeled on the 4) 2 pin pigtails	labels missing on the 2 pin cables on the harness	label as follows: RM UP DUMP → Yellow/Black RM DOWN DUMP → Orange/Black AUX 3 → White/Black AUX 4 → Purple/Black
No tank pressure reading on cab controller	pressure transducer failure	<ol style="list-style-type: none"> 1. replace pressure transducer 2. check pressure transducer connections
Low or sporadic tank pressure reading Air leaking out regulator knob	water separator/regulator assembly plumbed incorrectly	plumb water separator/regulator correctly (air compressor→water separator→exit regulator side→enter control box inlet port)

OPTION

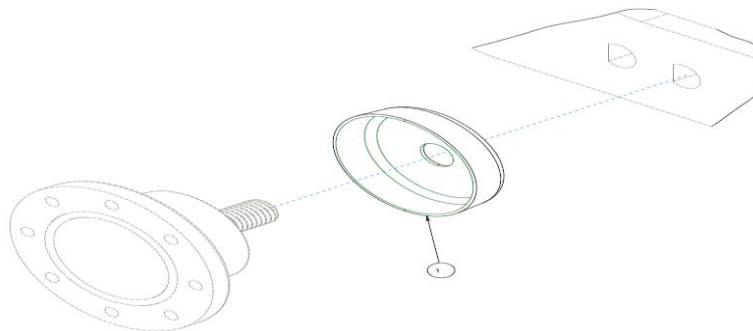

ITEM	PART NO.	DESCRIPTION	QTY.
1	2965-550	BEARING SHIELD	1



A Tradition of Solutions since 1930

Yetter Farm Equipment Co

PO BOX 358 109 S. McDonough

Colchester, IL 62326-0358

Phone: 309-776-4111

Toll Free: 800-447-5777

Email: info@yetterco.com

For updated models and manuals visit the Yetter website:

www.yetterco.com

© Yetter Farm Equipment Co. All Rights Reserved

2565-773_REV_J • 11/2024