

JD 1770 & 1775 FRONT FOLD PLANTER (12 Row to 24 Row)
JD 7200 FLEX FOLD PLANTER (8 Row Wide to 24 Row Narrow)
JD 7200 RIGID FOLD PLANTER (12 Row Narrow)

Model No.'s to Order for each planter configuration		Quantity to order for each planter			
		8 R W	12 R N	16 R N	24 R N
LIQUID FERT. COULTER FRAME MOUNTED	2995-065-L/R (7" x 7") ^ order 2990-158 & 3010-303 and choice of blade.	4	6		
	2995-065-L/R (3" x 7") ^ order 2990-161 & 3010-303 and choice of blade	4	6		
	2995-065-L/R order 2990-154 & 2990-310 and choice of blade			8 and 8	N.A.
DRY FERT. COULTER FRAME MOUNTED	2995-075-L/R (7" x 7") ^ order 2990-158 & 3010-303 and choice of blade	4	6	N.A.	N.A.
	2995-075-L/R (2.5" sq) ^ order 2990-154 & 2990-318 and choice of blade.	4	6	N.A.	N.A.
	2990-167 (front fold kit 12 row) Required	N.A.	1	N.A.	N.A.
Unit Mounted Liquid Fertilizer Coulters	2959-003 (2" offset fert. injection)				
	w/ 2967-180B (Residue Manager for 2959-003) Optional or 2962-003A and 2962-004A RUMDDFO				
	w/ 2962-005B (Residue Manager for 2962-003A/-00 Optional or 2968-020B-R-LB/-L-LB Row Unit mount fits 1700, 7200 & 7300 & 2968-132 10" wheel assembly	8	12	16	24
2960 UNIT MOUNTED CONSERVATION COULTERS ONLY	2960-034 Coulters w/ U.N.T. bracket**				
	or 2960-127 (coulters only)** Choice of blade	8	12	16	24
	2960-126 (spring kit only) Optional				
CLEAN UP CREW ONLY	2940-001B Pneumatic assembly				
	or 2967-013B Short Narrow U.N.T.				
	or 2967-028A Universal unit mounted residue manager or 2967-029B Short U.N.T. or 2967-052A Screw Adjust or 2967-057A Screw Adjust (Long arm) or 2967-081A (R.M. attachment for JD tool hanger)	8	12	16	24
Combo Attachment	2967-007A U.N.T. Residue Manager kit				
	or 2967-035A Titan Universal				
	or 2967-042B Titan Residue Manager for JD Coulters or 2967-115A (for use with 2960-015 coulters)	8	12	16	24
	or 2967-070 (Quick adjust) Optional				

** See the price book for blade choices.

JD 1770 & 1775 FRONT FOLD PLANTER (12 Row to 24 Row)
JD 7200 FLEX FOLD PLANTER (8 Row Wide - 24 Row Narrow)
JD 7200 RIGID FOLD PLANTER (12 Row Narrow)

Combination of Coulters		Quantity to order for each planter				
		8 R W	12 R N	16 R N	24 R N	
<i>Model No.'s to Order for each planter configuration</i>						
1 JD LIQUID FERTILIZER AND COMBO UNIT ONLY	2960-034 Coulters w/ U.N.T. bracket** or 2960-127 (coulters only)**	See below	8	12	16	24
	2967-007A U.N.T. Residue Manager kit or 2967-035A Titan Universal or 2967-042B Titan Residue Manager for JD Coulters or 2967-115A (for use with 2960-127)**** 2967-070 (Quick adjust)		8	12	16	24
	2975-189 (set back)	Required	8	12	16	24

** See the price book for blade choices.

**** The Clean Up Crew and Unit Mounted Coulters cannot be used together, with the exception of the 2967-115A, if using the 2967-115A combination in conjunction with Frame Mounted Fertilizer Coulters, Fertilizer Coulters can only be mounted 4" or farther from the row.

**JOHN DEERE 1770 FRONT FOLD PLANTER
12 Row 30"
JOHN DEERE 7200 Flex and Rigid Fold Planter
8 and 12 Row**

Equipped with: 2990-167 (mounting kit)
2995-065-L/R Liquid Fert. Coulter
2990-154 clamp kit
2990-208 3" shank

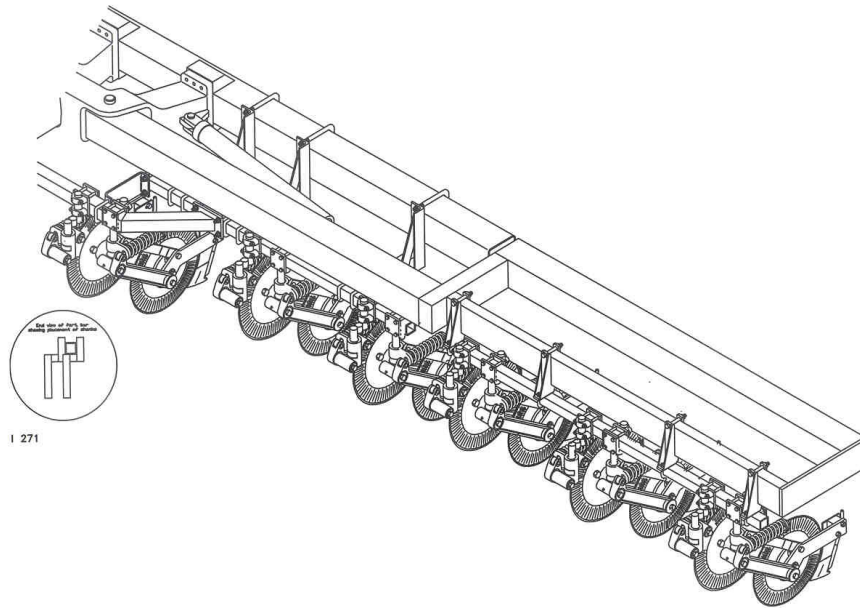


Illustration may not accurately depict row spacing.

Note - The two coulters for each row require 3" offset shanks and must be mounted a minimum distance of 2" - 3" from either side of the row. One shank mounts on the front of the bar and one mounts on the back of the bar with both being offset toward the front.

Note - This kit may be replaced by welding a short piece of 2 1/2" sq. tubing under the tongue, however Yetter Mfg. Co. is not responsible for any damage caused to the planter as a result of doing so.

Note - For double coulters with other coulters combinations, the same configuration shown would apply.