


CASE/IH 800-900/950-955

Trailing Cyclo Planter

8 and 12 Row

Equipped with: Endwise Transport
2970-179 (front bar mount kit)
2995-065-L/R Liquid fert. coulters
2990-154 Clamp kit 2 ½ square bar
3010-303 22" Straight shank
3011-302 (5" offset shank)
2920-305 (swivel collar)

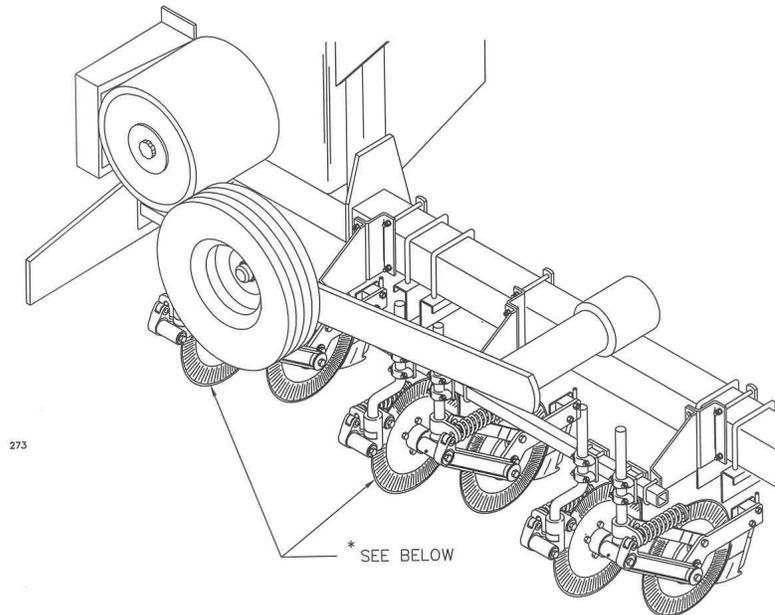

***Note** - Before transporting, two of the coulters must be pivoted to clear the endwise transport wheel

Note - For each row, one coulters requires a straight shank and one requires a 5" offset shank. Both coulters must be mounted a minimum distance of 2"-3" from either side of the row. Each shank mounts on the front of the fert. frame with the 5" offset towards the front.

Note - For double coulters with other coulters combinations, the same configuration shown would apply.